




AIRD X 3000

Feel Alive.

Please quote by part number, not key number when ordering.

spares@daiwaaustralia.com.au

PH: (02) 8644 8644

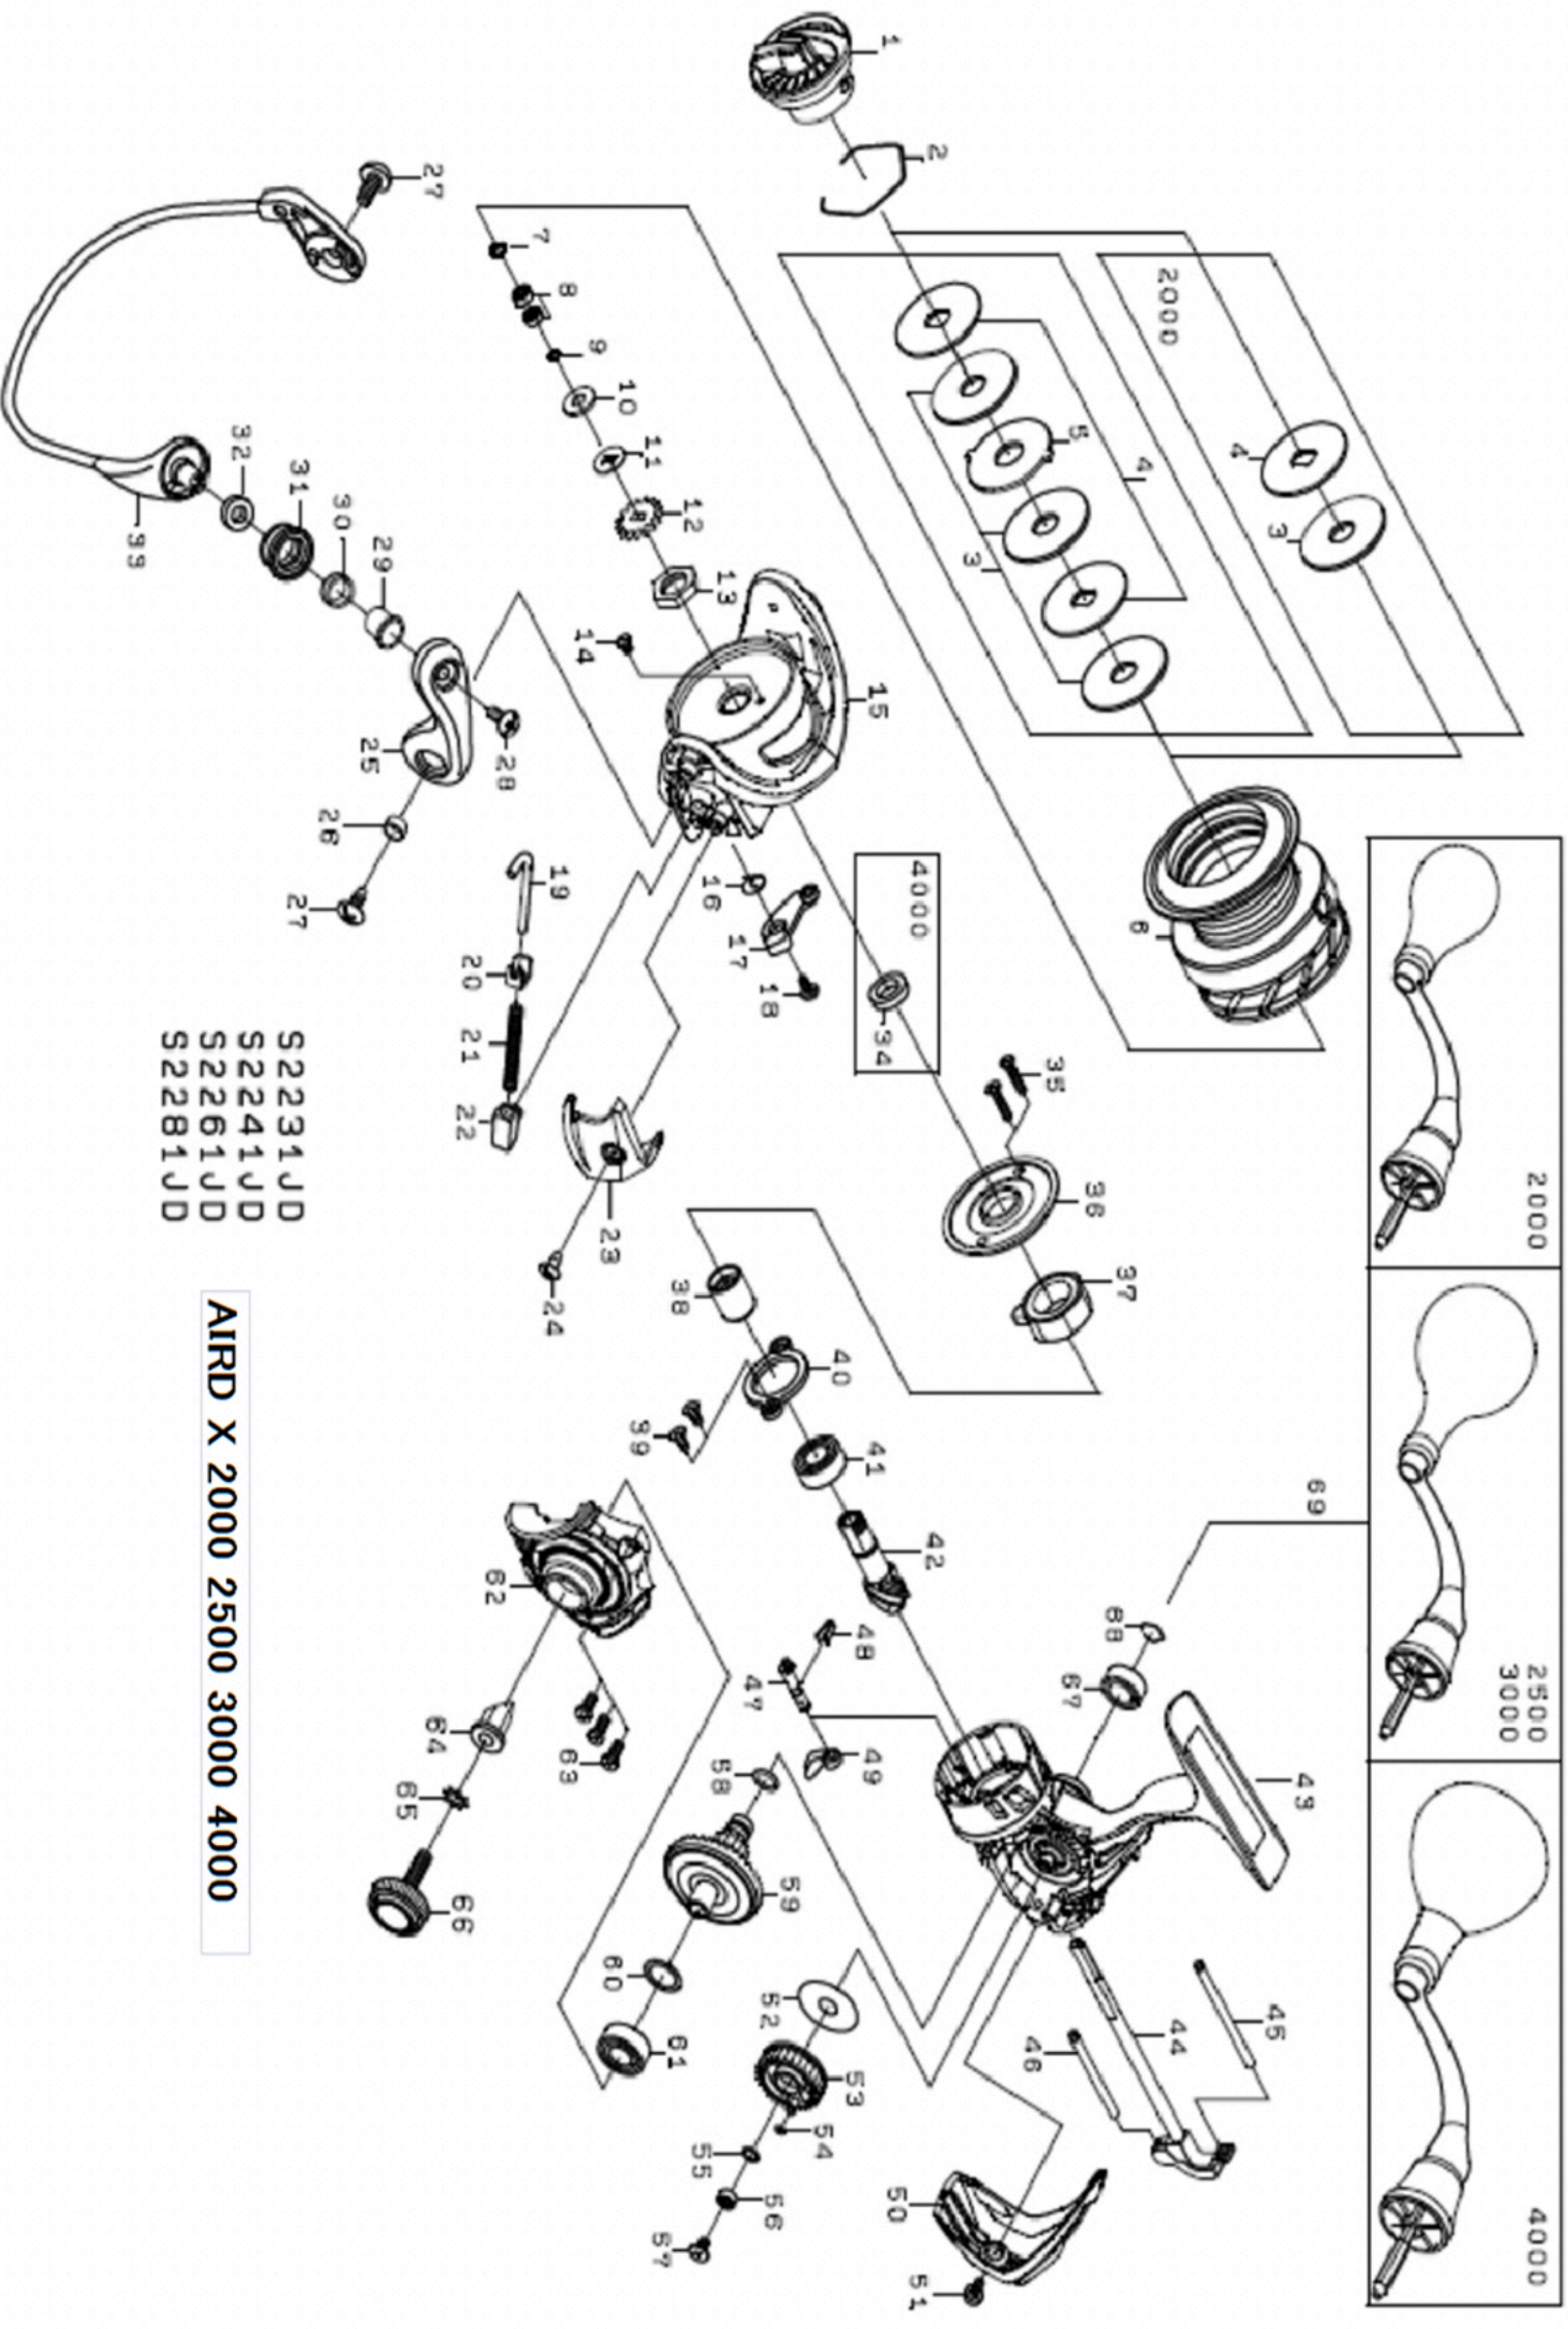

- S22231JD
- S22241JD
- S22261JD
- S22281JD

AIRD X 2000 2500 3000 4000

REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
AIRD X 3000	S2261JD	1	6Q182201	Drag Knob
AIRD X 3000	S2261JD	2	6F373301	Drag Washer Retainer
AIRD X 3000	S2261JD	3	6E136001	Drag Washer
AIRD X 3000	S2261JD	4	6E467201	Key Washer
AIRD X 3000	S2261JD	5	63733606	Eared Washer
AIRD X 3000	S2261JD	2~6	6Q282501	Spool Assembly
AIRD X 3000	S2261JD	7	6G213001	"O"-Ring (A)
AIRD X 3000	S2261JD	8	6G469005	Ball Bearing (A)
AIRD X 3000	S2261JD	9	6B411706	Washer (A)
AIRD X 3000	S2261JD	10	6E398000	Washer (B)
AIRD X 3000	S2261JD	11	6E467101	Washer (C)
AIRD X 3000	S2261JD	12	6G839301	Click Gear
AIRD X 3000	S2261JD	13	6Q122401	Rotor Nut
AIRD X 3000	S2261JD	14	6H022701	Screw (A)
AIRD X 3000	S2261JD	15	6Q129204	Rotor
AIRD X 3000	S2261JD	16	6H413601	Bail Trip Lever Spring
AIRD X 3000	S2261JD	17	6Q129301	Bail Trip Lever
AIRD X 3000	S2261JD	18	6H417701	Screw (B)
AIRD X 3000	S2261JD	19	6Q129501	Bail Spring Shaft
AIRD X 3000	S2261JD	20	6H576101	Retainer
AIRD X 3000	S2261JD	21	6H414201	Bail Spring
AIRD X 3000	S2261JD	22	6Q121501	Bail Spring Holder
AIRD X 3000	S2261JD	23	6Q129602	Cover (A)
AIRD X 3000	S2261JD	24	6G270801	Screw (C)
AIRD X 3000	S2261JD	25	6Q121604	Bail Arm
AIRD X 3000	S2261JD	26	6Q121701	Collar (A)
AIRD X 3000	S2261JD	27	6G205001	Screw (D)
AIRD X 3000	S2261JD	28	6G195602	Screw (E)
AIRD X 3000	S2261JD	29	6G195501	Collar (B)
AIRD X 3000	S2261JD	30	6G220701	Collar (C)
AIRD X 3000	S2261JD	31	6J089902	Line Roller
AIRD X 3000	S2261JD	32	6Q203401	Collar (D)
AIRD X 3000	S2261JD	33	6Q282401	Bail Assembly
AIRD X 3000	S2261JD	34	----	Collar (E)
AIRD X 3000	S2261JD	35	6G837101	Screw (F)
AIRD X 3000	S2261JD	36	6Q129001	Cap
AIRD X 3000	S2261JD	37	6H992901	Roller Clutch
AIRD X 3000	S2261JD	38	6J001401	Spacing Sleeve
AIRD X 3000	S2261JD	39	6Q126201	Screw (G)
AIRD X 3000	S2261JD	40	6H411501	Bearing Retainer (A)
AIRD X 3000	S2261JD	41	6G535104	Ball Bearing (B)
AIRD X 3000	S2261JD	42	6Q201301	Pinion Gear
AIRD X 3000	S2261JD	43	6Q282201	Body
AIRD X 3000	S2261JD	44	6Q168601	Main Shaft
AIRD X 3000	S2261JD	45	6Q126302	Stabilizer Bar (A)
AIRD X 3000	S2261JD	46	6Q119102	Stabilizer Bar (B)
AIRD X 3000	S2261JD	47	6Q118101	Anti-Reverse Cam
AIRD X 3000	S2261JD	48	6H697801	Anti-Reverse Cam Spring
AIRD X 3000	S2261JD	49	6Q118001	Anti-Reverse Lever
AIRD X 3000	S2261JD	50	6Q129102	Rear Cover
AIRD X 3000	S2261JD	51	6G270801	Screw (H)
AIRD X 3000	S2261JD	52	6H595701	Washer (D)
AIRD X 3000	S2261JD	53	6Q128201	Oscillate Gear
AIRD X 3000	S2261JD	54	6G466001	"O"-Ring (B)
AIRD X 3000	S2261JD	55	6H129200	Washer (E)
AIRD X 3000	S2261JD	56	6G469005	Ball Bearing (C)
AIRD X 3000	S2261JD	57	6Q126101	Screw (I)
AIRD X 3000	S2261JD	58	6G670501	"O"-Ring (C)
AIRD X 3000	S2261JD	59	6Q167201	Drive Gear
AIRD X 3000	S2261JD	60	63758500	Washer (F)
AIRD X 3000	S2261JD	61	6G467302	Ball Bearing (D)
AIRD X 3000	S2261JD	62	6Q282301	Side Cover
AIRD X 3000	S2261JD	63	6G115001	Screw (J)
AIRD X 3000	S2261JD	64	6F721001	Collar (F)
AIRD X 3000	S2261JD	65	61608401	Washer (G)
AIRD X 3000	S2261JD	66	6Q132402	Handle Screw
AIRD X 3000	S2261JD	67	6G522702	Ball Bearing (E)
AIRD X 3000	S2261JD	68	6G472401	Bearing Retainer (B)
AIRD X 3000	S2261JD	69	6Q281101	Handle Assembly
AIRD X 3000	S2261JD	200	6H088709	Handle Knob As
AIRD X 3000	S2261JD	201	6G469005	Ball Bearing
AIRD X 3000	S2261JD	202	6B411700	Washer
AIRD X 3000	S2261JD	203	6B679308	Truss Head Screw
AIRD X 3000	S2261JD	204	6Q281301	Screw As