


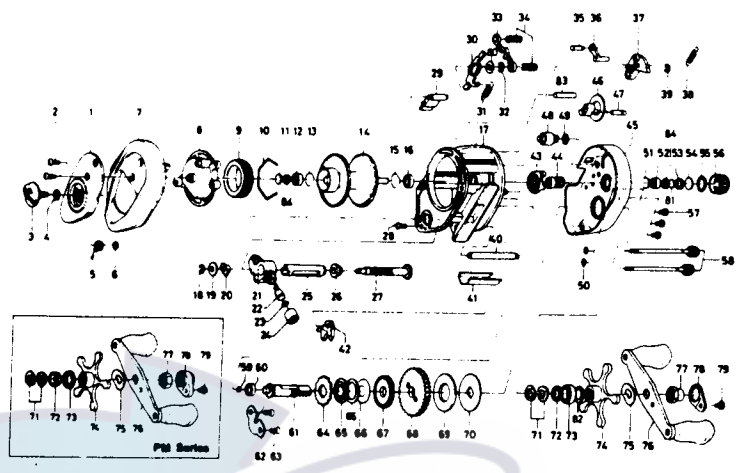

# BAITCASTING REEL

## PT33C/33P/33SH, PR33C/33P/33SH, PM33C/33P/33SH



PM33C Parts			Key No. Parts No. Parts Name			PT33C Special Parts		
1	E20 0727	Left set plate A	1	E20 0714	Left set plate A	7	E20-0725	Left set plate A
2	353 4402	Left set plate screw	44	E19 7901	Pinion gear	7	E20-0401	Left side plate
3	B98 5001	Brake adjusting knob	45	E32 6102	Right side plate	12/16	B35-8601	Ball bearing A
4	637 0601	"O" ring A	51	E21 9701	Bearing retainer C	17	E30-7502	Frame assembly
5	B54 1701	Brake adjusting gear	53	E23 0501	Bearing retainer C	41	E20-3501	Line guard
6	320 4202	Brake adjusting gear retainer	68	E20 0101	Drive gear	45	E39-0101	Right side plate
7	E20 0402	Left side plate	76	B85 5101	Handle assembly	46	E19-7301	Flipping/casting selector
8	E20 0501	Left set plate B				48	E19-5401	Line memo dial
9	B66 1202	Magnet holder				49	637-0601	"O" ring C
10	B54 3201	Magnet holder ret. ring				52	E08-8001	Ball bearing B
11	375 7405	Spacer A				60	B35-8601	Ball bearing A
12	B55 0301	Bushing A				72	E38-9801	Spacing sleeve
13	B42 1601	Bearing retainer A				73	E15-4001	Ball bearing C
14	E23 6201	Spool assembly				77	B86-2402	Handle nut
15	B42 1601	Bearing retainer B				78	040-3201	Handle nut plate
16	E20 9001	Bushing B				79	353-8302	Handle nut plate screw
17	E30-7501	Frame assembly				82	B68-4402	Sealing washer
18	320 5901	Worm shaft retainer						
19	376 1801	Worm shaft holder washer						
20	B71 5601	Worm bearing A						
21	E20 8401	Line guide						
22	121 4212	Line guide pawl						
23	373 1300	Line guide washer						
24	342 4802	Pawl cap						
25	B99 1801	Level wind guard						
26	E19 8501	Worm bearing B						
27	E19 9601	Worm shaft						
28	353 4401	Stabilizer bar screw						
29	E20 3701	Set plate spacer						
30	E19 7601	Clutch trip plate						
31	E19 7701	Clutch trip plate spring						
32	320 1402	Clutch trip plate retainer						
33	E30 4301	Yoke						
34	E23 6401	Yoke spring						
35	E19 7201	Clutch trip plate arm pin						
36	E19 7101	Clutch trip plate arm						
37	E19 7001	Clutch cam						
38	E19 7501	Clutch cam spring						
39	B33 9801	Clutch cam retainer						
40	E19 9801	Stabilizer bar A						
41	E20 3502	Line guard						
42	E19 8101	Anti-reverse pawl						
43	E19 6901	Yoke plate						
44	F02 4401	Pinion gear						
45	E39-0102	Right side plate						
46	E19 7302	Flipping/casting selector						
47	E19 7401	Flipping/casting selector pin						
50	B85 3101	Right side plate screw retainer						
51	F03 2201	Bearing retainer C						
52	E28 0201	Bushing C						
53	F02 4001	Spacer B						
54	B17 5501	"O" ring B						
55	171 5201	Cast control cap						
56	B85 3401	Set plate screw						
57	353 4402	Right side plate screw						
58	B91 1701	Drive shaft washer						
59	B12 0201	Bushing D						
60	B55 0301	Drive shaft A						
61	E30 4601	Drive shaft retainer						
62	E19 9401	Drive shaft retainer screw						
63	B39 5503	Anti-reverse ratchet						
64	E19 9901	Drive shaft washer						
65	E30 4701	Drag washer A						
66	B96 7401	Worm drive gear						
67	E30 4801	Drive gear						
68	F02 4601	Drag washer B						
69	375 9405	Key washer						
70	E20 0201	Drag spring washer						
71	150 8901	Spacing sleeve						
72	E32 6301	Bushing E						
73	E32 6401	Star drag						
74	B86 4205	Friction washer						
75	150 9001	Handle assembly						
76	E39 0401	Handle nut						
77	B86 2101	Handle nut plate						
78	B86 2301	Handle nut plate screw						
79	351 1803	Clutch trip plate washer						
80	371 6903	Spool adjusting cap metal						
81	374 9102	Stabilizer bar B						
83	E19 6801	Oiled washer						
84	E25 6101	Drag washer C						
85	E30 6101							