

BAITCASTING REEL TD1Hi/2Hi PR1Hi/2Hi

TD2Hi Special Parts

13	6-F05-0301	Spool assembly
16	6-F07-4801	Frame assembly
17	6-F02-7909	Palming plate
19	6-F02-7301	Stabilizer bar retainer
23	6-F02-7601	Stabilizer bar C
28	6-F02-7501	Level wind guard
29	6-E28-4601	Worm shaft
43	6-F09-6603	Right side plate
56	6-B91-1715	Right side plate screw A
57	6-B91-1712	Right side plate screw B
83	6-E42-6001	Stabilizer bar D

PR1Hi Special Parts

3	6-F02-9204	Left side plate
11	6-855-0301	Bushing A
13	6-F04-9201	Spool assembly
15	6-E35-1501	Bushing B
16	6-F07-4702	Frame assembly
17	6-E39-3410	Palming plate
43	6-F09-6602	Right side plate
48	6-E28-0201	Bushing C
73	6-373-7810	Spacer D
77	6-E41-4201	Handle assembly

Bobine complète
Bâti
Plaque de carenage
Clips d'entretoise
Entretoise C
Protecteur de vis double filet
Vis double filet
Flasque droit
Vis de flasque droit A
Vis de flasque droit B
Entretoise D

Flasque gauche
Palier A
Bobine complète
Palier B
Bâti
Plaque de carenage
Flasque droit
Palier C
Rondelle D
Manivelle

PR2Hi Special Parts

3	6-F02-9204	Left side plate
11	6-855-0301	Bushing A
13	6-F04-9301	Spool assembly
15	6-E35-1501	Bushing B
16	6-F07-4801	Frame assembly
17	6-F02-7910	Palming plate
19	6-F02-7301	Stabilizer bar A
23	6-F02-7601	Stabilizer bar C
28	6-F02-7501	Level wind guard
29	6-E28-4601	Worm shaft
43	6-F09-6604	Right side plate
48	6-E28-0201	Bushing C
56	6-B91-1715	Right side plate screw A
57	6-B91-1712	Right side plate screw B
73	6-373-7810	Spacer D
77	6-E41-4201	Handle assembly
83	6-E42-6001	Stabilizer bar D

Flasque gauche
Palier A
Bobine complète
Palier B
Bâti
Plaque de carenage
Entretoise A
Entretoise C
Protecteur de vis double filet
Vis double filet
Flasque droit
Palier C
Vis de flasque droit A
Vis de flasque droit B
Rondelle D
Manivelle
Entretoise D

Key No.

Parts No.

1	6-F02-9605
2	6-F05-1701
3	6-F02-9201
4	6-F02-9801
5	6-E15-7502
6	6-F02-9401
7	6-E15-7502
8	6-866-1201
9	6-854-3201
10	6-375-7405
11	6-B35-8601
12	6-E2-1601
13	6-F05-0201
14	6-E2-1601
15	6-B35-8601
16	6-F07-4701
17	6-E39-3409
18	6-886-4101
19	6-E39-2001
20	6-E39-1901
21	6-F02-6701
22	6-E19-6801
23	6-F02-9001
24	6-E39-3301
25	6-121-4212
26	6-375-4100
27	6-342-4801
28	6-F03-6001
29	6-E24-7101
30	6-F02-7101
31	6-E43-0001
32	6-371-6903
33	6-320-1402
34	6-E30-4301
35	6-E23-6401
36	6-E19-7201
37	6-E19-7101
38	6-F02-6601
39	6-B33-9801
40	6-F05-3101
41	6-E44-3801
42	6-E24-9201
43	6-F09-6601
44	6-885-3101
45	6-885-3101
46	6-E16-9502
47	6-E21-9701
48	6-E08-8001
49	6-E25-6101
50	6-374-9102
51	6-E23-0501
52	6-317-5502
53	6-171-5201
54	6-885-3401
55	6-353-4402
56	6-B91-1714
57	6-B91-1710
58	6-B12-0201
59	6-B35-8601
60	6-F02-7401
61	6-E19-9401
62	6-B39-6503
63	6-E32-7701
64	6-E42-5301
65	6-F02-7701
66	6-F02-7801
67	6-F06-2501
68	6-150-8901
69	6-F02-8001
70	6-855-3801
71	6-E42-1401
72	6-E42-5401
73	6-F02-8201
74	6-F03-2401
75	6-F02-8301
76	6-150-9001
77	6-E41-4101
78	6-341-5802
79	6-F02-8801
80	6-351-1803
81	6-F05-5501
82	6-B99-2001
83	6-E42-5901

Parts Name

Brake adjusting knob
Brake click spring
Left side plate
Brake adjusting knob collar
Brake adjusting knob screw
Left set plate
Left set plate screw
Magnet holder
Magnet holder ret. ring
Spacer A
Ball bearing A
Bearing retainer A
Spool assembly
Bearing retainer A
Ball bearing A
Frame assembly
Palming plate
Stabilizer bar retainer
Stabilizer bar A
Flipping/casting selector pin
Flipping/casting selector
Stabilizer bar B
Stabilizer bar C
Line guide
Line guide pawl
Line guide washer
Pawl cap
Level wind guard
Worm shaft
Clutch trip plate
Clutch trip plate spring
Clutch trip plate washer
Clutch trip plate retainer
Yoke
Yoke spring
Clutch trip plate arm pin
Clutch trip plate arm
Clutch cam
Clutch cam retainer
Clutch cam spring
Yoke plate
Pinion gear
Right side plate
"O" ring A
"O" ring A
Line holder
Bearing retainer B
Ball bearing B
Oiled washer A
Spool adjusting cap metal
Spacer B
Spacer C
"O" ring B
Cast control cap
Set plate screw
Right side plate screw A
Right side plate screw B
Drive shaft washer A
Ball bearing A
Drive shaft
Drive shaft retainer
Drive shaft retainer screw
Anti-reverse ratchet
Drive shaft washer B
Drive gear
Drag washer
Key washer
Drag spring washer
Gear shaft collar
Oiled washer B
Roller clutch
Spacing sleeve
Click leaf spring holder
Click leaf spring
Star drag
Friction washer
Handle assembly
Handle nut
Handle nut plate
Handle nut plate screw
Ball bearing C
Worm shaft gear
Stabilizer bar D