




BAITCASTING REEL

# COASTAL-TWS200HS

Please order by parts number, not key number  
Veuillez indiquer le numéro de la pièce (Non "Key" No.)

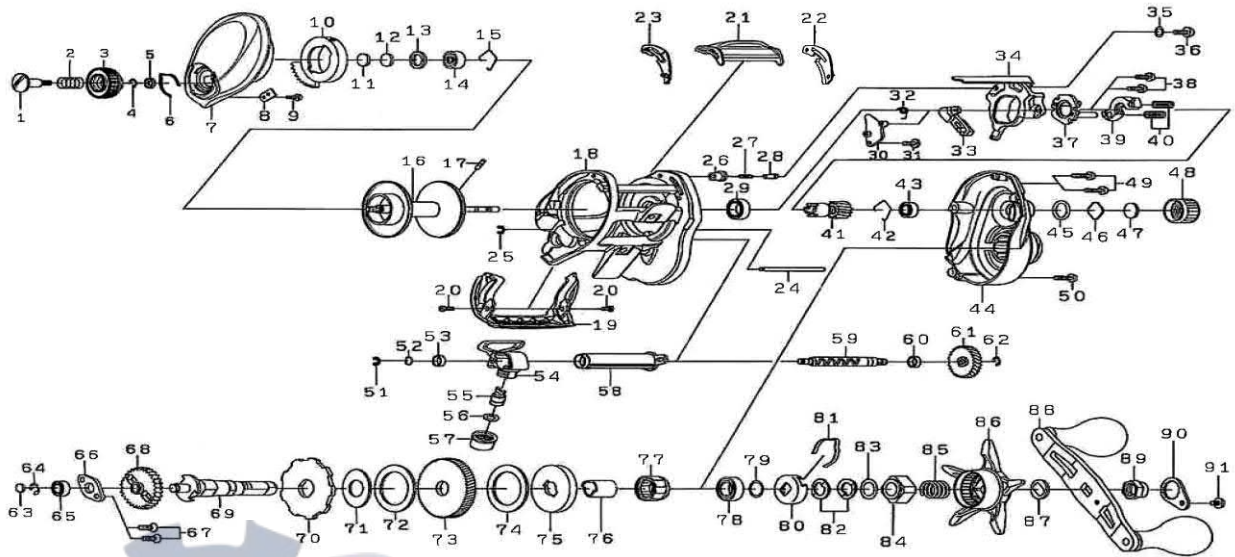

KEY NO.	PART NO.	PART NAME	KEY NO.	PART NO.	PART NAME
1	H93-0401	SET PLT SCREW	47	B17-5503	SPACER
2	E16-7101	SPRING (A)	48	J00-4701	CAST CONTROL CAP
3	H93-0227	BRAKE ADJ KNOB	49	G04-0814	R/S PLT SCREW
4	B33-9801	BRAKE DIAL RET (A)	50	G04-0825	R/S PLT SCREW
5	F63-7701	BRAKE DIAL WASHER	51	320-5901	RET (B)
6	H66-3401	BRAKE DIAL CLICK SPRING	52	B41-1700	WASHER
7	H93-0110	L/S PLT	53	G72-0001	WORM SHAFT SPACER (A)
8	H91-5501	BRAKE DIAL RET (B)	54	J17-6601	T-LEVEL WIND
9	G93-9301	SCREW (B)	55	121-4212	LINE GUIDE PALW
10	H93-0501	MAGNET HOLDER	56	373-1300	WASHER
11	375-7400	SPACER (A)	57	F40-2801	PAWL CAP
12	375-7411	SPACER (B)	58	H91-0801	LEVEL WIND GUARD
13	G18-5101	SPACER ©	59	H91-1701	WORM SHAFT
14	G51-1507	BALL BEARING (A)	60	G72-0001	WORM SHAFT SPACER
15	F03-2201	BEARING RET	61	H91-0501	WORM GEAR
16-24	J10-7203	SPOOL ASSEMBLY	62	B33-9801	RET ©
18	H91-0216	FRAME	63	G09-9800	WASHER
19	H93-0002	FRONT PLT	64	320-8002	RET (D)
20	H45-5402	SCREW ©	65	G53-8007	BALL BEARING (D)
21	H91-2401	CLUTCH LEVER	66	H92-8901	PLATE (B)
22	H91-5601	CLUTCH LEVER PLT	67	E13-4509	SCREW
23	H91-5701	CLUTCH LEVER PLT	68	H91-2701	DRIVE SHAFT GEAR
24	H91-2101	STABILIZER BAR	69	H91-1801	DRIVE SHAFT
25	H70-4101	RET (A)	70	H92-9401	A/R RATCHET
26	H91-0601	COLLAR	71	H66-1101	DRIVE SHAFT WASHER (A)
27	H92-8801	SPRING (B)	72	H66-1001	DRIVE SHAFT WASHER (B)
28	J05-5201	PIN	73	J07-5402	DRIVE GEAR
29	G43-1002	BALL BEARING (B)	74	H45-2501	DRAG WASHER
30	H91-2301	PLATE (A)	75	H91-3201	KEY WASHER
31	H29-4101	SCREW (D)	76	G54-5001	GEAR SHAFT COLLAR
32	H45-0001	CLUTCH CAM SPRING	77	G81-9801	ROLLET CLUTCH
33	J22-1401	CLUTCH TRIP LEVER	78	G43-1002	BALL BEARING
34	H92-8701	CLUTCH CAM	79	B55-3801	WASHER
35	H15-8201	WASHER	80	F02-8203	CLICK LEAF SPRING HOLDER
36	352-2501	SCREW	81	F03-2401	CLICK LEAF SPRING
37	H65-9101	CLUTCH CAM PLT	82	150-8901	SPRING WASHER
38	B03-2904	SCREW	83	H92-9501	WASHER (F)
39	H92-9001	YOKE	84	H91-2001	NUT
40	J05-5301	YOKE SPRING	85	J01-1901	SPRING ©
41	J09-1901	PINION GEAR	86	H91-1901	STAR DRAG
42	H18-0501	BEARING RET	87	F57-8601	HANDLE COLLAR
43	G43-1105	BALL BEARING	88	J25-4001	HANDLE ASSEMBLY
44	H91-0325	R/S PLT	89	G79-3301	HANDLE NUT
45	171-5201	"O" RING	90	H83-4510	HANDLE NUT PLT
46	B17-5406	SPACER (F)	91	353-8301	HANDLE SCREW