


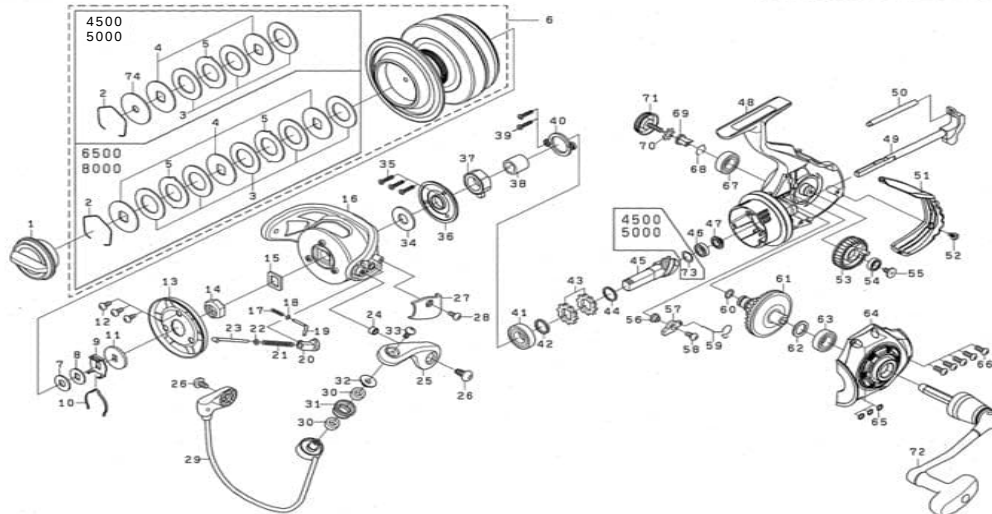

SPINNING REEL

ELIMINATOR4500_5000_6500_8000

*Please order by parts number, not key number.



ELIM INATOR4500D			ELIM INATOR5000			ELIM INATOR6500			ELIMINATOR8000		
Key No	Part No	Description	Part No	Description	Part No	Part No	Description	Part No	Part No	Description	
1	J31-2102	DRAG KNOB	J31-2102	DRAG KNOB	J31-2102	J31-2102	DRAG KNOB	J31-2102	J31-2102	DRAG KNOB	
2	F88-4001	DRAG WASHER RETAINER	F88-4001	DRAG WASHER RETAINER	F88-4001	F88-4001	DRAG WASHER RETAINER	F88-4001	F88-4001	DRAG WASHER RETAINER	
3	F69-1001	DRAG WASHER	F69-1001	DRAG WASHER	F69-1001	F69-1001	DRAG WASHER	F69-1001	F69-1001	DRAG WASHER	
4	H17-5101	KEY WASHER	H17-5101	KEY WASHER	H17-5101	H17-5101	KEY WASHER	H17-5101	H17-5101	KEY WASHER	
5	G70-D701	EARED WASHER	G70-0701	EARED WASHER	G70-0701	G70-0701	EARED WASHER	G70-0701	G70-0701	EARED WASHER	
6	M30-7401	SPOOL ASSY	M30-7601	SPOOL ASSY	M30-7801	M30-7801	SPOOL ASSY	M30-8001	M30-8001	SPOOL ASSY	
7	F05-0104	SPOOL WASHER (A)	F05-0104	SPOOL WASHER (A)	F05-0104	F05-0104	SPOOL WASHER (A)	F05-0104	F05-0104	SPOOL WASHER (A)	
8	F05-0002	SPOOL WASHER (B)	F05-0002	SPOOL WASHER (B)	F05-0002	F05-0002	SPOOL WASHER (B)	F05-0002	F05-0002	SPOOL WASHER (B)	
9	H30-9501	CLICK LEAF SPRING HOLDER	H30-9501	CLICK LEAF SPRING HOLDER	H32-3701	H32-3701	CLICK LEAF SPRING HOLDER	H32-3701	H32-3701	CLICK LEAF SPRING HOLDER	
ID	B74-7701	SPOOL CLICK LEAF SPRING	B74-7701	SPOOL CLICK LEAF SPRING	G34-1401	G34-1401	SPOOL CLICK LEAF SPRING	G34-1401	G34-1401	SPOOL CLICK LEAF SPRING	
11	F04-9901	SPOOL WASHER (C)	F04-99D1	SPOOL WASHER (C)	F04-9901	F04-9901	SPOOL WASHER (C)	F04-9901	F04-9901	SPOOL WASHER (C)	
12	G27-D801	ROTOR COVER SCREW	G27-0801	ROTOR COVER SCREW	G27-0801	G27-0801	ROTOR COVER SCREW	G27-0801	G27-0801	ROTOR COVER SCREW	
13	J32-2501	ROTOR COVER SCREW	J32-2501	ROTOR COVER SCREW	J31-0601	J31-0601	ROTOR COVER SCREW	J31-0601	J31-0601	ROTOR COVER SCREW	
14	J32-2401	ROTOR NUT	J32-2401	ROTOR NUT	J31-0501	J31-0501	ROTOR NUT	J31-0501	J31-0501	ROTOR NUT	
15	G39-2202	ROTOR NUT PLATE	G39-2202	ROTOR NUT PLATE	J31-6501	J31-6501	ROTOR NUT PLATE	J31-6501	J31-6501	ROTOR NUT PLATE	
16	J32-1601	ROTOR	J32-1601	ROTOR	J30-9401	J30-9401	ROTOR	J30-9401	J30-9401	ROTOR	
17	H50-3401	ROTOR BRAKE SPRING	H50-3401	ROTOR BRAKE SPRING	H78-2801	H78-2801	ROTOR BRAKE SPRING	H78-2801	H78-2801	ROTOR BRAKE SPRING	
18	G68-5401	ROTOR BRAKE SPRING WASHER	G68-5401	ROTOR BRAKE SPRING WASHER	E27-2501	E27-2501	ROTOR BRAKE SPRING WASHER	E27-2501	E27-2501	ROTOR BRAKE SPRING WASHER	
19	H50-3301	ROTOR BRAKE SHAFT	H50-3301	ROTOR BRAKE SHAFT	H68-4601	H68-4601	ROTOR BRAKE SHAFT	H68-4601	H68-4601	ROTOR BRAKE SHAFT	
20	J32-2001	ARM LEVER SPRING HOLDER	J32-2001	ARM LEVER SPRING HOLDER	H68-4701	H68-4701	ARM LEVER SPRING HOLDER	H68-4701	H68-4701	ARM LEVER SPRING HOLDER	
21	J32-1901	ARM LEVER SPRING	J32-1901	ARM LEVER SPRING	G41-8101	G41-8101	ARM LEVER SPRING	G41-8101	G41-8101	ARM LEVER SPRING	
22	J32-1801	ARM LEVER SHAFT PLATE	J32-1801	ARM LEVER SHAFT PLATE	J30-9601	J30-9601	ARM LEVER SHAFT PLATE	J30-9601	J30-9601	ARM LEVER SHAFT PLATE	
23	J32-1701	ARM LEVER SHAFT	J32-1701	ARM LEVER SHAFT	J30-9501	J30-9501	ARM LEVER SHAFT	J30-9501	J30-9501	ARM LEVER SHAFT	
24	H94-5501	ARM LEVER SCREW COLLAR	H94-5501	ARM LEVER SCREW COLLAR	H94-5501	H94-5501	ARM LEVER SCREW COLLAR	H94-5501	H94-5501	ARM LEVER SCREW COLLAR	
25	J30-9703	A R M LEVER	J30-9703	A R M LEVER	J30-9703	J30-9703	A R M LEVER	J30-9703	J30-9703	A R M LEVER	
26	G45-56D1	ARM LEVER SCREW	G45-56D1	ARM LEVER SCREW	G45-56D1	G45-56D1	ARM LEVER SCREW	G45-56D1	G45-56D1	ARM LEVER SCREW	
27	J32-2101	ARM LEVER COVER	J32-2101	ARM LEVER COVER	J30-9801	J30-9801	ARM LEVER COVER	J30-9801	J30-9801	ARM LEVER COVER	
28	G27-0801	ARM LEVER COVER SCREW	G27-0801	ARM LEVER COVER SCREW	G27-0801	G27-0801	ARM LEVER COVER SCREW	G27-0801	G27-0801	ARM LEVER COVER SCREW	
29	J32-3301	BAIL	J32-3301	BAIL	J30-9901	J30-9901	BAIL	J30-9901	J30-9901	BAIL	
30	J41-60D1	ROLLER COLLAR (A)	J41-60D1	ROLLER COLLAR (A)	J41-60D1	J41-60D1	ROLLER COLLAR (A)	J41-60D1	J41-60D1	ROLLER COLLAR (A)	
31	H24-6103	LINE ROLLER	H24-6103	LINE ROLLER	H24-6103	H24-6103	LINE ROLLER	H24-6103	H24-6103	LINE ROLLER	
32	J31-0401	ROLLER COLLAR (B)	J31-0401	ROLLER COLLAR (B)	J31-0401	J31-0401	ROLLER COLLAR (B)	J31-0401	J31-0401	ROLLER COLLAR (B)	
33	F60-8901	ROLLER SCREW	F60-8901	ROLLER SCREW	F60-8901	F60-8901	ROLLER SCREW	F60-8901	F60-8901	ROLLER SCREW	
34	J30-9301	ONEWAY CLUTCH PLATE WASHER	J30-9301	ONEWAY CLUTCH PLATE WASHER	J30-9301	J30-9301	ONEWAY CLUTCH PLATE WASHER	J30-9301	J30-9301	ONEWAY CLUTCH PLATE WASHER	
35	J00-1601	ONEWAY CLUTCH PLATE SCREW	J00-1601	ONEWAY CLUTCH PLATE SCREW	J00-1601	J00-1601	ONEWAY CLUTCH PLATE SCREW	J00-1601	J00-1601	ONEWAY CLUTCH PLATE SCREW	
36	J32-3901	ONEWAY CLUTCH PLATE	J32-3901	ONEWAY CLUTCH PLATE	J30-9201	J30-9201	ONEWAY CLUTCH PLATE	J30-9201	J30-9201	ONEWAY CLUTCH PLATE	
37	J30-9101	ONEWAY CLUTCH	J30-9101	ONEWAY CLUTCH	J30-91D1	J30-9101	ONEWAY CLUTCH	J30-9101	J30-9101	ONEWAY CLUTCH	
38	J30-9002	CLUTCH RING	J30-9002	CLUTCH RING	J30-9002	J30-9002	CLUTCH RING	J30-9002	J30-9002	CLUTCH RING	
39	J00-1602	PINION BEARING RETAINING PLATE SCREW	J00-1602	PINION BEARING RETAINING PLATE SCREW	JDD-1601	JDD-1601	PINION BEARING RETAINING PLATE SCREW	JDD-1601	JDD-1601	PINION BEARING RETAINING PLATE SCREW	
40	J30-8401	PINION BEARING RETAINING PLATE	J30-8401	PINION BEARING RETAINING PLATE	J30-8401	J30-8401	PINION BEARING RETAINING PLATE	J30-8401	J30-8401	PINION BEARING RETAINING PLATE	
41	G42-6301	PINION BALL BEARING (A)	G42-6301	PINION BALL BEARING (A)	G42-6301	G42-6301	PINION BALL BEARING (A)	G42-6301	G42-6301	PINION BALL BEARING (A)	
42	G61-3404	PINION BEARING WASHER	G61-3404	PINION BEARING WASHER	H24-3901	H24-3901	PINION BEARING WASHER	H24-3901	H24-3901	PINION BEARING WASHER	
43	E26-2701	ANTI REVERSE RATCHET	E26-2701	ANTI REVERSE RATCHET	E26-2701	E26-2701	ANTI REVERSE RATCHET	E26-2701	E26-2701	ANTI REVERSE RATCHET	
44	G61-3404	PINION WASHER	G61-3404	PINION WASHER	E33-9701	E33-9701	PINION WASHER	E33-9701	E33-9701	PINION WASHER	
45	Z02-3256	PINION DRIVE GEAR SET	Z02-3256	PINION DRIVE GEAR SET	Z02-4229	Z02-4229	PINION DRIVE GEAR SET	Z02-4229	Z02-4229	PINION DRIVE GEAR SET	
46	G52-2706	PINION BALL BEARING (B)	G52-2706	PINION BALL BEARING (B)	B86-1704	B86-1704	PINION BALL BEARING (B)	B86-1704	B86-1704	PINION BALL BEARING (B)	
47	J32-0901	PINION BEARING COLLAR	J32-0901	PINION BEARING COLLAR	J30-8101	J30-8101	PINION BEARING COLLAR	J30-8101	J30-8101	PINION BEARING COLLAR	
48	M25-2401	BODY	M25-2401	BODY	M20-3701	M20-3701	BODY	M20-3701	M20-3701	BODY	
49	J32-0501	MAIN SHAFT	J32-0501	MAIN SHAFT	J30-7701	J30-7701	MAIN SHAFT	J30-7701	J30-7701	MAIN SHAFT	
50	J32-0801	OSCILLATING POST	J32-0801	OSCILLATING POST	J30-8001	J30-8001	OSCILLATING POST	J30-8001	J30-8001	OSCILLATING POST	
51	J32-1504	REAR COVER	J32-1504	REAR COVER	J30-8905	J30-8905	REAR COVER	J30-8905	J30-8905	REAR COVER	
52	J00-1801	REAR COVER SCREW	J00-1801	REAR COVER SCREW	J00-1801	J00-1801	REAR COVER SCREW	J00-1801	J00-1801	REAR COVER SCREW	
53	J32-0401	OSCILLATING GEAR	J32-0401	OSCILLATING GEAR	J30-7601	J30-7601	OSCILLATING GEAR	J30-7601	J30-7601	OSCILLATING GEAR	
54	G46-7105	OSCILLATING GEAR BALL BEARING	G46-7105	OSCILLATING GEAR BALL BEARING	B86-1704	B86-1704	OSCILLATING GEAR BALL BEARING	B86-1704	B86-1704	OSCILLATING GEAR BALL BEARING	
55	H27-2201	OSCILLATING GEAR SCREW	H27-2201	OSCILLATING GEAR SCREW	H34-7101	H34-7101	OSCILLATING GEAR SCREW	H34-7101	H34-7101	OSCILLATING GEAR SCREW	
56	H24-3301	ANTI REVERSE COLLAR	H24-3301	ANTI REVERSE COLLAR	H24-3301	H24-3301	ANTI REVERSE COLLAR	H24-3301	H24-3301	ANTI REVERSE COLLAR	
57	H24-3201	ANTI REVERSE PAWL	H24-3201	ANTI REVERSE PAWL	M03-0401	M03-0401	ANTI REVERSE PAWL	M03-0401	M03-0401	ANTI REVERSE PAWL	
58	351-6401	ANTI REVERSE PAWL SCREW	351-6401	ANTI REVERSE PAWL SCREW	351-6401	351-6401	ANTI REVERSE PAWL SCREW	351-6401	351-6401	ANTI REVERSE PAWL SCREW	
59	J30-8601	ANTI REVERSE PAWL SPRING	J30-8601	ANTI REVERSE PAWL SPRING	J30-8601	J30-8601	ANTI REVERSE PAWL SPRING	J30-8601	J30-8601	ANTI REVERSE PAWL SPRING	
60	J32-1201	DRIVE GEAR O RING	J32-1201	DRIVE GEAR O RING	J30-8501	J30-8501	DRIVE GEAR O RING	J30-8501	J30-8501	DRIVE GEAR O RING	
45	Z02-3256	PINION DRIVE GEAR SET	Z02-3256	PINION DRIVE GEAR SET	Z02-4229	Z02-4229	PINION DRIVE GEAR SET	Z02-4229	Z02-4229	PINION DRIVE GEAR SET	
61	371-2824	DRIVE GEAR WASHER	371-2824	DRIVE GEAR WASHER	371-2824	371-2824	DRIVE GEAR WASHER	371-2824	371-2824	DRIVE GEAR WASHER	
62	G52-2802	DRIVE BALL BEARING (A)	G52-2802	DRIVE BALL BEARING (A)	G52-2802	G52-2802	DRIVE BALL BEARING (A)	G52-2802	G52-2802	DRIVE BALL BEARING (A)	
63	J53-36D5	BODY COVER	J53-36D5	BODY COVER	J72-5304	J72-5304	BODY COVER	J72-5304	J72-5304	BODY COVER	
64	J42-3501	BODY COVER SCREW WASHER	J42-3501	BODY COVER SCREW WASHER	J42-3501	J42-3501	BODY COVER SCREW WASHER	J42-3501	J42-3501	BODY COVER SCREW WASHER	
65	351-6417	BODY COVER SCREW	351-6417	BODY COVER SCREW	351-6417	351-6417	BODY COVER SCREW	351-6417	351-6417	BODY COVER SCREW	
66	G52-2802	DRIVE BALL BEARING (B)	G52-2802	DRIVE BALL BEARING (B)	G52-2802	G52-2802	DRIVE BALL BEARING (B)	G52-2802	G52-2802	DRIVE BALL BEARING (B)	
67	HO4-7201	DRIVE BALL BEARING RETAINER	HO4-7201	DRIVE BALL BEARING RETAINER	HO4-7201	HO4-7201	DRIVE BALL BEARING RETAINER	HO4-7201	HO4-7201	DRIVE BALL BEARING RETAINER	
68	F40-9001	HANDLE COLLAR	F40-9001	HANDLE COLLAR	F40-9001	F40-9001	HANDLE COLLAR	F40-9001	F40-9001	HANDLE COLLAR	
69	160-8101	HANDLE WASHER	160-8101	HANDLE WASHER	160-8101	160-8101	HANDLE WASHER	160-8101	160-8101	HANDLE WASHER	
70	J31-1601	HANDLE SCREW	J31-1601	HANDLE SCREW	J31-1601	J31-1601	HANDLE SCREW	J31-1601	J31-1601	HANDLE SCREW	
71	J72-3201	HANDLE ASSY	J72-3201	HANDLE ASSY	J72-5401	J72-5401	HANDLE ASSY	J72-5401	J72-5401	HANDLE ASSY	
72	J72-3201	HANDLE ASSY	J72-3201	HANDLE ASSY	J72-3201	J72-3201	HANDLE ASSY	J72-3201	J72-3201	HANDLE ASSY	
73	G57-8501	PINION SPRING WASHER	G57-8501	PINION SPRING WASHER	G57-8501	G57-8501	PINION SPRING WASHER	G57-8501	G57-8501	PINION SPRING WASHER	
74	H38-0901	DRAG KNOB WASHER	H38-0901	DRAG KNOB WASHER	H38-0901	H38-0901	DRAG KNOB WASHER	H38-0901	H38-0901	DRAG KNOB WASHER	