


EMBLEM-X1500iA / 2000iA

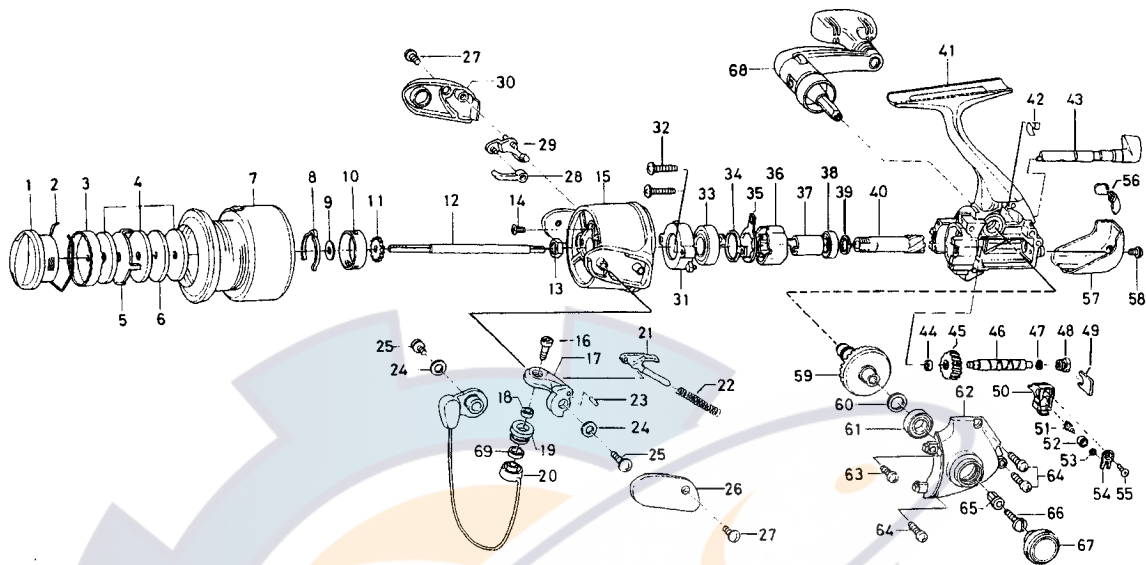

Key No.	Parts No.	Parts Name	Key No.	Parts No.	Parts Name
2-7	F69-0401	SPOOL	39	F63-3501	PINION WASHER
1	F63-5601	DRAG KNOB	40	F65-2501	PINION GEAR
2	F06-2601	DRAG WASHER RET	41	F67-4601	BODY
3	F69-0201	DRAG KNOB CLICK PLT	42	F65-1901	A/R CAM SPRING
4	F69-2301	DRAG WASHER	43	F65-1801	A/R LEVER
5	F69-0101	EARED WASHER	44	F65-2201	WORM SHAFT BUSH
6	F69-0001	KEY WASHER	45	F65-2101	WORM SHAFT GEAR
8	F70-4901	SPOOL CLICK LEAF SPRING	46	F65-2001	WORM SHAFT
9	E39-4001	SPOOL WASHER	47	375-4101	WORM SHAFT WASHER
10	E12-2303	CLICK LEAF SPRING HOLDER	48	F65-2301	WORM SHAFT COLLAR
11	E36-5301	CLICK GEAR	49	F65-2401	WORM SHAFT RET
12	F65-2701	MAIN SHAFT	50	F65-2601	OSC SLIDER
13	341-9203	ROTOR NUT	51	F62-2601	OSC PAWL
14	B55-7601	ROTOR NUT LOCK SCREW	52	F62-2701	OSC PAWL BUSH
15	F63-3707	ROTOR	53	375-0801	OSC PAWL WASHER
16	F62-5201	LINE ROLLER SCREW	54	F62-2901	OSC SLIDER COVER
17	F62-3504	BAIL ARM	55	E15-0204	OSC SLIDER COVER SCREW
18	F62-5101	BALL BEARING A	56	F65-2902	SHIELD PLT
19	F62-5001	LINE ROLLER	57	B65-3102	REAR COVER
20	F69-0301	BAIL	58	E24-8101	REAR COVER SCREW
21	F69-1101	BAIL SPRING SHAFT	59	F65-2801	DRIVE GEAR
22	F74-2401	BAIL SPRING	60	375-8502	DRIVE GEAR WASHER
23	F62-3701	BAIL ARM PIN	61	637-5702	BALL BEARING D
24	F63-1801	BAIL HOLDER WASHER	62	F65-3005	SIDE COVER
25	351-6101	BAIL ARM SCREW	63	E15-7502	SIDE COVER SCREW A
26	F63-1904	BAIL SPRING COVER	64	E13-0501	SIDE COVER SCREW B
27	352-2501	BAIL SPRING COVER SCREW	65	F40-4801	HANDLE COLLAR
28	F62-4601	BAIL TRIP PLT	66	363-8511	HANDLE SCREW
29	F72-7201	BAIL TRIP LEVER	67	F65-3502	HANDLE SCREW CAP
30	F63-7003	BAIL TRIP COVER	68	F69-2701	HANDLE
31	F67-5501	BEARING RET	69	F70-1801	LINE ROLLER COLLAR
32	E24-7402	BEARING RET SCREW			
33	F63-1201	BALL BEARING B			
34	F67-5401	BEARING RET B			
35	F62-2201	ROLLER CLUTCH RET			
36	F62-2001	ROLLER CLUTCH			
37	F73-2501	SPACING SLEEVE			
38	637-5702	BALL BEARING C			

EM-X2000iA

Key No.	Parts No.	Parts Name
2-7	F69-4601	SPOOL
20	F69-7701	BAIL