


# EMBLEM-X3000iA

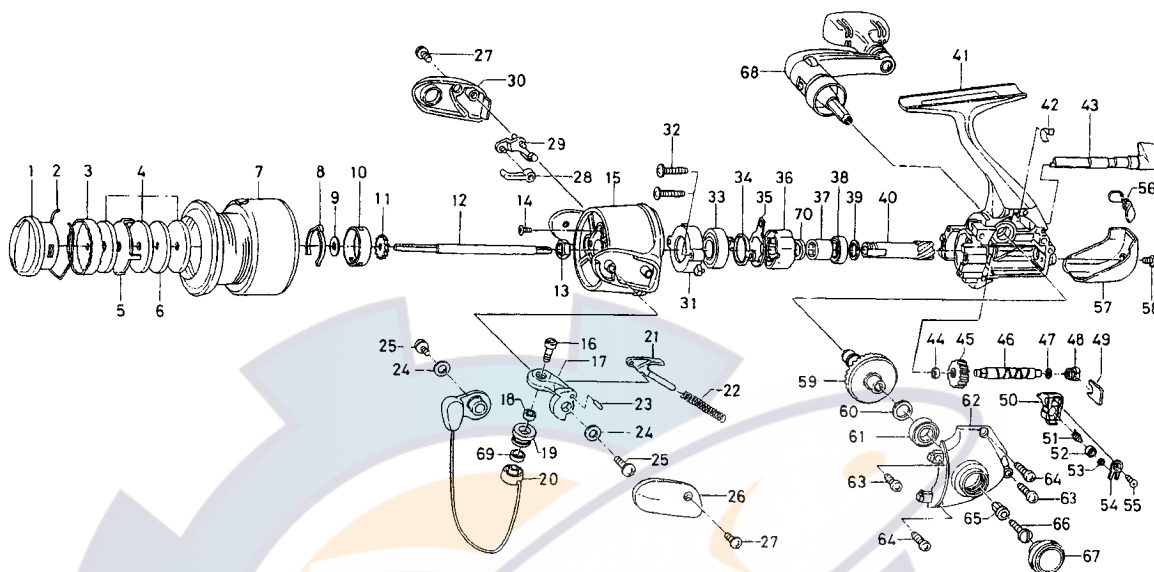

**Key No. Parts No.**

**Parts Name**

2-7	F69-2901	SPOOL
1	F64-4801	DRAG KNOB
2	F71-0001	DRAG WASHER RET
3	F68-1301	DRAG KNOB CLICK PLT
4	F69-8001	DRAG WASHER
5	F67-6401	EARED WASHER
6	F68-1101	KEY WASHER
8	F70-9001	SPOOL CLICK LEAF SPRING
9	E39-7901	SPOOL WASHER
10	F69-7901	CLICK LEAF SPRING HOLDER
11	E41-3101	CLICK GEAR
12	F68-0001	MAIN SHAFT
13	340-6604	ROTOR NUT
14	B55-7601	ROTOR NUT LOCK SCREW
15	F64-2507	ROTOR
16	F62-5201	LINE ROLLER SCREW
17	F62-3504	BAIL ARM
18	F62-5101	BALL BEARING A
19	F62-5001	LINE ROLLER
20	F69-2601	BAIL
21	F69-1102	BAIL SPRING SHAFT
22	F62-3801	BAIL SPRING
23	F62-3701	BAIL ARM PIN
24	F63-1801	BAIL HOLDER WASHER
25	351-6101	BAIL ARM SCREW
26	F66-0702	BAIL SPRING COVER
27	352-2501	BAIL SPRING COVER SCREW
28	F64-6301	BAIL TRIP PLT
29	F65-4701	BAIL TRIP LEVER
30	F66-0802	BAIL TRIP COVER
31	F67-9801	BEARING RET A
32	E24-7402	BEARING RET SCREW
33	F64-1601	BALL BEARING B
34	F67-9701	BEARING RET B
35	F64-1401	ROLLER CLUTCH RET

**Key No. Parts No.**

**Parts Name**

36	F64-1201	ROLLER CLUTCH
37	F73-2201	SPACING SLEEVE
38	F64-1101	BALL BEARING C
39	F26-2801	PINION WASHER
40	F67-9601	PINION GEAR
41	F69-2501	BODY
42	F67-9201	A/R CAM SPRING
43	F67-9101	A/R LEVER
44	F63-1401	WORM SHAFT BUSH
45	F64-0902	WORM SHAFT GEAR
46	F64-0802	WORM SHAFT
47	375-4101	WORM SHAFT WASHER
48	F67-9501	WORM SHAFT COLLAR
49	F74-9401	WORM SHAFT RET
50	F67-9901	OSC SLIDER
51	F64-1901	OSC PAWL
52	F62-2701	OSC PAWL BUSH
53	375-0801	OSC PAWL WASHER
54	F62-2901	OSC SLIDER COVER
55	352-1502	OSC SLIDER COVER SCREW
56	F68-0202	SHIELD PLT
57	F68-0302	REAR COVER
58	E36-4202	REAR COVER SCREW
59	F66-1201	DRIVE GEAR
60	373-7808	DRIVE GEAR WASHER
61	E15-4001	BALL BEARING D
62	F68-0104	SIDE COVER
63	E15-7502	SIDE COVER SCREW A
64	E15-8602	SIDE COVER SCREW B
65	F43-3502	HANDLE COLLAR
66	363-8511	HANDLE SCREW
67	F69-2402	HANDLE SCREW CAP
68	F69-2801	HANDLE
69	F70-1801	LINE ROLLER COLLAR
70	F73-2401	COLLAR