




Feel Alive.

20 EMERALDAS X LT 3000S

Please quote by part number, not key number when ordering.
spares@daiwaaustralia.com.au PH: (02) 8644 8644

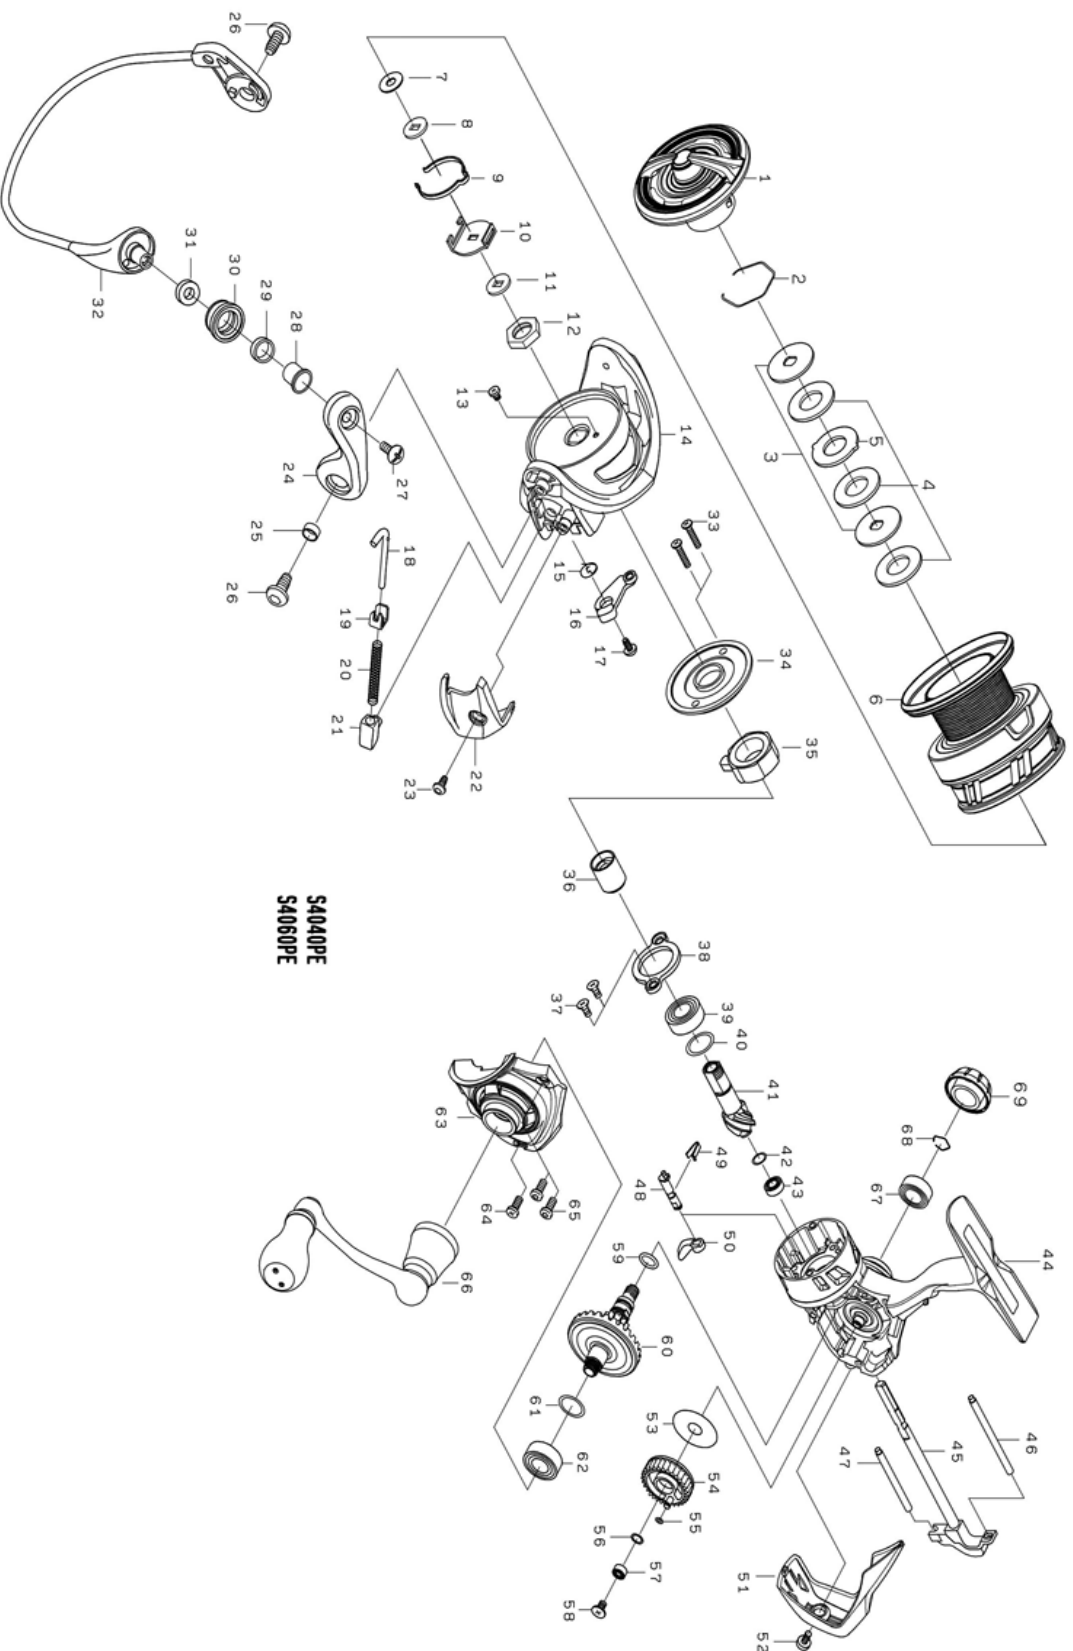

S4040PE
S4060PE

REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
20 EMERALDAS X LT 3000S H		1	6Q424401	DRAG KNOB
20 EMERALDAS X LT 3000S H		2	6Q346101	DRAG WASHER RETAINER
20 EMERALDAS X LT 3000S H		3	6J547001	KEY WASHER
20 EMERALDAS X LT 3000S H		4	6J546801	DRAG WASHER
20 EMERALDAS X LT 3000S H		5	6Q346001	EARED WASHER
20 EMERALDAS X LT 3000S H		6	6Q673201	SPOOL ASSEMBLY
20 EMERALDAS X LT 3000S H		7	6E398003	WASHER (A)
20 EMERALDAS X LT 3000S H		8	6Q348502	WASHER (B)
20 EMERALDAS X LT 3000S H		9	6H416101	SPOOL CLICK LEAF SPRING
20 EMERALDAS X LT 3000S H		10	6M021401	CLICK LEAF SPRING HOLDER
20 EMERALDAS X LT 3000S H		11	6Q344001	WASHER (C)
20 EMERALDAS X LT 3000S H		12	6Q122401	ROTOR NUT
20 EMERALDAS X LT 3000S H		13	6H022701	SCREW (A)
20 EMERALDAS X LT 3000S H		14	6Q120516	ROTOR
20 EMERALDAS X LT 3000S H		15	6H413601	BAIL TRIP LEVER SPRING
20 EMERALDAS X LT 3000S H		16	6Q120701	BAIL TRIP LEVER
20 EMERALDAS X LT 3000S H		17	6H417701	SCREW (B)
20 EMERALDAS X LT 3000S H		18	6Q121201	BAIL SPRING SHAFT
20 EMERALDAS X LT 3000S H		19	6H576101	BAIL SPRING PLATE
20 EMERALDAS X LT 3000S H		20	6H545701	BAIL SPRING
20 EMERALDAS X LT 3000S H		21	6Q121501	BAIL SPRING HOLDER
20 EMERALDAS X LT 3000S H		22	6Q121802	COVER (A)
20 EMERALDAS X LT 3000S H		23	6Q342901	SCREW (C)
20 EMERALDAS X LT 3000S H		24	6Q121609	BAIL ARM
20 EMERALDAS X LT 3000S H		25	6Q121701	COLLAR (A)
20 EMERALDAS X LT 3000S H		26	6Q343401	SCREW (D)
20 EMERALDAS X LT 3000S H		27	6G195602	SCREW (E)
20 EMERALDAS X LT 3000S H		28	6G195501	COLLAR (B)
20 EMERALDAS X LT 3000S H		29	6G220701	COLLAR (C)
20 EMERALDAS X LT 3000S H		30	6J089901	LINE ROLLER
20 EMERALDAS X LT 3000S H		31	6Q203401	COLLAR (D)
20 EMERALDAS X LT 3000S H		32	6Q281001	BAIL ASSEMBLY
20 EMERALDAS X LT 3000S H		33	6G837101	SCREW (F)
20 EMERALDAS X LT 3000S H		34	6Q129001	CAP
20 EMERALDAS X LT 3000S H		35	6J388401	ROLLER CLUTCH
20 EMERALDAS X LT 3000S H		36	6J001403	SPACING SLEEVE
20 EMERALDAS X LT 3000S H		37	6Q126201	SCREW (G)
20 EMERALDAS X LT 3000S H		38	6Q195601	BEARING RETAINER (A)
20 EMERALDAS X LT 3000S H		39	6G535105	BALL BEARING (A)
20 EMERALDAS X LT 3000S H		40	63758502	WASHER (D)
20 EMERALDAS X LT 3000S H		41	6Q245001	PINION GEAR
20 EMERALDAS X LT 3000S H		42	6H931701	SPRING WASHER
20 EMERALDAS X LT 3000S H		43	6G466202	BALL BEARING (B)
20 EMERALDAS X LT 3000S H		44	6Q673001	BODY
20 EMERALDAS X LT 3000S H		45	6Q381701	MAIN SHAFT
20 EMERALDAS X LT 3000S H		46	6Q126302	STABILIZER BAR (A)
20 EMERALDAS X LT 3000S H		47	6Q119102	STABILIZER BAR (B)
20 EMERALDAS X LT 3000S H		48	6Q118101	ANTI REVERSE CAM
20 EMERALDAS X LT 3000S H		49	6H697801	ANTI REVERSE CAM SPRING
20 EMERALDAS X LT 3000S H		50	6Q118001	ANTI REVERSE LEVER
20 EMERALDAS X LT 3000S H		51	6Q351703	REAR COVER
20 EMERALDAS X LT 3000S H		52	6Q342901	SCREW (H)
20 EMERALDAS X LT 3000S H		53	6H595701	WASHER (E)
20 EMERALDAS X LT 3000S H		54	6Q381601	OSCILLATE GEAR
20 EMERALDAS X LT 3000S H		55	6G466001	O RING (A)
20 EMERALDAS X LT 3000S H		56	6H129201	WASHER (F)
20 EMERALDAS X LT 3000S H		57	6G469007	BALL BEARING (C)
20 EMERALDAS X LT 3000S H		58	6Q126101	SCREW (I)
20 EMERALDAS X LT 3000S H		59	6G670501	O RING (B)
20 EMERALDAS X LT 3000S H		60	6Q655001	DRIVE GEAR

