


EXCELER 3500/4000

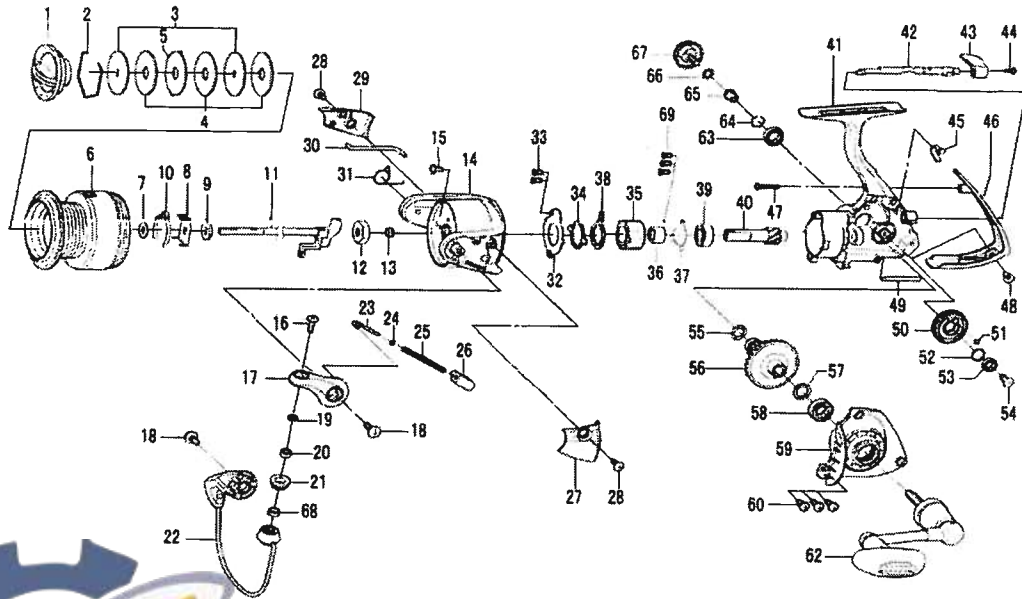

Key No.	Parts No.	Parts Name
1	G70-0801	DRAG KNOB
2	F88-4001	DRAG WASHER RET
3	G70-0601	KEY WASHER
4	F69-1001	DRAG WASHER
5	G70-0701	EARED WASHER
2-6	G74-4301	SPOOL
2-6	G77-6201	SPOOL (EXTRA)
7	E46-7101	SPOOL WASHER
8	G74-3901	CLICK LEAF SPRING HOLDER
9	E24-6101	CLICK LEAF SPRING WASHER
10	F70-9002	SPOOL CLICK LEAF SPRING
11	G74-2701	MAIN SHAFT
12	G74-3801	ROTOR NUT
13	G75-1201	ROTOR NUT COLLAR
14	G64-6106	ROTOR
15	G62-7701	ROTOR NUT LOCK SCREW
16	G19-5602	LINE ROLLER SCREW
17	G61-2310	BAIL ARM
18	G20-5001	BAIL ARM SCREW
19	F89-7101	LINE ROLLER WASHER
20	G28-1601	BALL BEARING A
21	F62-5001	LINE ROLLER
22	G74-3601	BAIL
23	G29-8201	BAIL SPRING SHAFT
24	E31-3901	BAIL SPRING WASHER
25	G64-6201	BAIL SPRING
26	G61-2103	BAIL SPRING HOLDER
27	G64-6301	BAIL SPRING COVER
28	G27-0801	BAIL SPRING COVER SCREW
29	G64-6601	BAIL TRIP LEVER COVER
30	G64-6501	BAIL TRIP LEVER
31	G61-3101	BAIL TRIP LEVER SPRING
32	G57-7401	ROLLER CLUTCH RET
33	G55-7101	ROLLER CLUTCH RET SCREW
34	F64-1501	CLUTCH CAM RET
35	G31-4501	ROLLER CLUTCH
36	G74-3001	SPACING SLLEEVE

Key No.	Parts No.	Parts Name
37	G52-2901	BEARING RET
38	F64-1401	CLUTCH CAM
39	G52-2801	BALL BEARING B
40	G74-3101	PINION GEAR
41	G74-2101	BODY
42	G74-2601	A/R CAM
43	G69-9402	A/R LEVER
44	G69-9501	A/R LEVER SCREW
45	G72-6201	A/R CAM SPRING
46	G74-3501	REAR COVER
47	E11-9602	REAR COVER SCREW A
48	G33-2702	REAR COVER SCREW B
49	G64-4702	STABILIZER BAR
50	G64-4301	OSC GEAR
51	B85-3401	O RING A
52	G52-2100	OSC GEAR WASHER
53	G46-7102	BALL BEARING C
54	B70-3401	OSC GEAR SCREW
55	G64-5301	O RING B
56	G74-3201	DRIVE GEAR
57	373-7800	DRIVE GEAR WASHER
58	G52-3401	BALL BEARING D
59	G74-3301	SIDE COVER
60	G33-2902	SIDE COVER SCREW
62	G74-4001	HANDLE
63	B86-1704	BALL BEARING E
64	G52-5101	BALL BEARING RET
65	F72-1202	HANDLE COLLAR
66	160-8101	LOCK WASHER
67	G74-4201	HANDLE SCREW
68	F70-1801	LINE ROLLER COLLAR
69	E13-4509	BEARING RET SCREW

EXC4000 Special Parts

Key No.	Parts No.	Parts Name
2-6	G74-4601	SPOOL
2-6	G77-6501	SPOOL (EXTRA)