



FW47Hi
Key No.

Key No.	Parts No.
1	6W6089020
2	6W6091010
3	6W6092010
4	6W6094010
5	6W6005010
6	6W6006010
7	6W6007010
8	6W6008010
9	6W6009010
10/51	6W6010010
11	6W6095010
12	6W6096010
13	6W6013020
14	6W6097010
15	6W6098010
16	6W6098010
17	6W6016010
18	6W6099010
19	6W6177010
20	6W6102010
21	6W6103010
22	6W6021010
23	6W6141010
24	6W6189010
25	6W6108010
26	6W629010
27	6W6030010
28	6W6110010
29	6W6111010
30	6W6021010
31	6W6143010
34	6W6164010
35	6W6113010
36	6W6040010
37	6W6041010
38	6W6114010
39	6W6043010
44	6W6116010
45	6W6191010
46	6W6146010
47	6W6147010
48	6W6167010
49	6W6055010
50	6W6056010
52	6W6124010
54	6W6061010
55	6W6034020

Parts Name

Parts Name	Parts No.
Left side outer plate	56
Left side plate screw	57
Left side plate	58
Click button	59
Click button washer	60
Click pawl	61
Screw (C)	62
Click spring	63
Screw (A)	64
Spacer (A)	65
Spool gear	66
Spool washer	67
Click gear screw	68
Click gear	69
Idle gear	70
Idle gear collar	71
Idle gear screw	72
Spool	73
Worm shaft retainer (A)	74
Worm shaft gear	75
Bushing (B)	76
Worm shaft	77
Frame assembly	78
Level wind	79
Line guide pawl	80
Pawl cap	81
Stabilizer bar	82
Level wind guard	83
Bushing (B)	84
Washer (A)	85
Yoke plate screw	86
Yoke plate	87
Clutch cam	88
Clutch spring	89
Yoke	90
Yoke spring	91
Pinion gear	92
Right side plate	93
Right side outer ring	
Right side plate screw	
Clutch lever	
Clutch lever screw	
O ring	
Cast control cap	
Drive shaft retainer	
Washer (B)	

Special Parts for FW57Hi
Key No.

Key No.	Parts No.
1	6W6090020
3	6W6093010
19	6W6178010
23	6W6142010
24	6W6190010
25	6W6109010
29	6W6112010
45	6W6192010
46	6W6153010
48	6W6184010
57	6W6128010
74	6W6135010

Parts Name	Parts No.
Screw (A)	6W609010
Hold plate	6W627010
Drive shaft bush	6W6066010
Washer (C)	6W6067010
Drive shaft	6W6185010
Drive shaft washer	6W6130010
Drive gear	6W6131010
Drag washer (A)	6W6071010
Key washer (A)	6W6072010
Drag washer (B)	6W6073010
Eared washer	6W6074010
Anti-reverse pawl pin	6W6132010
Anti-reverse pawl spring	6W6077010
Anti-reverse pawl	6W6133010
Star drag	6W6134010
Spacing sleeve	6W6082010
Handle assembly	6W6084010
Washer (D)	6W6085010
Handle nut	6W6086010
Handle nut plate	6W6087010
Handle nut plate screw	6W6088010
Spool gear retainer	6W6154010
Bushing retainer	6W6156010
Collar	6W6169010
Handle metal	6W6170010
Handle metal plate screw	6W6171010
Handle metal cap	6W6172010
Key washer (B)	6W6173010
Ball bearing (A)	6W6174010
Handle metal plate	6W6175010
Ball bearing (B)	6W6176010

FW47Hi
Key No.

Key No.	Parts No.
1	6W6089020
2	6W6091010
3	6W6092010
4	6W6094010
5	6W6005010
6	6W6006010
7	6W6007010
8	6W6008010
9	6W6009010
10/51	6W6010010
11	6W6095010
12	6W6096010
13	6W6096010
14	6W6013020
15	6W6097010
16	6W6098010
17	6W6016010
18	6W6099010
19	6W6177010
20	6W6102010
21	6W6103010
22	6W6021010
23	6W6141010
24	6W6189010
25	6W6108010
26	6W6029010
27	6W6030010
28	6W6110010
29	6W6111010
30	6W6021010
31	6W6143010
34	6W6164010
35	6W6113010
36	6W6040010
37	6W6041010
38	6W6114010
39	6W6043010
44	6W6116010
45	6W6191010
46	6W6146010
47	6W6147010
48	6W6167010
49	6W6055010
50	6W6056010
52	6W6124010
54	6W6061010
55	6W6034020

Designation des pieces

Designation des pieces	Parts No.
Couronne gauche	56
Vis de flasque de gauche	57
Flasque gauche	58
Bouton de cliquet	59
Rondelle du bouton de cliquet	60
Cliquet	61
Vis (C)	62
Ressort de cliquet	63
Vis (A)	64
Rondelle de chapeau de réglage (A)	65
Engrenage de bobine	66
Rondelle de bobine	67
Vis de rochet bruiteur	68
Rochet bruiteur	69
Roue dentée	70
Collar de roue dentée	71
Vis de roue dentée	72
Bobine	73
Clips de vis double filet (A)	74
Roue de vis double filet	75
Palier (B)	76
Vis double filet (A)	77
Billet	78
Vis double filet (B)	79
Pilote de guide-fil	80
Chapeau de pilote	81
Entrotoises	82
Protecteur de vis double filet	83
Palier (B)	84
Rondelle (A)	85
Vis de plaque du rouz	86
Plaque du joug	87
Cam d'embrayage	88
Ressort de came	89
Joug de debayage	90
Ressort de Joug	91
Pignon	92
Flasque droit	93
Couronna droite	
Vis de flasque droit	
Lever d'embrayage	
Vis-axe du lever d'embrayage	
Annau torique	
Chapeau de réglage de tension	
Verrou d'arbre de commande	
Rondelle (B)	

Special Parts for FW57Hi
Key No.

Key No.	Parts No.
1	6W6090020
3	6W6093010
19	6W6178010
23	6W6142010
24	6W6190010
25	6W6109010
29	6W6112010
45	6W6192010
46	6W6153010
48	6W6184010
57	6W6128010
74	6W6135010

Parts Name

Parts Name	Parts No.
Left side outer plate	6W609010
Left side plate	6W627010
Spool	6W6066010
Worm shaft	6W6067010
Frame assembly	6W6185010
Level wind	6W6130010
Level wind guard	6W6131010
Right side plate	6W6071010
Right side outer ring	6W6072010
Clutch lever	6W6073010
Hold plate	6W6134010
Handle assembly	6W6082010
Washer (D)	6W6084010
Handle nut	6W6085010
Handle nut plate	6W6086010
Handle nut plate screw	6W6087010
Spool gear retainer	6W6088010
Bushing retainer	6W6154010
Collar	6W6156010
Handle metal	6W6169010
Handle metal plate screw	6W6170010
Handle metal cap	6W6171010
Key washer (B)	6W6172010
Ball bearing (A)	6W6173010
Handle metal plate	6W6174010
Ball bearing (B)	6W6175010
Handle metal plate	6W6176010
Ball bearing (B)	6W6176010

Designation des pieces

Designation des pieces	Parts No.
Couronne gauche	56
Flasque gauche	58
Bobine	73
Vis double filet (A)	74
Billet	78
Vis double filet (B)	79
Protecteur de vis double filet	83
Flasque droit	93
Couronna droite	
Lever d'embrayage	
Verrou d'arbre de commande	
Manivelle	