


LOCHMORE-S300

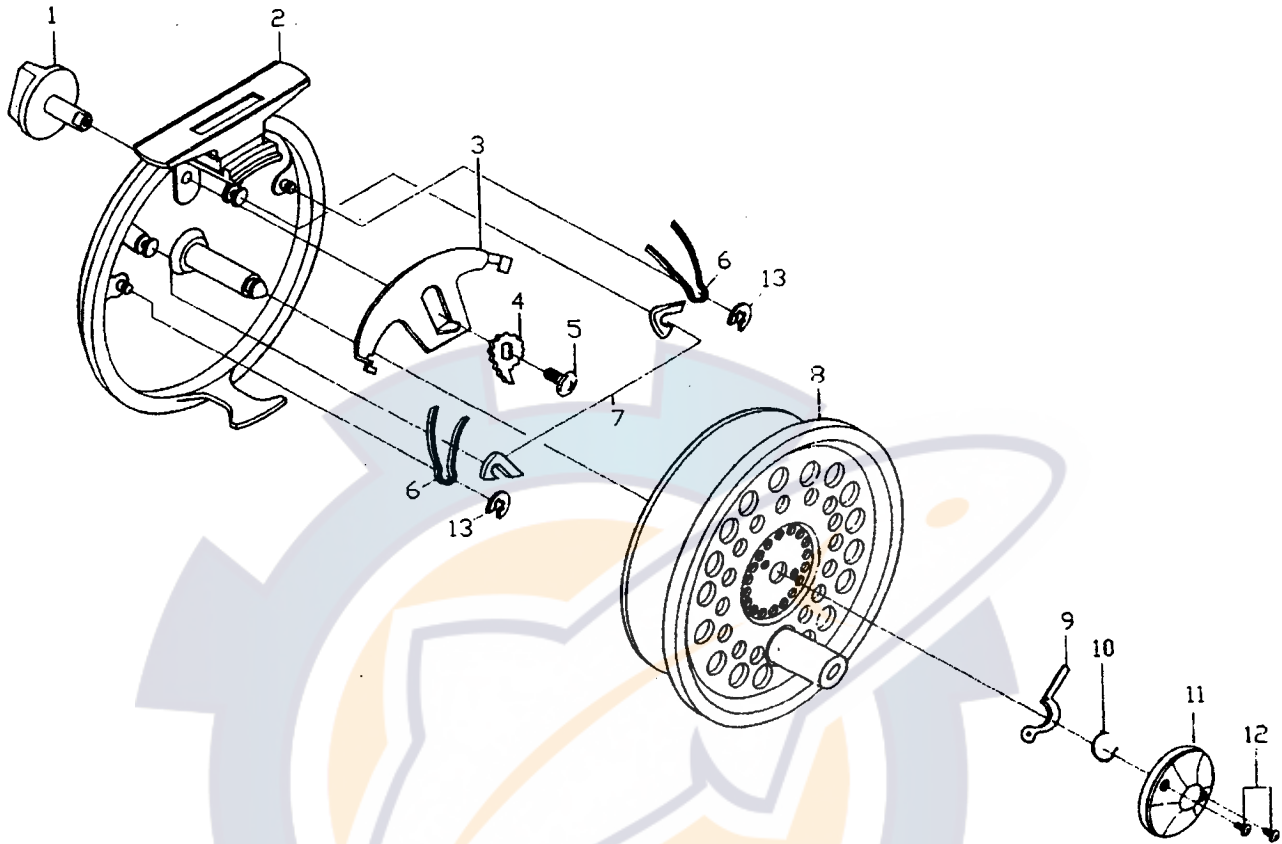

Key No.	Parts No.	Parts Name
1	B83-8201	DRAG KNOB
2	F77-9301	BODY
3	B03-1301	CLICK PLT
4	B03-1401	DRAG CAM
5	F50-5701	DRAG KNOB SCREW
6	B36-5502	DRAG SPRING
7	B28-6001	CLICK PAWL
8-12	F78-0301	SPOOL
13	320-1402	CLICK RET