




# 18 FREAMS LT 5000D-C

Feel Alive.

Please quote by part number, not key number when ordering.  
[spares@daiwaaustralia.com.au](mailto:spares@daiwaaustralia.com.au) PH: (02) 8644 8644

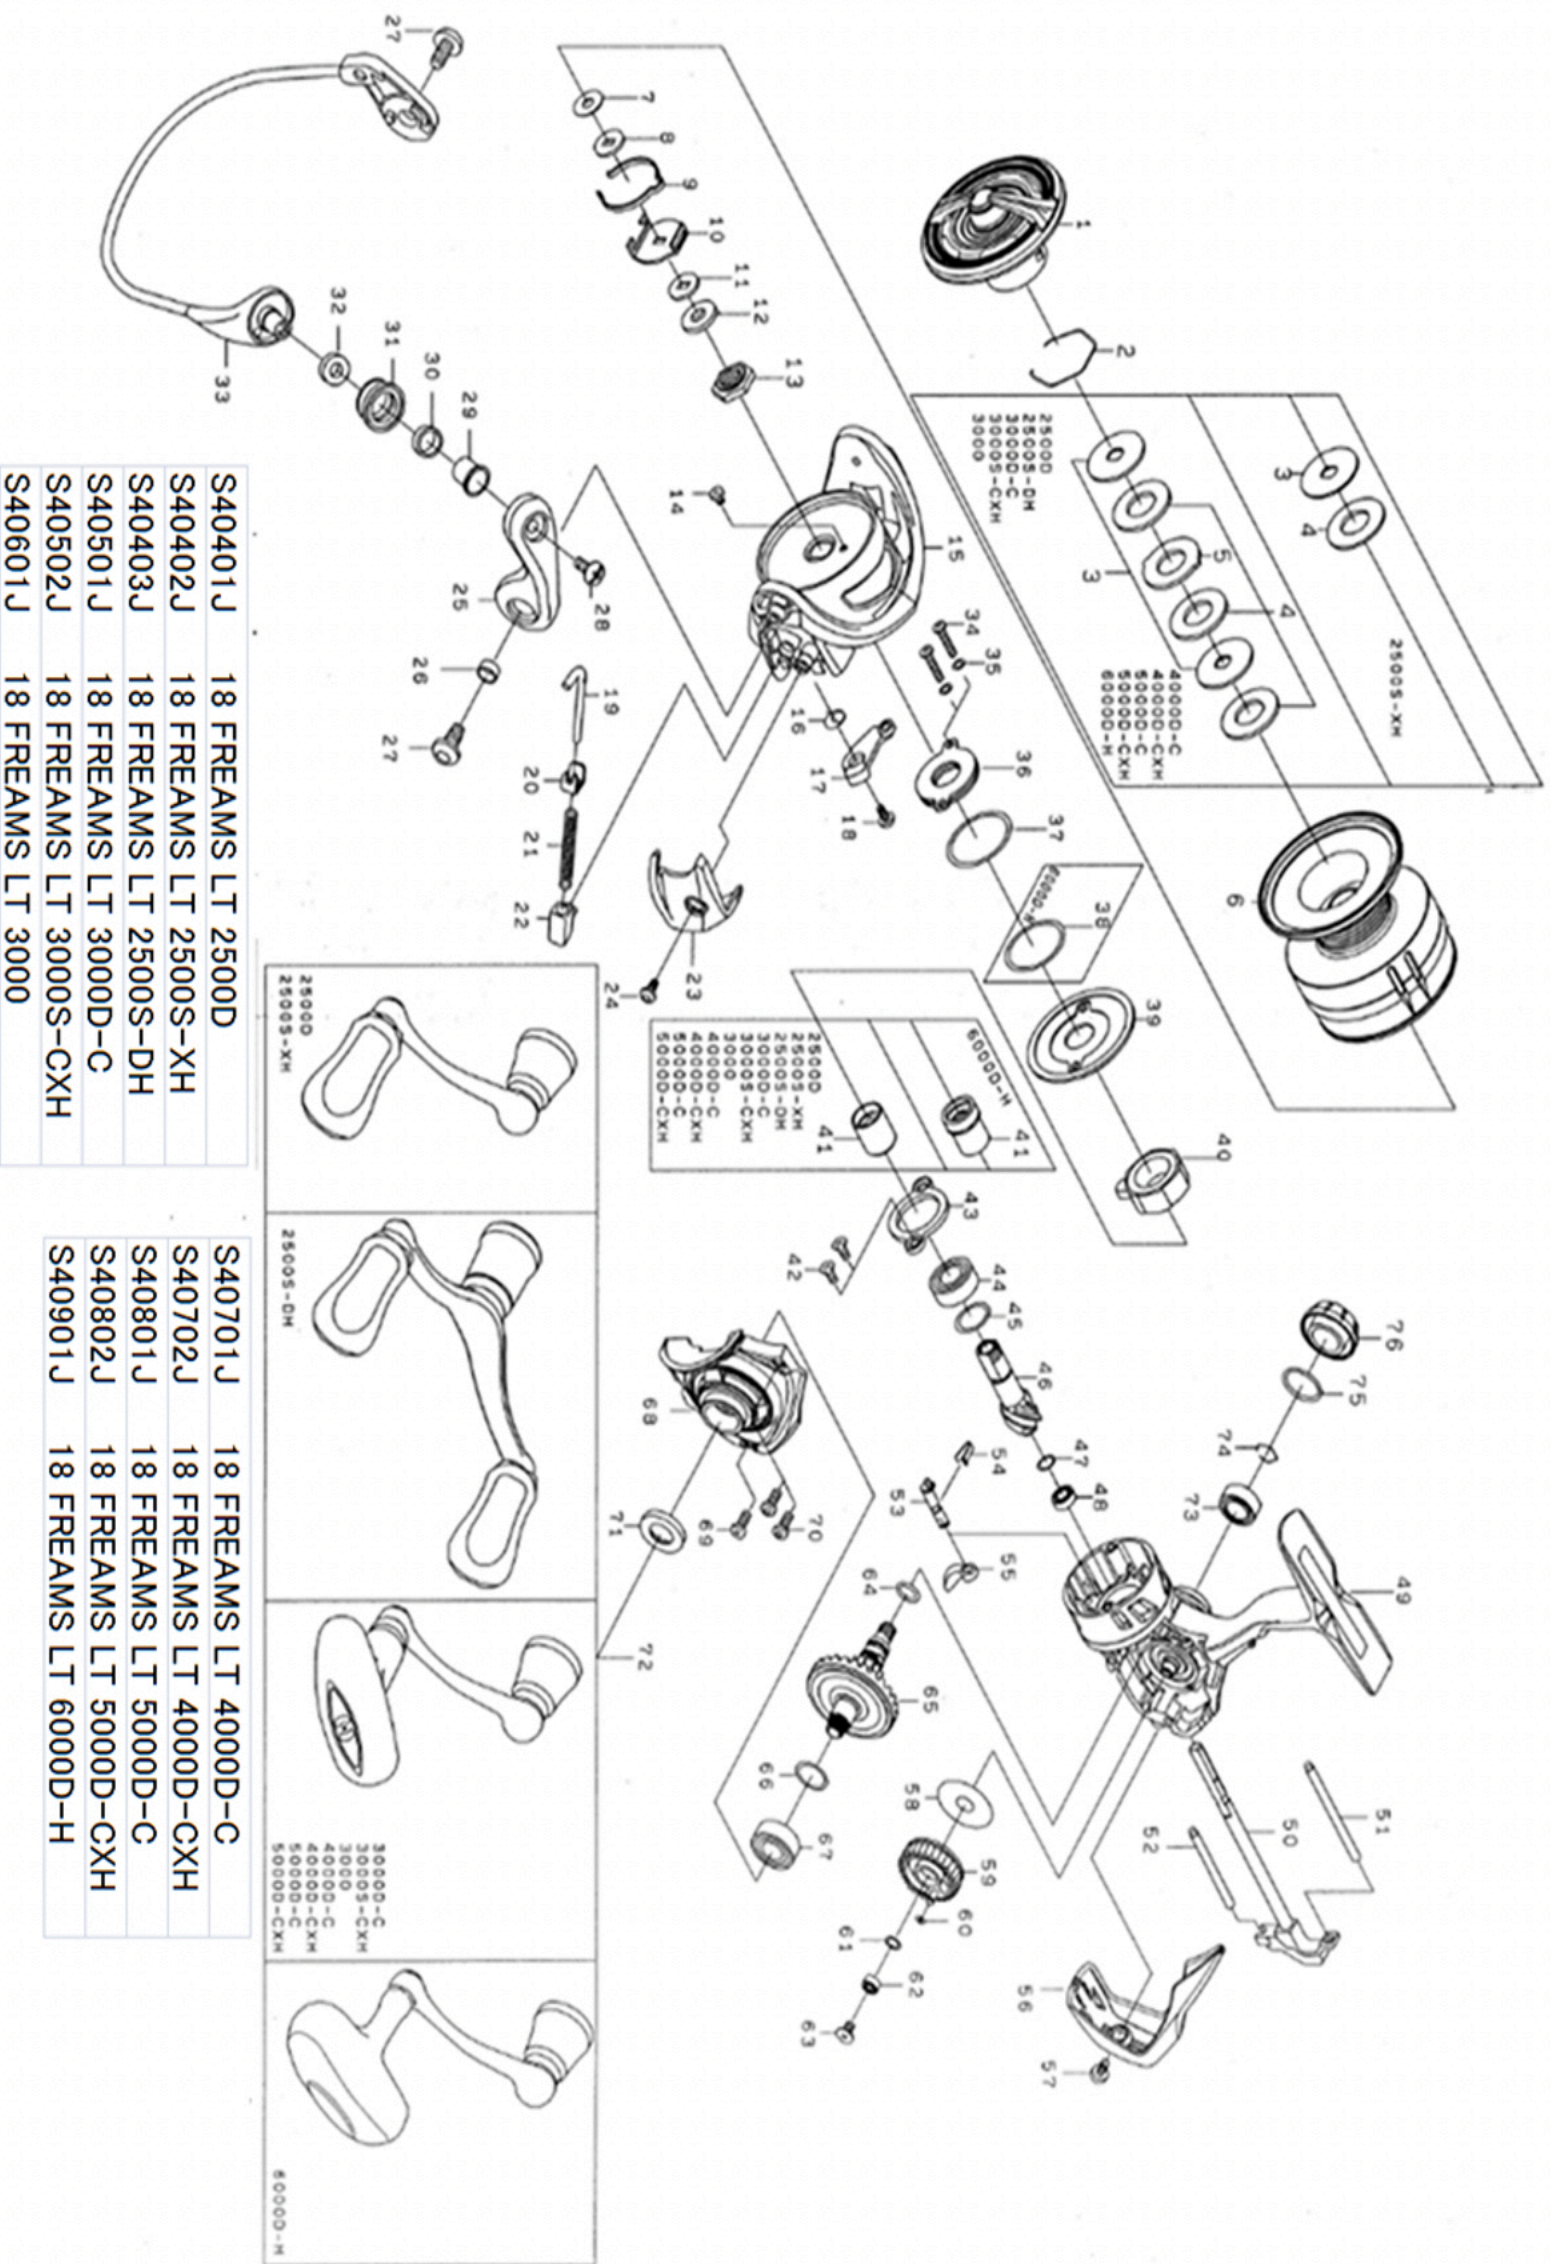

S40401J	18 FREAMS LT 2500D
S40402J	18 FREAMS LT 2500S-XH
S40403J	18 FREAMS LT 2500S-DH
S40501J	18 FREAMS LT 3000D-C
S40502J	18 FREAMS LT 3000S-CXH
S40601J	18 FREAMS LT 3000

S40701J	18 FREAMS LT 4000D-C
S40702J	18 FREAMS LT 4000D-CXH
S40801J	18 FREAMS LT 5000D-C
S40802J	18 FREAMS LT 5000D-CXH
S40901J	18 FREAMS LT 6000D-H

REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
18 FREAMS LT 5000D-C	S40801J	1	6Q352901	DRAG KNOB
18 FREAMS LT 5000D-C	S40801J	2	6Q346101	DRAG RING
18 FREAMS LT 5000D-C	S40801J	3	6J547001	DRAG DISK WASHER
18 FREAMS LT 5000D-C	S40801J	4	6J546801	ATD WASHER ASSY (1pack-3 pcs)
18 FREAMS LT 5000D-C	S40801J	5	6Q346001	DRAG LIP WASHER
18 FREAMS LT 5000D-C	S40801J	6	6Q366801	SPOOL ASSY ( 2-6 )
18 FREAMS LT 5000D-C	S40801J	7	6E398000	SPOOL WASHER (A)
18 FREAMS LT 5000D-C	S40801J	8	6Q348502	SPOOL WASHER (B)
18 FREAMS LT 5000D-C	S40801J	9	6J525101	CLICK LEAF SPRING
18 FREAMS LT 5000D-C	S40801J	10	6J546201	CLICK HOLDER
18 FREAMS LT 5000D-C	S40801J	11	6Q344001	CLICK HOLDER WASHER
18 FREAMS LT 5000D-C	S40801J	12	6H986901	ROTOR NUT PACKING
18 FREAMS LT 5000D-C	S40801J	13	6Q177001	ROTOR NUT
18 FREAMS LT 5000D-C	S40801J	14	6H022701	ROTOR NUT SCREW
18 FREAMS LT 5000D-C	S40801J	15	6Q129210	ROTOR
18 FREAMS LT 5000D-C	S40801J	16	6H413601	KICK LEVER SPRING
18 FREAMS LT 5000D-C	S40801J	17	6Q129301	KICK LEVER ASSY
18 FREAMS LT 5000D-C	S40801J	18	6H417701	KICK LEVER SCREW
18 FREAMS LT 5000D-C	S40801J	19	6Q129501	ARM LEVER SHAFT
18 FREAMS LT 5000D-C	S40801J	20	6H576101	ARM LEVER SHAFT PLATE
18 FREAMS LT 5000D-C	S40801J	21	6H414201	ARM LEVER SPRING
18 FREAMS LT 5000D-C	S40801J	22	6Q121501	ARM LEVER SPRING HOLDER
18 FREAMS LT 5000D-C	S40801J	23	6Q129601	ARM LEVER SPRING COVER
18 FREAMS LT 5000D-C	S40801J	24	6Q342901	ARM LEVER SPRING COVER SCREW
18 FREAMS LT 5000D-C	S40801J	25	6Q121611	ARM LEVER
18 FREAMS LT 5000D-C	S40801J	26	6Q121701	ARM LEVER SCREW COLLAR
18 FREAMS LT 5000D-C	S40801J	27	6Q343401	ARM LEVER SCREW
18 FREAMS LT 5000D-C	S40801J	28	6G195602	ROLLER SCREW
18 FREAMS LT 5000D-C	S40801J	29	6G195501	ROLLER COLLAR (A)
18 FREAMS LT 5000D-C	S40801J	30	6G220701	ROLLER COLLAR (B)
18 FREAMS LT 5000D-C	S40801J	31	6J089901	LINE ROLLER
18 FREAMS LT 5000D-C	S40801J	32	6Q203401	ROLLER COLLAR (C)
18 FREAMS LT 5000D-C	S40801J	33	6Q129701	BAIL ASSY
18 FREAMS LT 5000D-C	S40801J	34	6G837101	MAGSEALED PLATE SCREW
18 FREAMS LT 5000D-C	S40801J	35	63754102	MAGSEALED PLATE SCREW WASHER
18 FREAMS LT 5000D-C	S40801J	36	6J354401	MAGSEALED PLATE
18 FREAMS LT 5000D-C	S40801J	37	6J354801	MAGSEALED PLATE O-RING
18 FREAMS LT 5000D-C	S40801J	38	-----	
18 FREAMS LT 5000D-C	S40801J	39	6Q266601	MAGSEALED CAP
18 FREAMS LT 5000D-C	S40801J	40	6J388401	ONEWAY CLUTCH
18 FREAMS LT 5000D-C	S40801J	41	6J001402	CLUTCH RING
18 FREAMS LT 5000D-C	S40801J	42	6Q126201	PINION BEARING PLATE SCREW
18 FREAMS LT 5000D-C	S40801J	43	6Q195601	PINION BEARING PLATE
18 FREAMS LT 5000D-C	S40801J	44	6G535104	PINION BALL BEARING (A)
18 FREAMS LT 5000D-C	S40801J	45	63758500	PINION BEARING WASHER (A)
18 FREAMS LT 5000D-C	S40801J	46	6Q351201	PINION GEAR
18 FREAMS LT 5000D-C	S40801J	47	6H931701	PINION BEARING SPRING WASHER (B)
18 FREAMS LT 5000D-C	S40801J	48	6G466202	PINION BALL BEARING (B)
18 FREAMS LT 5000D-C	S40801J	49	6Q350301	BODY ASSY
18 FREAMS LT 5000D-C	S40801J	50	6Q351001	MAIN SHAFT
18 FREAMS LT 5000D-C	S40801J	51	6Q126302	OSCILLATING POST (A)
18 FREAMS LT 5000D-C	S40801J	52	6Q119102	OSCILLATING POST (B)
18 FREAMS LT 5000D-C	S40801J	53	6Q118101	STOPPER CAM
18 FREAMS LT 5000D-C	S40801J	54	6H697801	STOPPER CAM SPRING
18 FREAMS LT 5000D-C	S40801J	55	6Q118001	STOPPER LEVER
18 FREAMS LT 5000D-C	S40801J	56	6Q351701	REAR CAP
18 FREAMS LT 5000D-C	S40801J	57	6Q342901	REAR CAP SCREW
18 FREAMS LT 5000D-C	S40801J	58	6H595701	OSCILLATING GEAR WASHER
18 FREAMS LT 5000D-C	S40801J	59	6Q350901	OSCILLATING GEAR
18 FREAMS LT 5000D-C	S40801J	60	6G466001	OSCILLATING GEAR O-RING
18 FREAMS LT 5000D-C	S40801J	61	6H129200	OSCILLATING GEAR BALL BEARING WASHER
18 FREAMS LT 5000D-C	S40801J	62	6G469005	OSCILLATING GEAR BALL BEARING
18 FREAMS LT 5000D-C	S40801J	63	6Q126101	OSCILLATING GEAR SCREW
18 FREAMS LT 5000D-C	S40801J	64	6G670501	DRIVE GEAR O-RING
18 FREAMS LT 5000D-C	S40801J	65	6Q351301	DRIVE GEAR
18 FREAMS LT 5000D-C	S40801J	66	63758500	DRIVE GEAR BALL BEARING WASHER
18 FREAMS LT 5000D-C	S40801J	67	6G467302	DRIVE GEAR BALL BEARING (A)
18 FREAMS LT 5000D-C	S40801J	68	6Q351501	BODY COVER
18 FREAMS LT 5000D-C	S40801J	69	6Q342701	BODY COVER SCREW(A)
18 FREAMS LT 5000D-C	S40801J	70	6Q342601	BODY COVER SCREW(B)
18 FREAMS LT 5000D-C	S40801J	71	6J100201	HANDLE PACKING
18 FREAMS LT 5000D-C	S40801J	72	6Q367101	HANDLE ASSY
18 FREAMS LT 5000D-C	S40801J	73	6G522706	DRIVE GEAR BALL BEARING (B)
18 FREAMS LT 5000D-C	S40801J	74	6G472401	DRIVE GEAR BALL BEARING (B) RING
18 FREAMS LT 5000D-C	S40801J	75	6G162401	HANDLE CAP O-RING
18 FREAMS LT 5000D-C	S40801J	76	6Q345101	HANDLE CAP
18 FREAMS LT 5000D-C	S40801J	200	6Q176202	HANDLE KNOB
18 FREAMS LT 5000D-C	S40801J	201	6G720001	HANDLE KNOB BEARING
18 FREAMS LT 5000D-C	S40801J	202	6B679308	HANDLE KNOB SCREW
18 FREAMS LT 5000D-C	S40801J	203	6G598502	HANDLE KNOB CAP