 








# 18 FREAMS LT 6000D-H

Feel Alive.

Please quote by part number, not key number when ordering.  
[spares@daiwaaustralia.com.au](mailto:spares@daiwaaustralia.com.au) PH: (02) 8644 8644

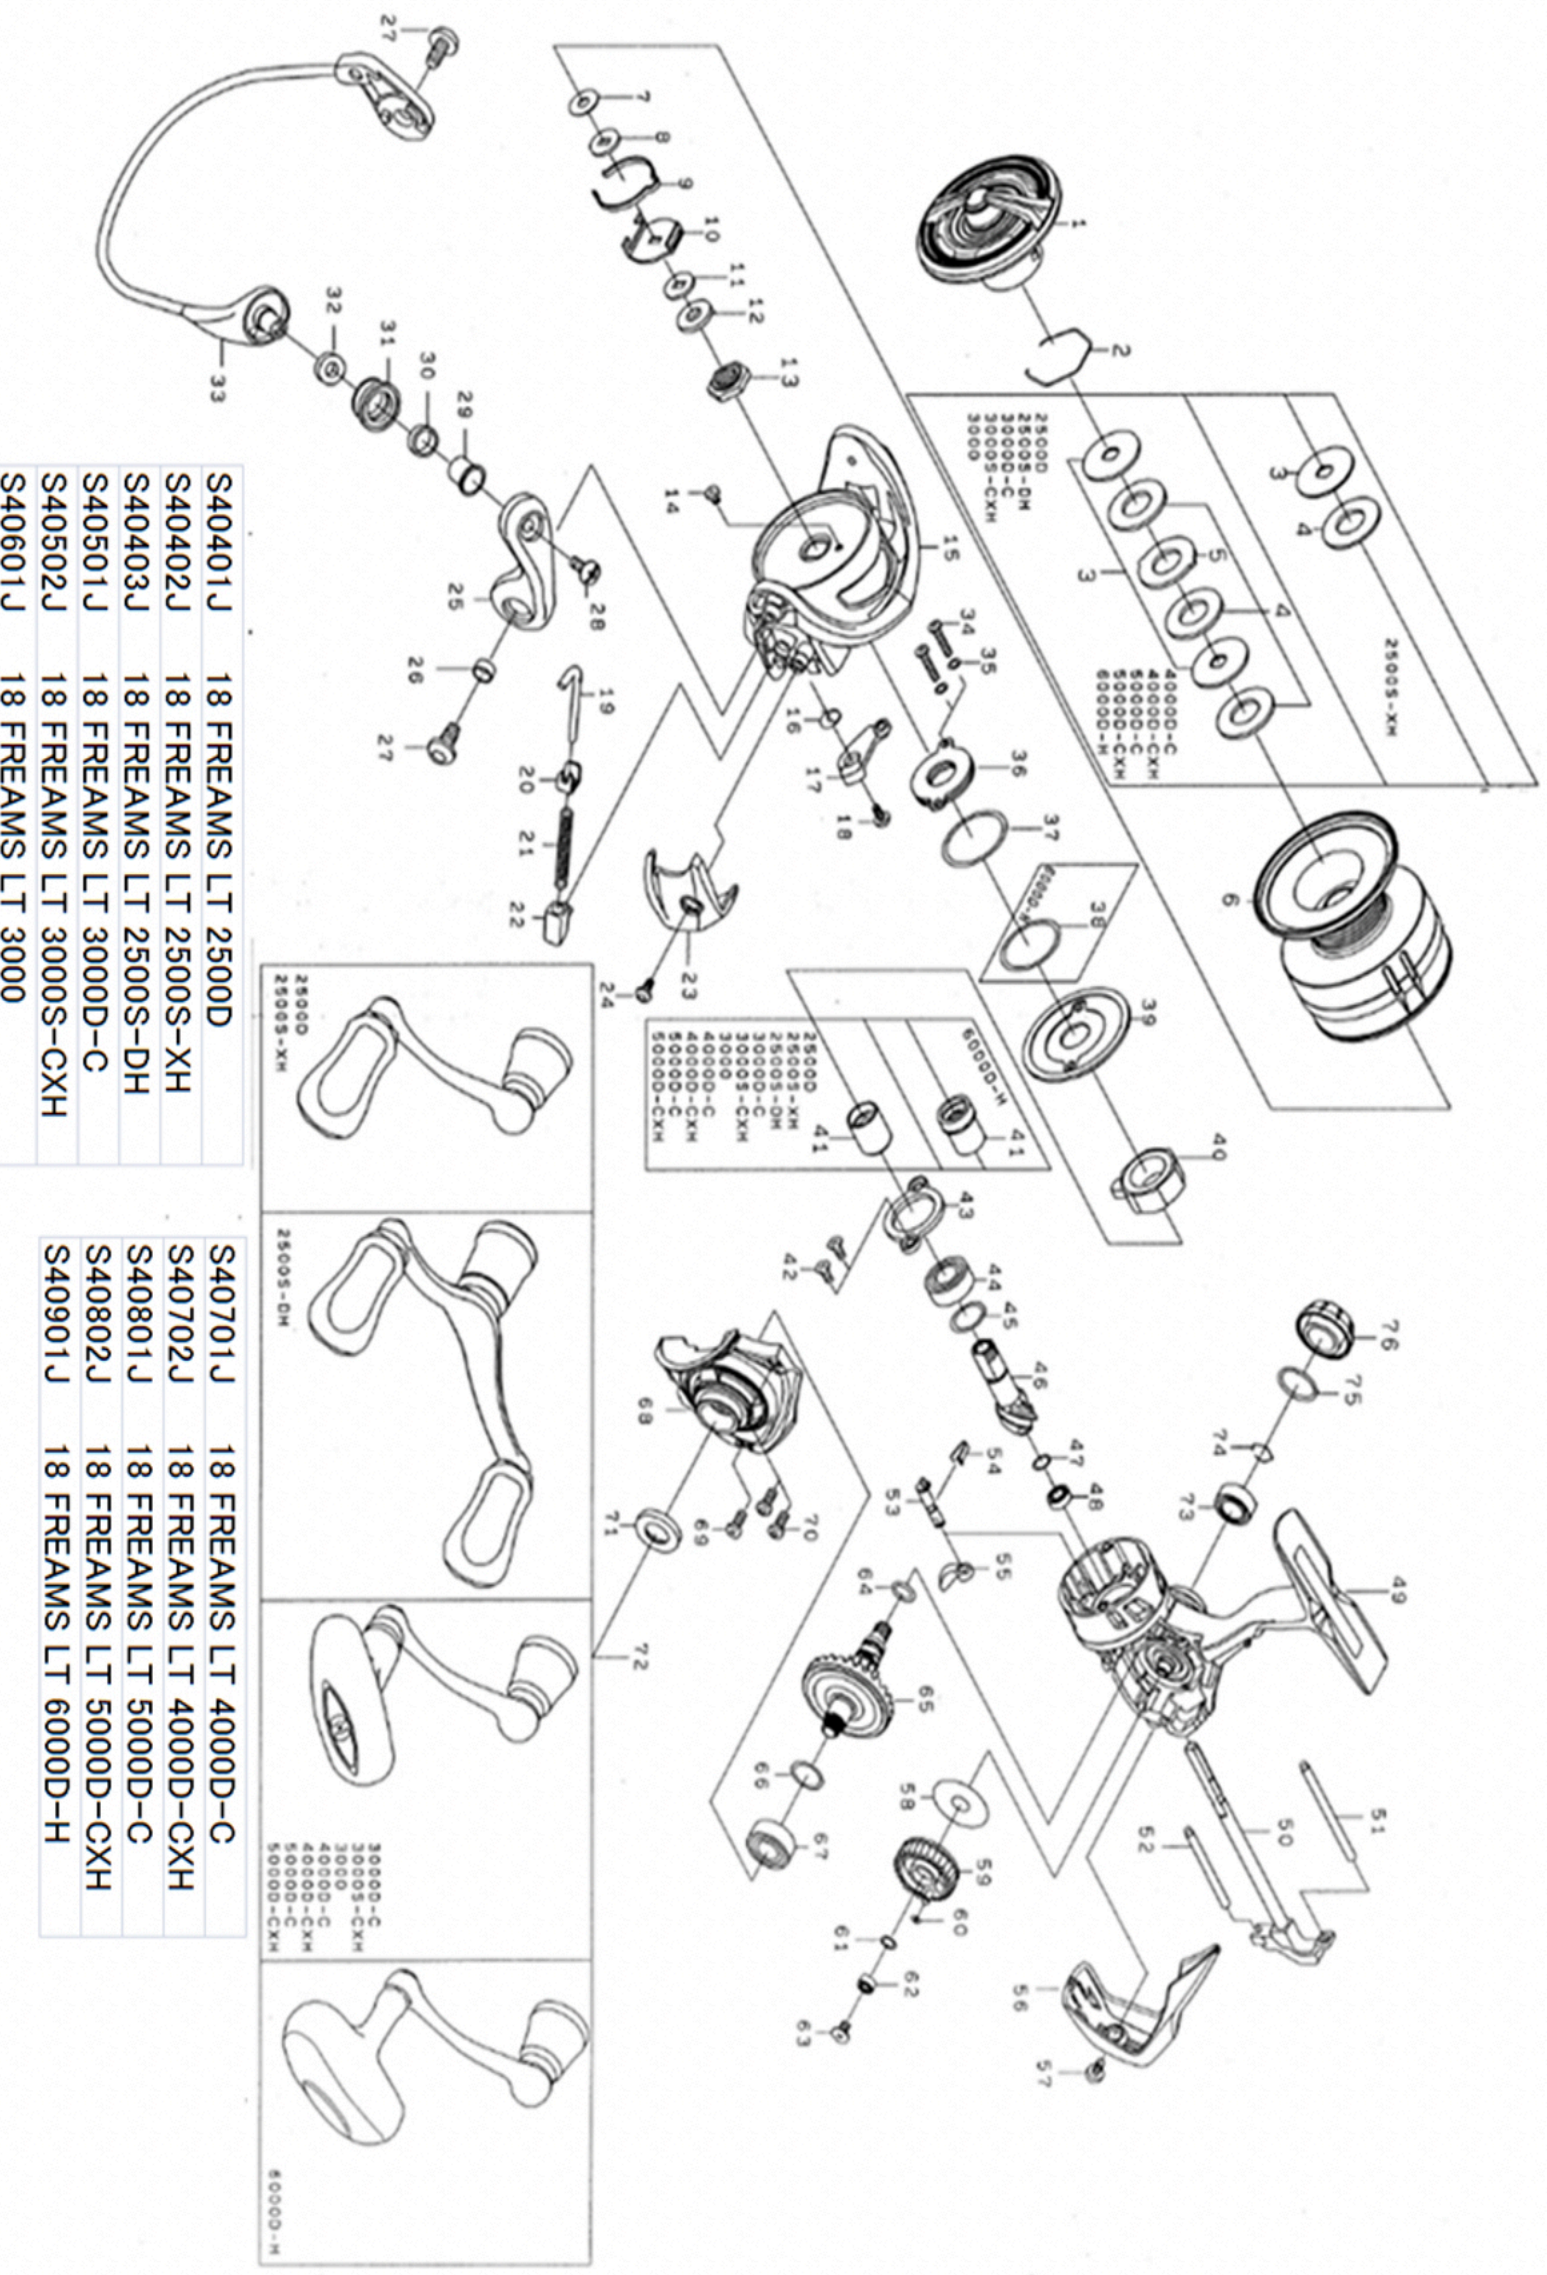

    S40401J	18 FREAMS LT 2500D
S40402J	18 FREAMS LT 2500S-XH
S40403J	18 FREAMS LT 2500S-DH
S40501J	18 FREAMS LT 3000D-C
S40502J	18 FREAMS LT 3000S-CXH
S40601J	18 FREAMS LT 3000

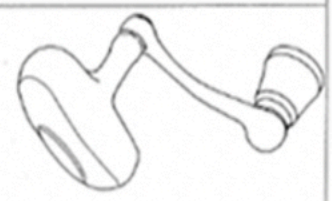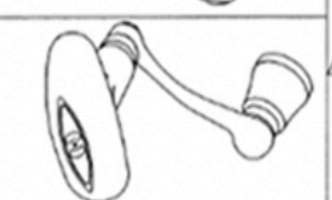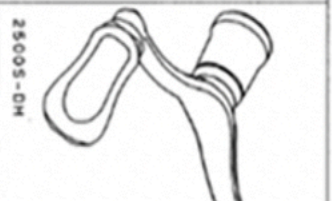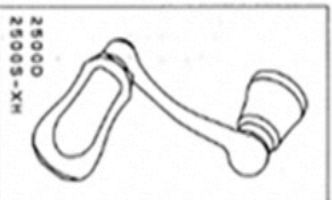

S40701J	18 FREAMS LT 4000D-C
S40702J	18 FREAMS LT 4000D-CXH
S40801J	18 FREAMS LT 5000D-C
S40802J	18 FREAMS LT 5000D-CXH
S40901J	18 FREAMS LT 6000D-H

REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
18 FREAMS LT 6000D-H	S40901J	1	6Q364201	DRAG KNOB
18 FREAMS LT 6000D-H	S40901J	2	61704101	DRAG RING
18 FREAMS LT 6000D-H	S40901J	3	6J577501	DRAG DISK WASHER
18 FREAMS LT 6000D-H	S40901J	4	6J577201	ATD WASHER ASSY (1pack-3pcs)
18 FREAMS LT 6000D-H	S40901J	5	6Q377601	DRAG LIP WASHER
18 FREAMS LT 6000D-H	S40901J	2~6	6Q363901	SPOOL ASSY ( 2-6 )
18 FREAMS LT 6000D-H	S40901J	7	6F050100	SPOOL WASHER (A)
18 FREAMS LT 6000D-H	S40901J	8	6Q363801	SPOOL WASHER (B)
18 FREAMS LT 6000D-H	S40901J	9	6J525101	CLICK LEAF SPRING
18 FREAMS LT 6000D-H	S40901J	10	6J576501	CLICK HOLDER
18 FREAMS LT 6000D-H	S40901J	11	6Q377501	CLICK HOLDER WASHER
18 FREAMS LT 6000D-H	S40901J	12	6H995201	ROTOR NUT PACKING
18 FREAMS LT 6000D-H	S40901J	13	6Q363701	ROTOR NUT
18 FREAMS LT 6000D-H	S40901J	14	6H022701	ROTOR NUT SCREW
18 FREAMS LT 6000D-H	S40901J	15	6Q134509	ROTOR
18 FREAMS LT 6000D-H	S40901J	16	6H413601	KICK LEVER SPRING
18 FREAMS LT 6000D-H	S40901J	17	6Q134601	KICK LEVER ASSY
18 FREAMS LT 6000D-H	S40901J	18	6H417701	KICK LEVER SCREW
18 FREAMS LT 6000D-H	S40901J	19	6Q134801	ARM LEVER SHAFT
18 FREAMS LT 6000D-H	S40901J	20	6H576101	ARM LEVER SHAFT PLATE
18 FREAMS LT 6000D-H	S40901J	21	6H640701	ARM LEVER SPRING
18 FREAMS LT 6000D-H	S40901J	22	6Q121501	ARM LEVER SPRING HOLDER
18 FREAMS LT 6000D-H	S40901J	23	6Q134901	ARM LEVER SPRING COVER
18 FREAMS LT 6000D-H	S40901J	24	6Q342901	ARM LEVER SPRING COVER SCREW
18 FREAMS LT 6000D-H	S40901J	25	6Q121611	ARM LEVER
18 FREAMS LT 6000D-H	S40901J	26	6Q121701	ARM LEVER SCREW COLLAR
18 FREAMS LT 6000D-H	S40901J	27	6Q343401	ARM LEVER SCREW
18 FREAMS LT 6000D-H	S40901J	28	6G195602	ROLLER SCREW
18 FREAMS LT 6000D-H	S40901J	29	6G195501	ROLLER COLLAR (A)
18 FREAMS LT 6000D-H	S40901J	30	6G220701	ROLLER COLLAR (B)
18 FREAMS LT 6000D-H	S40901J	31	6J089901	LINE ROLLER
18 FREAMS LT 6000D-H	S40901J	32	6Q203401	ROLLER COLLAR (C)
18 FREAMS LT 6000D-H	S40901J	33	6Q135001	BAIL ASSY
18 FREAMS LT 6000D-H	S40901J	34	6G837101	MAGSEALED PLATE SCREW
18 FREAMS LT 6000D-H	S40901J	35	63754102	MAGSEALED PLATE SCREW WASHER
18 FREAMS LT 6000D-H	S40901J	36	6J289301	MAGSEALED PLATE
18 FREAMS LT 6000D-H	S40901J	37	6J212901	MAGSEALED PLATE O-RING
18 FREAMS LT 6000D-H	S40901J	38	6J238801	MAGSEALED CAP WASHER
18 FREAMS LT 6000D-H	S40901J	39	6Q363501	MAGSEALED CAP
18 FREAMS LT 6000D-H	S40901J	40	6J309101	ONEWAY CLUTCH
18 FREAMS LT 6000D-H	S40901J	41	6J397301	CLUTCH RING
18 FREAMS LT 6000D-H	S40901J	42	6Q195701	PINION BEARING PLATE SCREW
18 FREAMS LT 6000D-H	S40901J	43	6Q205901	PINION BEARING PLATE
18 FREAMS LT 6000D-H	S40901J	44	66354801	PINION BALL BEARING (A)
18 FREAMS LT 6000D-H	S40901J	45	63712800	PINION BEARING WASHER (A)
18 FREAMS LT 6000D-H	S40901J	46	6Q366401	PINION GEAR
18 FREAMS LT 6000D-H	S40901J	47	6G572501	PINION BEARING SPRING WASHER (B)
18 FREAMS LT 6000D-H	S40901J	48	6G467106	PINION BALL BEARING (B)
18 FREAMS LT 6000D-H	S40901J	49	6Q362001	BODY ASSY
18 FREAMS LT 6000D-H	S40901J	50	6Q362601	MAIN SHAFT
18 FREAMS LT 6000D-H	S40901J	51	6Q126303	OSCILLATING POST (A)
18 FREAMS LT 6000D-H	S40901J	52	6Q119103	OSCILLATING POST (B)
18 FREAMS LT 6000D-H	S40901J	53	6Q133401	STOPPER CAM
18 FREAMS LT 6000D-H	S40901J	54	6H697801	STOPPER CAM SPRING
18 FREAMS LT 6000D-H	S40901J	55	6Q118001	STOPPER LEVER
18 FREAMS LT 6000D-H	S40901J	56	6Q363601	REAR CAP
18 FREAMS LT 6000D-H	S40901J	57	6Q342901	REAR CAP SCREW
18 FREAMS LT 6000D-H	S40901J	58	6G644201	OSCILLATING GEAR WASHER
18 FREAMS LT 6000D-H	S40901J	59	6Q133501	OSCILLATING GEAR
18 FREAMS LT 6000D-H	S40901J	60	6B853101	OSCILLATING GEAR O-RING
18 FREAMS LT 6000D-H	S40901J	61	6G522100	OSCILLATING GEAR BALL BEARING WASHER
18 FREAMS LT 6000D-H	S40901J	62	6G467105	OSCILLATING GEAR BALL BEARING
18 FREAMS LT 6000D-H	S40901J	63	6H463401	OSCILLATING GEAR SCREW
18 FREAMS LT 6000D-H	S40901J	64	6G645301	DRIVE GEAR O-RING
18 FREAMS LT 6000D-H	S40901J	65	6Q362801	DRIVE GEAR
18 FREAMS LT 6000D-H	S40901J	66	63737800	DRIVE GEAR BALL BEARING WASHER
18 FREAMS LT 6000D-H	S40901J	67	6G523405	DRIVE GEAR BALL BEARING (A)
18 FREAMS LT 6000D-H	S40901J	68	6Q363301	BODY COVER
18 FREAMS LT 6000D-H	S40901J	69	6Q342701	BODY COVER SCREW(A)
18 FREAMS LT 6000D-H	S40901J	70	6Q342601	BODY COVER SCREW(B)
18 FREAMS LT 6000D-H	S40901J	71	6H730801	HANDLE PACKING
18 FREAMS LT 6000D-H	S40901J	72	6Q364301	HANDLE ASSY
18 FREAMS LT 6000D-H	S40901J	73	6B861705	DRIVE GEAR BALL BEARING (B)
18 FREAMS LT 6000D-H	S40901J	74	6G525101	DRIVE GEAR BALL BEARING (B) RING
18 FREAMS LT 6000D-H	S40901J	75	6G672401	HANDLE CAP O-RING
18 FREAMS LT 6000D-H	S40901J	76	6Q364801	HANDLE CAP
18 FREAMS LT 6000D-H	S40901J	200	6Q176202	HANDLE KNOB
18 FREAMS LT 6000D-H	S40901J	201	6G720001	HANDLE KNOB BEARING
18 FREAMS LT 6000D-H	S40901J	202	6B679308	HANDLE KNOB SCREW
18 FREAMS LT 6000D-H	S40901J	203	6G598502	HANDLE KNOB CAP
18 FREAMS LT 6000D-H	S40901J	204	6G476201	SCREW