




20 LAGUANA LT 2000A

Feel Alive.

Please quote by part number, not key number when ordering.
spares@daiwaaustralia.com.au PH: (02) 8644 8644

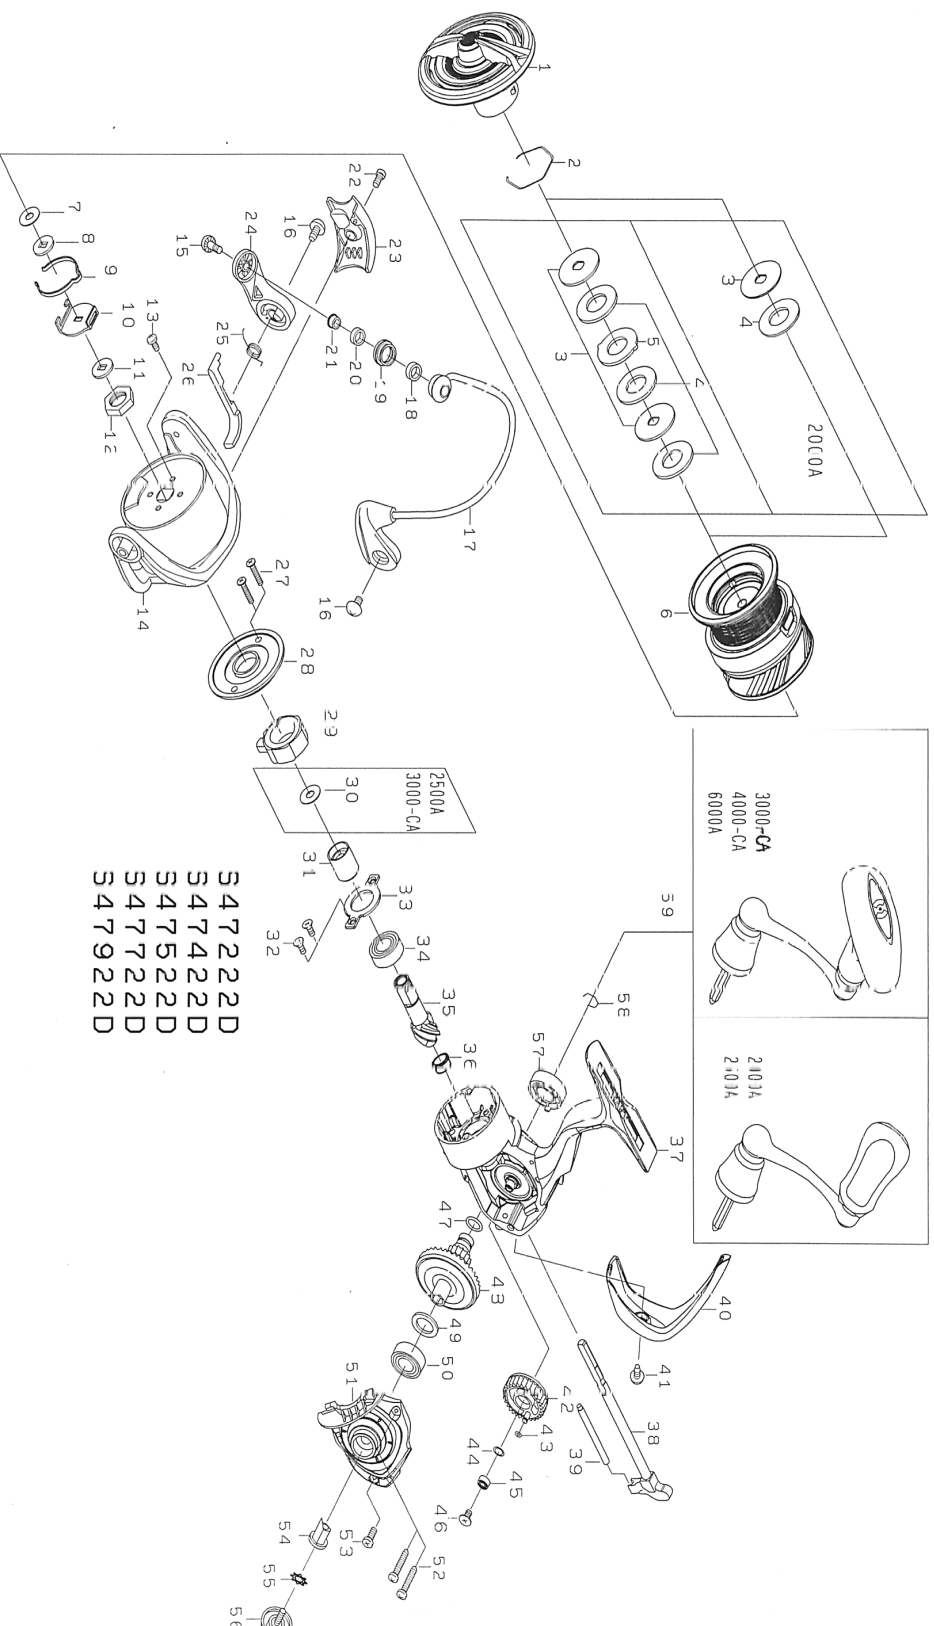

REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
20 LAGUANA LT 2000A		1	6Q593901	Drag Knob
20 LAGUANA LT 2000A		2	6Q346101	Drag Washer Retainer
20 LAGUANA LT 2000A		3	6Q621901	Key Washer
20 LAGUANA LT 2000A		4	6J546801	Drag Washer
20 LAGUANA LT 2000A		5	-----	Eared Washer
20 LAGUANA LT 2000A		2~6	6Q673601	Spool Assembly
20 LAGUANA LT 2000A		7	6E398000	Washer (A)
20 LAGUANA LT 2000A		8	6Q348502	Washer (B)
20 LAGUANA LT 2000A		9	6H416101	Spool Click Leaf Spring
20 LAGUANA LT 2000A		10	6M021401	Click Leaf Spring Holder
20 LAGUANA LT 2000A		11	6Q344001	Washer (C)
20 LAGUANA LT 2000A		12	6Q122401	Rotor Nut
20 LAGUANA LT 2000A		13	6G627701	Screw (A)
20 LAGUANA LT 2000A		14	6Q527003	Rotor
20 LAGUANA LT 2000A		15	6G195602	Screw (B)
20 LAGUANA LT 2000A		16	6G205001	Screw (C)
20 LAGUANA LT 2000A		17	6Q527101	Bail Assembly
20 LAGUANA LT 2000A		18	6Q203401	Collar (A)
20 LAGUANA LT 2000A		19	6F625005	Line Roller
20 LAGUANA LT 2000A		20	6G874301	Collar (B)
20 LAGUANA LT 2000A		21	6G152502	Collar (C)
20 LAGUANA LT 2000A		22	6G270801	Screw (D)
20 LAGUANA LT 2000A		23	6Q273602	Cover A
20 LAGUANA LT 2000A		24	6G838801	Bail Arm
20 LAGUANA LT 2000A		25	6F777901	Bail Spring
20 LAGUANA LT 2000A		26	6Q348801	Bail Trip Lever
20 LAGUANA LT 2000A		27	6G837101	Screw (E)
20 LAGUANA LT 2000A		28	6Q519301	Cap
20 LAGUANA LT 2000A		29	6Q308301	Roller Clutch
20 LAGUANA LT 2000A		30	-----	Washer (D)
20 LAGUANA LT 2000A		31	6Q196101	Spacing Sleeve
20 LAGUANA LT 2000A		32	6Q195701	Screw (F)
20 LAGUANA LT 2000A		33	6Q195601	Bearing Retainer (A)
20 LAGUANA LT 2000A		34	6G467302	Ball Bearing (A)
20 LAGUANA LT 2000A		35	6Q586701	Pinion Gear
20 LAGUANA LT 2000A		36	6Q419201	Collar (D)
20 LAGUANA LT 2000A		37	6Q526406	Body
20 LAGUANA LT 2000A		38	6Q526501	Main Shaft
20 LAGUANA LT 2000A		39	6Q583804	Stabilizer Bar
20 LAGUANA LT 2000A		40	6Q526901	Rear Cover
20 LAGUANA LT 2000A		41	6G270801	Screw (G)
20 LAGUANA LT 2000A		42	6Q375201	Oscillate Gear
20 LAGUANA LT 2000A		43	6H770601	"O"-Ring (A)
20 LAGUANA LT 2000A		44	6H129200	Washer (E)
20 LAGUANA LT 2000A		45	6G469005	Ball Bearing (B)
20 LAGUANA LT 2000A		46	6Q126101	Screw (H)
20 LAGUANA LT 2000A		47	6G670501	"O"-Ring (B)
20 LAGUANA LT 2000A		48	6Q375901	Drive Gear
20 LAGUANA LT 2000A		49	63758500	Washer (F)
20 LAGUANA LT 2000A		50	6G467302	Ball Bearing (C)
20 LAGUANA LT 2000A		51	6Q526806	Side Cover
20 LAGUANA LT 2000A		52	6G115001	Screw (I)
20 LAGUANA LT 2000A		53	6Q342701	Screw (J)
20 LAGUANA LT 2000A		54	6F721001	Collar (E)
20 LAGUANA LT 2000A		55	61608401	Washer (G)
20 LAGUANA LT 2000A		56	6Q132401	Handle Screw
20 LAGUANA LT 2000A		57	6H022001	Bearing
20 LAGUANA LT 2000A		58	6G472401	Bearing Retainer (B)
20 LAGUANA LT 2000A		59	6Q637301	Handle Assembly

