




# 20 LAGUANA LT 3000-CA

Feel Alive.

Please quote by part number, not key number when ordering.  
spares@daiwaaustralia.com.au PH: (02) 8644 8644

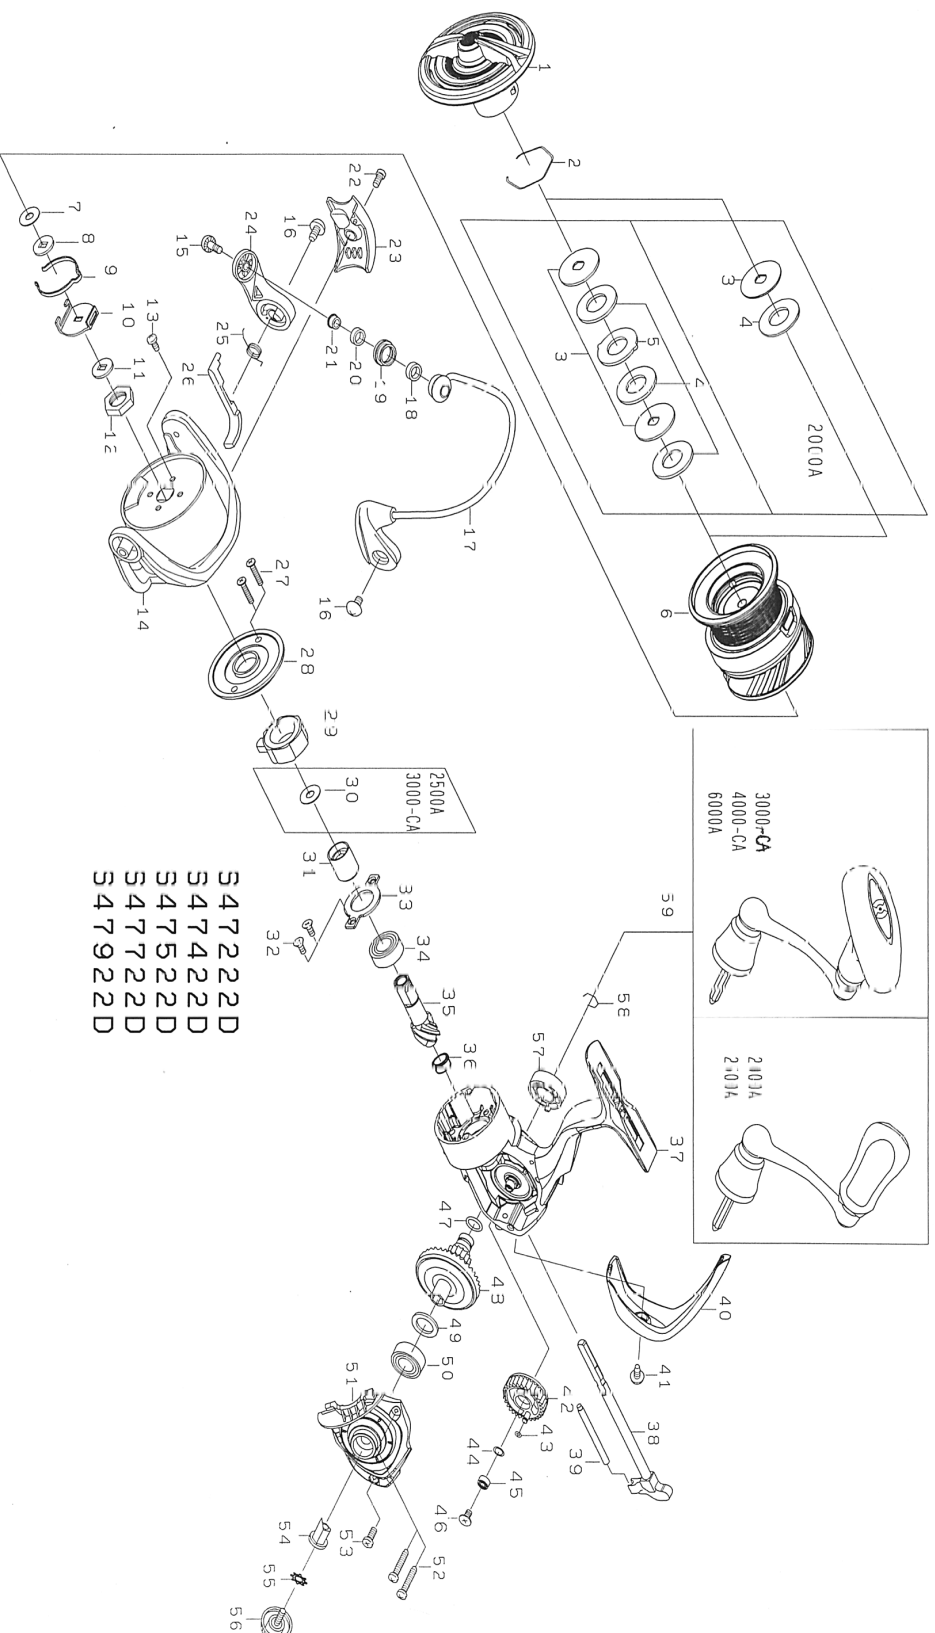

REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
20 LAGUANA LT 3000-CA		1	6Q595001	Drag Knob
20 LAGUANA LT 3000-CA		2	6Q346101	Drag Washer Retainer
20 LAGUANA LT 3000-CA		3	6Q621901	Key Washer
20 LAGUANA LT 3000-CA		4	6J546801	Drag Washer
20 LAGUANA LT 3000-CA		5	6Q346001	Eared Washer
20 LAGUANA LT 3000-CA		2~6	6Q674001	Spool Assembly
20 LAGUANA LT 3000-CA		7	6E398000	Washer (A)
20 LAGUANA LT 3000-CA		8	6Q348502	Washer (B)
20 LAGUANA LT 3000-CA		9	6H416101	Spool Click Leaf Spring
20 LAGUANA LT 3000-CA		10	6M021401	Click Leaf Spring Holder
20 LAGUANA LT 3000-CA		11	6Q344001	Washer (C)
20 LAGUANA LT 3000-CA		12	6Q122401	Rotor Nut
20 LAGUANA LT 3000-CA		13	6G627701	Screw (A)
20 LAGUANA LT 3000-CA		14	6Q519503	Rotor
20 LAGUANA LT 3000-CA		15	6G195602	Screw (B)
20 LAGUANA LT 3000-CA		16	6G205001	Screw (C)
20 LAGUANA LT 3000-CA		17	6Q519601	Bail Assembly
20 LAGUANA LT 3000-CA		18	6Q203401	Collar (A)
20 LAGUANA LT 3000-CA		19	6F625005	Line Roller
20 LAGUANA LT 3000-CA		20	6G874301	Collar (B)
20 LAGUANA LT 3000-CA		21	6G152502	Collar (C)
20 LAGUANA LT 3000-CA		22	6G270801	Screw (D)
20 LAGUANA LT 3000-CA		23	6Q273702	Cover A
20 LAGUANA LT 3000-CA		24	6G838801	Bail Arm
20 LAGUANA LT 3000-CA		25	6F800701	Bail Spring
20 LAGUANA LT 3000-CA		26	6Q348401	Bail Trip Lever
20 LAGUANA LT 3000-CA		27	6G837101	Screw (E)
20 LAGUANA LT 3000-CA		28	6Q519301	Cap
20 LAGUANA LT 3000-CA		29	6Q308301	Roller Clutch
20 LAGUANA LT 3000-CA		30	63758500	Washer (D)
20 LAGUANA LT 3000-CA		31	6Q196101	Spacing Sleeve
20 LAGUANA LT 3000-CA		32	6Q195701	Screw (F)
20 LAGUANA LT 3000-CA		33	6Q195601	Bearing Retainer (A)
20 LAGUANA LT 3000-CA		34	6G467302	Ball Bearing (A)
20 LAGUANA LT 3000-CA		35	6Q582701	Pinion Gear
20 LAGUANA LT 3000-CA		36	6Q419201	Collar (D)
20 LAGUANA LT 3000-CA		37	6Q518806	Body
20 LAGUANA LT 3000-CA		38	6Q545301	Main Shaft
20 LAGUANA LT 3000-CA		39	6Q583801	Stabilizer Bar
20 LAGUANA LT 3000-CA		40	6Q519401	Rear Cover
20 LAGUANA LT 3000-CA		41	6G270801	Screw (G)
20 LAGUANA LT 3000-CA		42	6Q118401	Oscillate Gear
20 LAGUANA LT 3000-CA		43	6H770601	"O"-Ring (A)
20 LAGUANA LT 3000-CA		44	6H129200	Washer (E)
20 LAGUANA LT 3000-CA		45	6G469005	Ball Bearing (B)
20 LAGUANA LT 3000-CA		46	6Q126101	Screw (H)
20 LAGUANA LT 3000-CA		47	6G670501	"O"-Ring (B)
20 LAGUANA LT 3000-CA		48	6Q341901	Drive Gear
20 LAGUANA LT 3000-CA		49	63758500	Washer (F)
20 LAGUANA LT 3000-CA		50	6G467302	Ball Bearing (C)
20 LAGUANA LT 3000-CA		51	6Q519206	Side Cover
20 LAGUANA LT 3000-CA		52	6G115001	Screw (I)
20 LAGUANA LT 3000-CA		53	-----	Screw (J)
20 LAGUANA LT 3000-CA		54	6F721001	Collar (E)
20 LAGUANA LT 3000-CA		55	61608401	Washer (G)
20 LAGUANA LT 3000-CA		56	6Q132401	Handle Screw
20 LAGUANA LT 3000-CA		57	6H022001	Bearing
20 LAGUANA LT 3000-CA		58	6G472401	Bearing Retainer (B)
20 LAGUANA LT 3000-CA		59	6Q634601	Handle Assembly

