




20 LAGUANA LT 6000-CA

Feel Alive.

Please quote by part number, not key number when ordering.
spares@daiwaaustralia.com.au PH: (02) 8644 8644

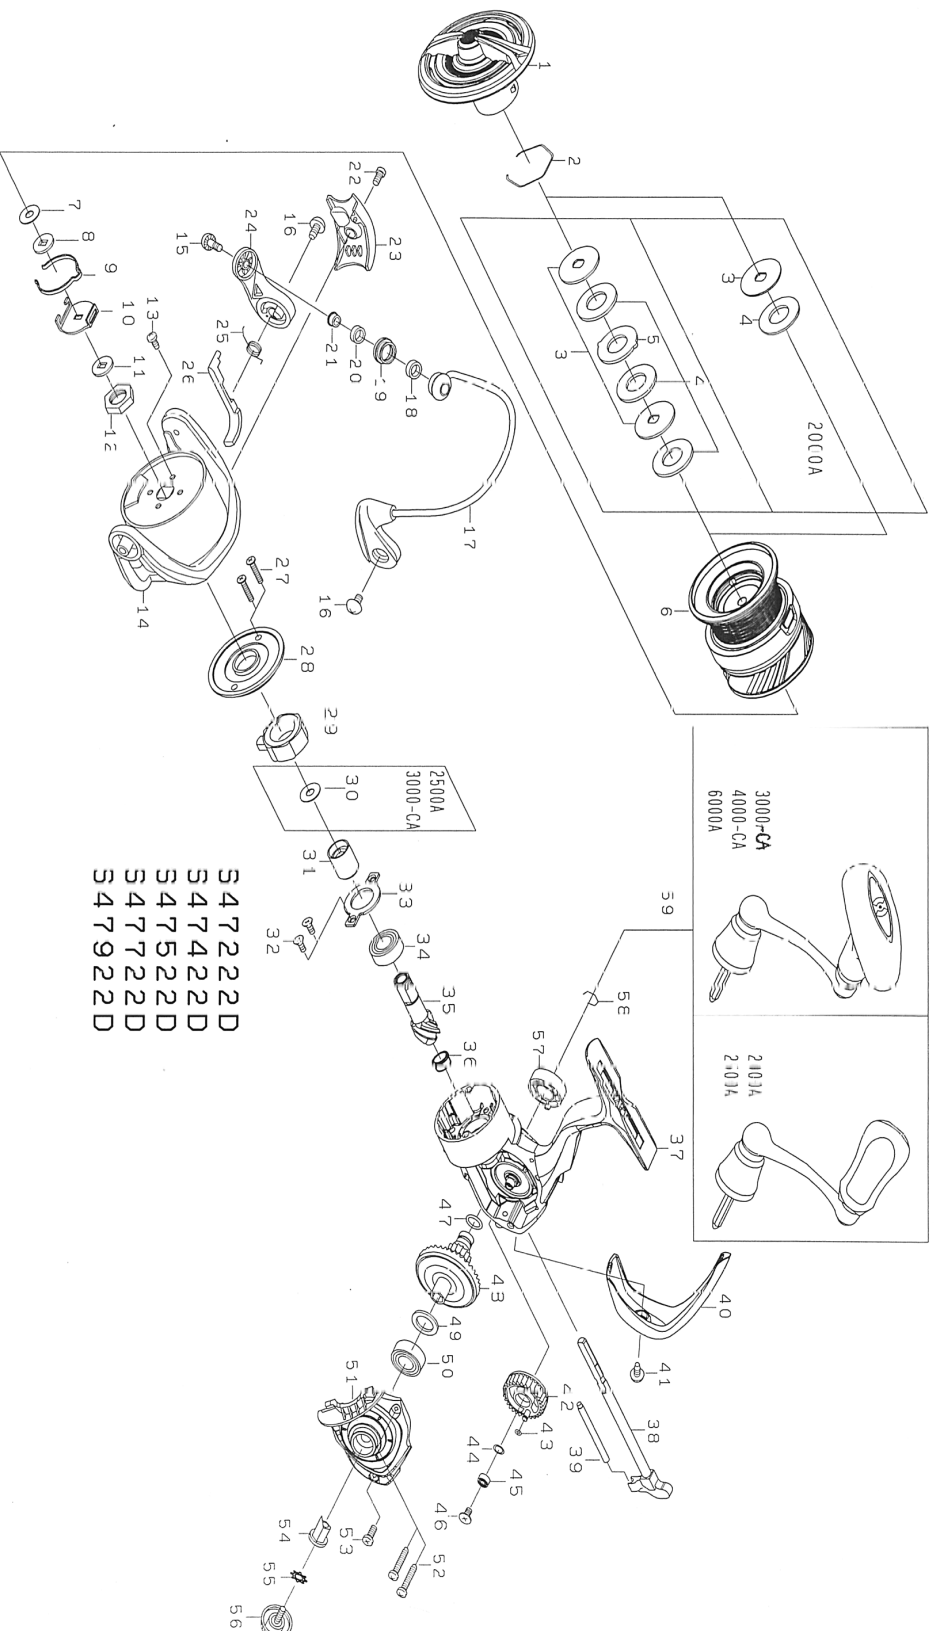

REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
20 LAGUANA LT 6000-CA		1	6Q595901	Drag Knob
20 LAGUANA LT 6000-CA		2	61704101	Drag Washer Retainer
20 LAGUANA LT 6000-CA		3	6J577501	Key Washer
20 LAGUANA LT 6000-CA		4	6J577201	Drag Washer
20 LAGUANA LT 6000-CA		5	6Q377601	Eared Washer
20 LAGUANA LT 6000-CA		2~6	6Q674401	Spool Assembly
20 LAGUANA LT 6000-CA		7	6F050100	Washer (A)
20 LAGUANA LT 6000-CA		8	6Q363801	Washer (B)
20 LAGUANA LT 6000-CA		9	6H416101	Spool Click Leaf Spring
20 LAGUANA LT 6000-CA		10	6M021501	Click Leaf Spring Holder
20 LAGUANA LT 6000-CA		11	6Q377501	Washer (C)
20 LAGUANA LT 6000-CA		12	6G123301	Rotor Nut
20 LAGUANA LT 6000-CA		13	6G627701	Screw (A)
20 LAGUANA LT 6000-CA		14	6G844148	Rotor
20 LAGUANA LT 6000-CA		15	6G195602	Screw (B)
20 LAGUANA LT 6000-CA		16	6G205001	Screw (C)
20 LAGUANA LT 6000-CA		17	6Q536401	Bail Assembly
20 LAGUANA LT 6000-CA		18	6Q203401	Collar (A)
20 LAGUANA LT 6000-CA		19	6F625005	Line Roller
20 LAGUANA LT 6000-CA		20	6G874301	Collar (B)
20 LAGUANA LT 6000-CA		21	6G152502	Collar (C)
20 LAGUANA LT 6000-CA		22	6G270801	Screw (D)
20 LAGUANA LT 6000-CA		23	6G844303	Cover A
20 LAGUANA LT 6000-CA		24	6G838801	Bail Arm
20 LAGUANA LT 6000-CA		25	6F800701	Bail Spring
20 LAGUANA LT 6000-CA		26	6G844201	Bail Trip Lever
20 LAGUANA LT 6000-CA		27	6G837101	Screw (E)
20 LAGUANA LT 6000-CA		28	6Q206401	Cap
20 LAGUANA LT 6000-CA		29	6J015701	Roller Clutch
20 LAGUANA LT 6000-CA		30	-----	Washer (D)
20 LAGUANA LT 6000-CA		31	6Q206301	Spacing Sleeve
20 LAGUANA LT 6000-CA		32	6Q195701	Screw (F)
20 LAGUANA LT 6000-CA		33	6Q205901	Bearing Retainer (A)
20 LAGUANA LT 6000-CA		34	6H735002	Ball Bearing (A)
20 LAGUANA LT 6000-CA		35	6Q586801	Pinion Gear
20 LAGUANA LT 6000-CA		36	6Q175201	Collar (D)
20 LAGUANA LT 6000-CA		37	6Q535906	Body
20 LAGUANA LT 6000-CA		38	6Q536201	Main Shaft
20 LAGUANA LT 6000-CA		39	6Q583803	Stabilizer Bar
20 LAGUANA LT 6000-CA		40	6Q536601	Rear Cover
20 LAGUANA LT 6000-CA		41	6G270801	Screw (G)
20 LAGUANA LT 6000-CA		42	6Q133501	Oscillate Gear
20 LAGUANA LT 6000-CA		43	6B853101	"O"-Ring (A)
20 LAGUANA LT 6000-CA		44	6G522100	Washer (E)
20 LAGUANA LT 6000-CA		45	6G467105	Ball Bearing (B)
20 LAGUANA LT 6000-CA		46	6H463401	Screw (H)
20 LAGUANA LT 6000-CA		47	6G645301	"O"-Ring (B)
20 LAGUANA LT 6000-CA		48	6Q405103	Drive Gear
20 LAGUANA LT 6000-CA		49	63737800	Washer (F)
20 LAGUANA LT 6000-CA		50	6G523405	Ball Bearing (C)
20 LAGUANA LT 6000-CA		51	6Q536006	Side Cover
20 LAGUANA LT 6000-CA		52	6G115001	Screw (I)
20 LAGUANA LT 6000-CA		53	-----	Screw (J)
20 LAGUANA LT 6000-CA		54	6F721202	Collar (F)
20 LAGUANA LT 6000-CA		55	61608401	Washer (G)
20 LAGUANA LT 6000-CA		56	6Q136101	Handle Screw
20 LAGUANA LT 6000-CA		57	6Q175401	Bearing
20 LAGUANA LT 6000-CA		58	6G525101	Bearing Retainer (B)
20 LAGUANA LT 6000-CA		59	6Q634901	Handle Assembly

