




SPINNING REEL

LEGALIS 3000H

Please order by parts number, not key number
 Veuillez indiquer le numéro de la pièce (Non "Key" No.)

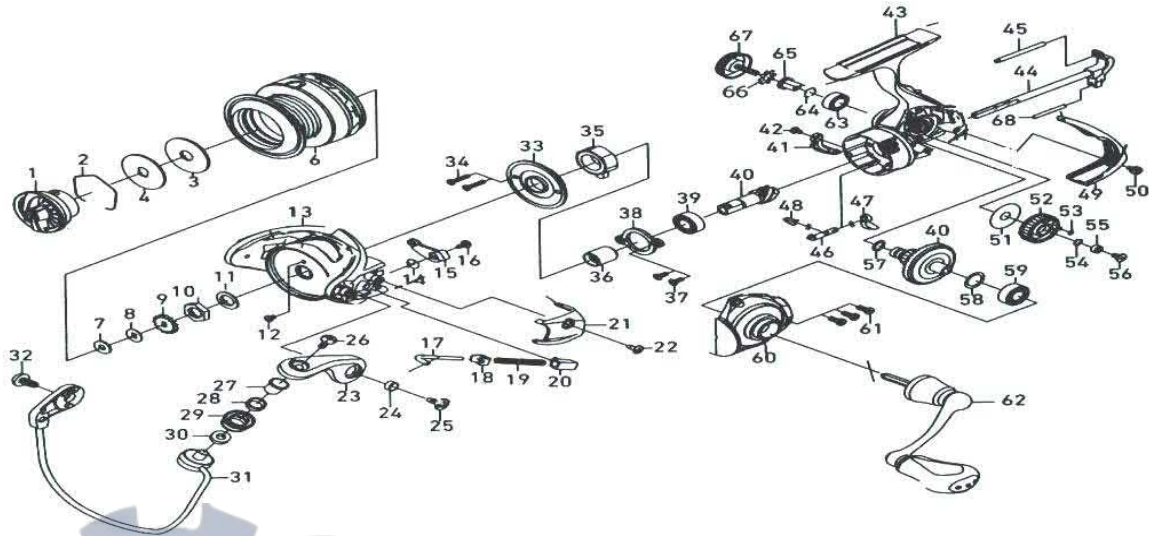

Key No.	Part No.	Part Name	Key No.	Part No.	Part Name
1	J11-2101	DRAG KNOB	35	H99-2901	ROLLER CLUTCH
2	F88-4001	DRAG WASHER RETAINER	36	J00-1401	SPACING SLEEVE
3	F69-1001	DRAG WASHER	37	J00-0901	SCREW(H)
4	G70-0601	KEY WASHER	38	H41-1501	BEARING RETAINER(A)
5	G70-0701	EARED WASHER	39	G53-5104	BALL BEARING(A)
2-6	J11-2701	SPOOL ASSEMBLY	40	Z02-1570	PINION +DRIVE GEAR UNIT
7	E39-8000	WASHER (A)	41	J00-1101	BAIL TRIP PLATE
8	E46-7101	WASHER (B)	42	G94-0402	SCREW (I)
9	G83-9301	CLICK GEAR	43	J11-2201	BODY
10	J00-1901	ROTOR NUT	44	J01-2801	MAIN SHAFT
11	371-2824	WASHER (C)	45	H61-4301	STABILIZER BAR(A)
12	H02-2701	SCREW(A)	46	H59-5501	ANTI-REVERSE CAM
13	H98-6308	ROTOR	47	H59-5401	ANTI-REVERSE LEVER
14	H41-3601	BAIL TRIP LEVER SPRING	48	H69-7801	ANTI-REVERSE CAM SPRING
15	J07-2301	BAIL TRIP LEVER	49	J01-3501	REAR COVER
16	H41-7701	SCREW(B)	50	J00-1801	SCREW(J)
17	H57-2001	BAIL SPRING SHAFT	51	H59-5701	WASHER (D)
18	H57-6101	BAIL SPRING PLATE	52	H61-3901	OSCILLATING GEAR
19	J08-9301	BAIL SPRING	53	G46-6001	"O" RING (A)
20	J08-9401	BAIL SPRING HOLDER	54	H12-9200	WASHER (E)
21	H98-6401	COVER(A)	55	G46-9005	BALL BEARING(B)
22	G27-0801	SCREW(C)	56	G94-0402	SCREW(K)
23	H72-8912	BAIL ARM	57	G67-0501	"O" RING (B)
24	H96-2401	COLLAR (A)	58	375-8500	WASHER (F)
25	G20-5001	SCREW(D)	59	G46-7302	BALL BEARING(C)
26	G19-5602	SCREW(E)	60	J11-2501	SIDE COVER
27	G19-5501	COLLAR (B)	61	G33-2904	SCREW (L)
28	G22-0701	COLLAR (C)	62	J11-2601	HANDLE ASSEMBLY
29	J08-9901	LINE ROLLER	63	G52-2703	BALL BEARING(D)
30	G87-4201	COLLAR (D)	64	G47-2401	BEARING RETAINER(B)
31	H98-5001	BAIL ASSEMBLY	65	F72-1001	COLLAR (E)
32	G20-5001	SCREW(F)	66	160-8101	WASHER (G)
33	J01-3401	COVER(B)	67	H61-3303	HANDLE SCREW
34	J00-1601	SCREW(G)	68	J08-4802	STABILIZER BAR(B)