




Please order by parts number, not key number  
Veuillez indiquer le numéro de la pièce (Non "Key" No.)

# SPINNING REEL LGLT2500D/2500D-XH/3000-4000D-C

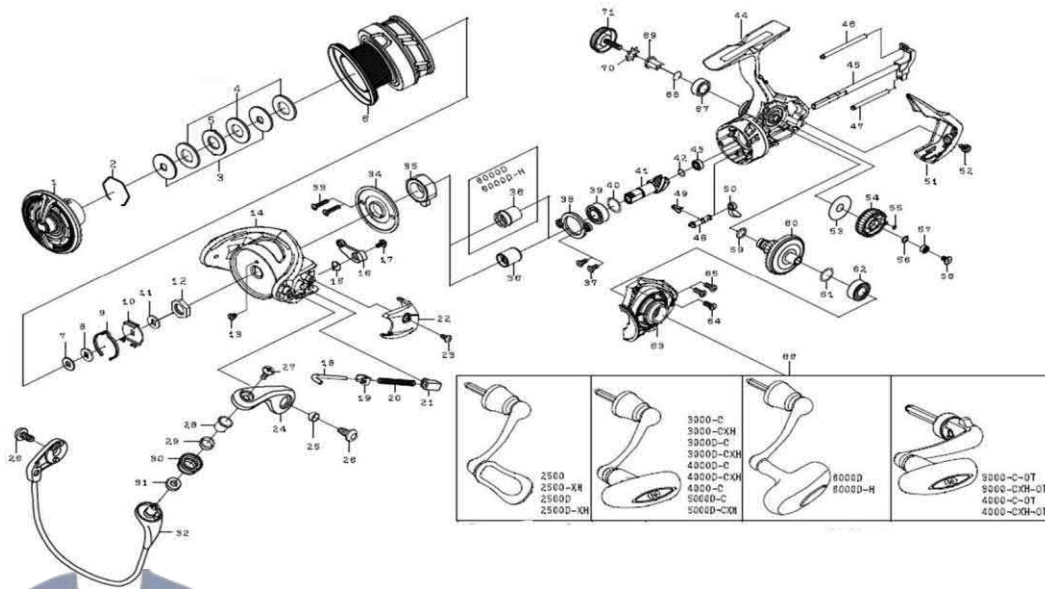

Key No.	Part Name	LGLT2500D Part No.	LGLT2500D-XH Part No.	LGLT3000D-C Part No.	LGLT4000D-C Part No.
1	DRAG KNOB	Q34-6201	Q34-6201	Q34-6201	Q35-2901
2	DRAG RETAINER	Q34-6101	Q34-6101	Q34-6101	Q34-6101
3	DRAG DISC WASHER	J54-7001	J54-7001	J54-7001	J54-7001
4	ATD DRAG WASHER (3PCS)	J67-8801	J67-8801	J67-8801	J67-8801
5	WASHER	Q34-6001	Q34-6001	Q34-6001	Q34-6001
6	SPOOL ASSEMBLY	Q38-5501	Q38-6001	Q38-6701	Q39-4001
7	WASHER	E39-8000	E39-8000	E39-8000	E39-8000
8	SPOOL WASHER	Q34-8502	Q34-8502	Q34-8502	Q34-8502
9	CLICK LEAF SPRING	J52-5101	J52-5101	J52-5101	J52-5101
10	CLICK LEAF SPRING HOLDER	J54-6201	J54-6201	J54-6201	J54-6201
11	CLICK LEAF WASHER	Q34-4001	Q34-4001	Q34-4001	Q34-4001
12	ROTOR NUT	Q12-2401	Q12-2401	Q12-2401	Q12-2401
13	SCREW	H02-2701	H02-2701	H02-2701	H02-2701
14	ROTOR	Q34-3002	Q34-3002	Q12-0513	Q35-1802
15	KICK LEVER SPRING	H41-3601	H41-3601	H41-3601	H41-3601
16	KICK LEVER	Q34-3101	Q34-3101	Q12-0701	Q35-1901
17	SCREW	H41-7701	H41-7701	H41-7701	H41-7701
18	ARM LEVER SHAFT	Q34-3301	Q34-3301	Q12-1201	Q12-9501
19	ARM LEVER SPRING PLATE	H57-6101	H57-6101	H57-6101	H57-6101
20	ARM LEVER SHAFT SPRING	J64-2801	J64-2801	H54-5701	H41-4201
21	ARM LEVER SPRING HOLDER	Q12-1501	Q12-1501	Q12-1501	Q12-1501
22	ARM LEVER SPRING COVER	Q34-3501	Q34-3501	Q12-1801	Q35-2101
23	SCREW	Q34-2901	Q34-2901	Q34-2901	Q34-2901
24	BAIL ARM LEVER	Q12-1607	Q12-1607	Q12-1607	Q12-1607
25	COLLAR	Q12-1701	Q12-1701	Q12-1701	Q12-1701
26	SCREW	Q34-3401	Q34-3401	Q34-3401	Q34-3401
27	SCREW	G19-5602	G19-5602	G19-5602	G19-5602
28	COLLAR	G19-5501	G19-5501	G19-5501	G19-5501
29	COLLAR	G22-0701	G22-701	G22-0701	G22-0701
30	LINE ROLLER	J08-9901	J08-9901	J08-9901	J08-9901
31	COLLAR	Q20-3401	Q20-3401	Q20-3401	Q20-3401
32	BAIL ASSEMBLY	Q34-3601	Q34-3601	Q12-1901	Q35-2201
33	SCREW	G83-7101	G83-7101	G83-7101	G83-7101
34	SEALED PLATE	Q13-9401	Q13-9401	Q12-0101	Q12-9001
35	ROLLER CLUTCH	Q30-8301	Q30-8301	J38-8401	J38-8401
36	SPACING SLEEVE	J00-1401	J00-1401	J00-1403	J00-1403
37	SCREW	Q12-6201	Q12-6201	Q12-6201	Q12-6201
38	PINION BEARING PLATE	Q19-5601	Q19-5601	Q19-5601	Q19-5601
39	BALL BEARING	G46-7302	G46-7302	G46-7302	G53-5104
40	GEAR WASHER	375-8502	375-8502	375-8502	375-8502
41	PINION GEAR	Q34-1701	Q36-0301	Q34-1701	Q35-1201
42	SPRING WASHER	H93-1701	H93-1701	H93-1701	H93-1701
43	BALL BEARING	H95-9601	H95-9601	H95-9601	G46-6202
44	BODY	Q38-5201	Q38-5201	Q38-6601	Q39-3701
45	MAIN SHAFT	Q34-1501	Q34-1501	Q34-1501	Q35-1001
46	STABILIZER BAR	Q12-6301	Q12-6301	Q12-6301	Q12-6302
47	STABILIZER BAR	Q11-9101	Q11-9101	Q11-9101	Q11-9102
48	A/R CAM	Q11-8101	Q11-8101	Q11-8101	Q11-8101
49	A/R CAM SPRING	H69-7801	H69-7801	H69-7801	H69-7801
50	A/R LEVER	Q11-8001	Q11-8001	Q11-8001	Q11-8001
51	REAR COVER	Q34-2801	Q34-2801	Q34-2801	Q35-1701
52	SCREW	Q34-2901	Q34-2901	Q34-2901	Q34-2901
53	WASHER	H59-5701	H59-5701	H59-5701	H59-5701
54	OSC GEAR	Q13-9001	Q13-9001	Q11-8401	Q35-0901
55	O'RING	H77-0601	H77-0601	H77-0601	G46-6001
56	WASHER	H12-9201	H12-9201	H12-9211	H12-9201
57	BALL BEARING	G46-9005	G46-9005	G46-9005	G46-9005
58	SCREW	Q12-6101	Q12-6101	Q12-6101	Q12-6101
59	O'RING	G67-0501	G67-0501	G67-0501	G67-0501
60	DRIVE GEAR	Q34-1901	Q36-0501	Q34-1901	Q35-1401
61	GEAR WASHER	375-8502	375-8502	375-8502	375-8502
62	BALL BEARING	G46-7302	G46-7302	G46-7302	G46-7302
63	SIDE COVER	Q38-5401	Q38-5401	Q38-5401	Q39-3901
64	SCREW	Q34-2701	Q34-2701	Q34-2701	Q34-2701
65	SCREW	Q34-2601	Q34-2601	Q34-2601	Q34-2601
66	HANDLE ASSEMBLY	Q38-5801	Q38-5801	Q38-6901	Q39-4701
67	BALL BEARING	G52-2706	G52-2706	G52-2706	G52-2706
68	BEARING RETAINER	G47-2401	G47-2401	G47-2401	G47-2401
69	HANDLE COLLAR	F72-1001	F72-1001	F72-1001	F72-1001
70	LOCK WASHER	160-8401	160-8401	160-8401	160-8401
71	HANDLE SCREW	Q13-2401	Q13-2401	Q13-2401	Q13-2401