


SPINCASTING REEL

SILVERCAST 206RL

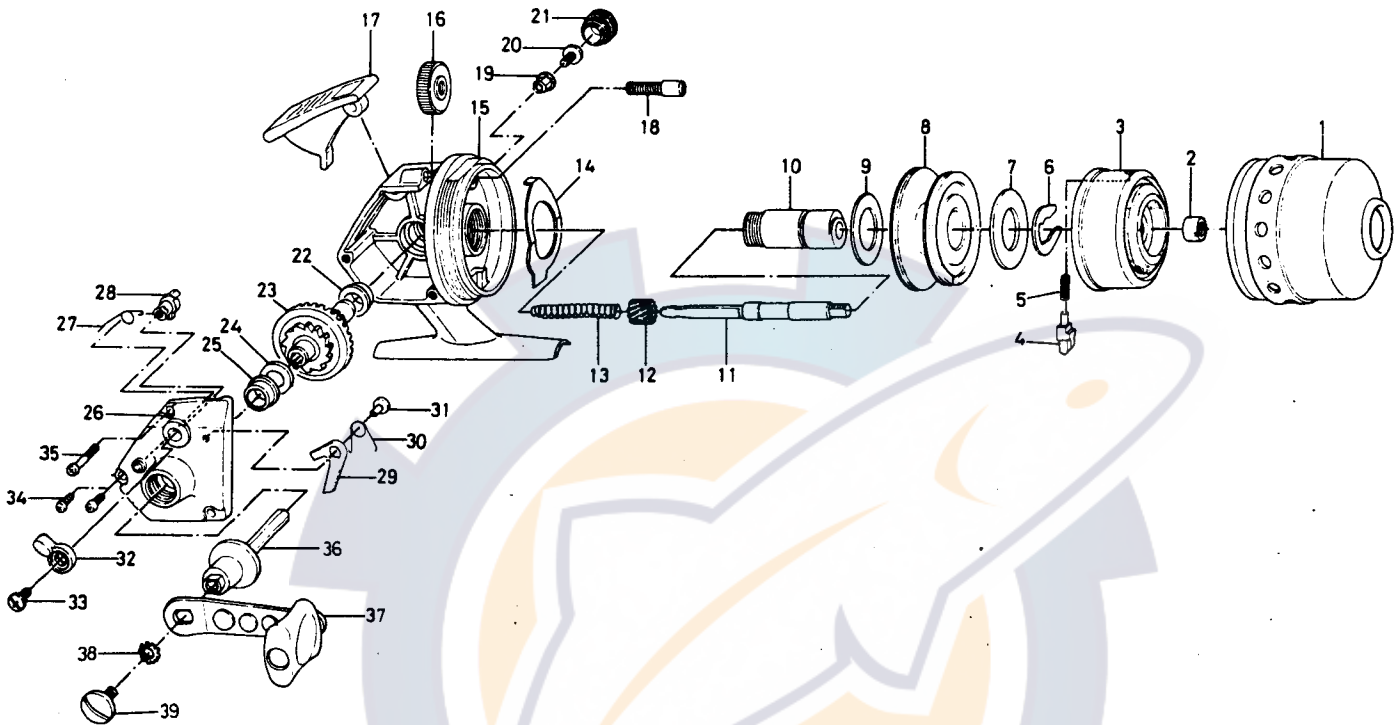

KEY NO. 3 ~ 5
 6-B08-2801

ROTOR ASSEMBLY

KEY NO. 11 ~ 13
 6-B08-1501

MAIN SHAFT ASSEMBLY

Key No.	Parts No.	Parts Name
1	6-B08-3201	Front cover
2	6-B08-3101	Rotor nut
*3	6-B08-2901	Rotor
*4	6-180-3811	Pick up pin
*5	6-142-4501	Pick up pin spring
6	6-B37-4601	Spool retainer
7	6-373-4412	Spool washer
8	6-B08-2601	Spool
9	6-373-4412	Spool washer
10	6-381-4712	Shaft metal
11	6-B08-1601	Main shaft
12	6-B08-1701	Pinion gear
13	6-144-0701	Main shaft spring
14	6-B08-2401	Drag adjusting plate
15	6-B08-1301	Body
16	6-342-2401	Drag adjusting dial
17	6-B08-1801	Push button
18	6-353-2521	Drag adjusting screw
19	6-501-8501	Handle screw holder
20	6-363-8511	Handle screw A

Key No.	Parts No.	Parts Name
21	6-B03-4802	Handle screw cap
22	6-637-4801	Drive gear shaft holder
23	6-B08-2001	Drive gear
24	6-370-5100	Drive gear washer
25	6-637-4801	Drive gear shaft holder
26	6-B08-2101	Body cover
27	6-B09-1401	Anti-reverse cam spring
28	6-461-7601	Anti-reverse cam
29	6-111-8501	Anti-reverse claw
30	6-144-5111	Anti-reverse claw spring
31	6-351-7701	Anti-reverse claw screw
32	6-541-3132	Anti-reverse lever
33	6-351-4701	Anti-reverse lever screw
34	6-351-7801	Body cover screw *short)
35	6-B08-2201	Body cover screw (long)
36	6-071-0507	Drive gear shaft
37	6-746-5201	Handle
38	6-160-8001	Handle washer
39	6-363-5301	Handle screw B