




SPINNING REEL TG 1600H

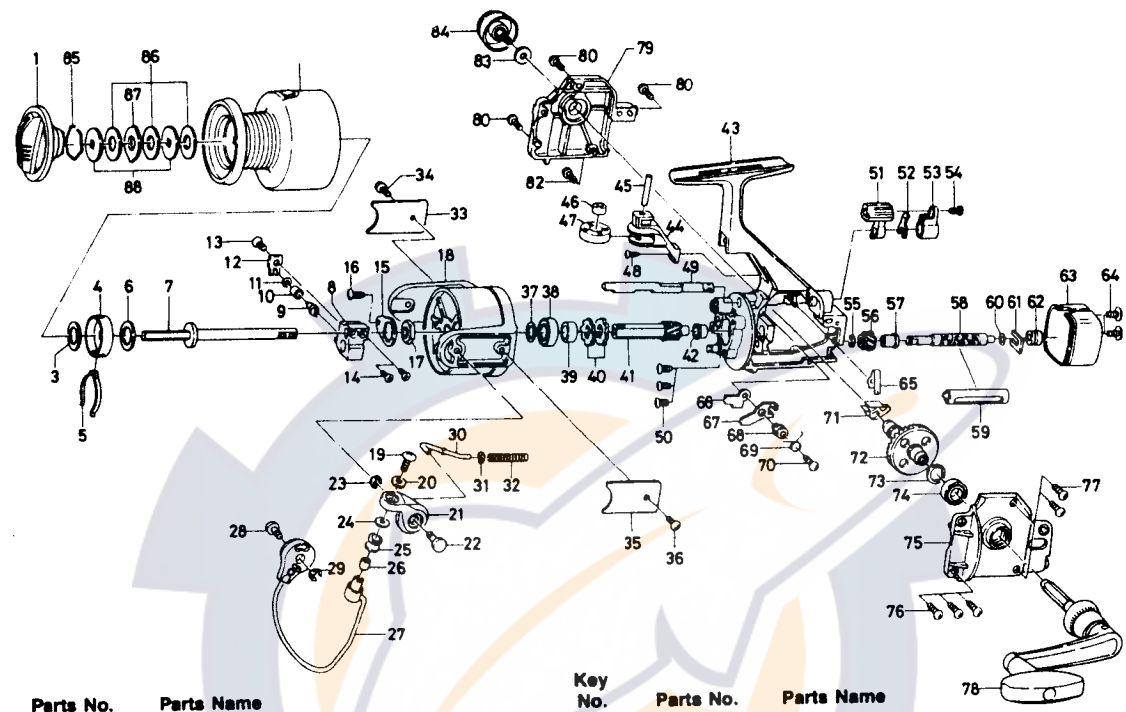

Key No.	Parts No.	Parts Name	Key No.	Parts No.	Parts Name
1	E27-8102	Drag knob	45	E11-4801	Bail kick roller pin
2	E27-7402	Spool assembly	46	E11-4701	Bail kick roller collar
3	B40-3102	Spool washer	47	E11-4604	Bail kick roller
4	E12-2302	Click leaf spring holder	48	E02-7401	Bail kick knock screw
5	B74-7702	Spool click leaf spring	49	E19-0401	Anti-reverse cam
6	375-4200	Main shaft washer	50	E03-7801	Bearing retainer screw
7	E27-7101	Main shaft assembly	51	B96-5201	Anti-reverse lever
8	E19-0601	Oscillating slider	52	321-0101	Anti-reverse lever retainer
9	E19-1201	Oscillating pawl	53	130-6801	Anti-reverse lever cover
10	E19-1301	Oscillating pawl bush	54	353-4401	Anti-reverse lever screw
11	375-0800	Oscillating pawl washer	55	320-5901	Worm shaft gear retainer
12	E18-7401	Oscillating slider cover	56	F00-5901	Worm shaft gear
13	352-0901	Oscillating slider cover screw	57	E19-0901	Worm shaft bush
14	351-0311	Oscillating block screw	58	E19-0801	Worm shaft
15	B66-2601	Rotor nut holding plate	59	E19-0701	Worm shield cover
16	B93-3001	Rotor nut holding plate screw	60	373-1300	Worm shaft washer
17	340-6602	Rotor nut	61	E18-7101	Worm shaft retiner
18	E19-2004	Rotor	62	E19-1101	Worm shaft collar
19	353-8201	Line roller screw	63	E19-1805	Rear cover
20	375-1001	Lock washer	64	351-7704	Rear coverscrew
21	E18-8401	Bail arm	65	E26-8701	Anti-reverse cam spring
22	E12-5001	Bail arm screw	66	B96-5301	Anti-reverse pawl plate
23	320-5901	Bail arm screw retainer	67	E27-7001	Anti-reverse pawl
24	373-4501	Line roller washer	68	B96-5501	Anti-reverse pawl collar
25	B41-2901	Line roller	69	B96-5601	Anti-reverse pawl spring A
26	B41-3001	Line roller bushing	70	B00-9701	Anti-reverse pawl screw
27	E28-3001	Bail	71	E27-8601	Anti-reverse pawl spring B
28	E12-5202	Bail trip cam screw	72	E34-1601	Drive gear
29	320-5901	Bail trip cam screw retainer	73	375-8500	Drive gear washer
30	E12-4701	Bail spring shaft	74	637-5701	Ball bearing B
31	E11-5901	Bail spring washer	75	E19-1706	Left side cover
32	E12-4801	Bail spring	76	E13-0501	Side cover screw A
33	E19-2101	Bail trip cover	77	E11-9602	Side cover screw B
34	B83-4402	Bail trip cover screw	78	E28-2901	Handle assembly
35	E19-2101	Bail spring cover	79	E27-9403	Right side cover
36	B83-4402	Bail spring cover screw	80	E13-0501	Side cover screw A
37	373-7807	Ball bearing retaining washer	82	E11-9802	Side cover screw B
38	B62-8601	Ball bearing A	83	B92-4902	Handle lock washer
39	B63-0401	Spacing sleeve	84	F00-3301	Handle lock screw
40	E20-0801	Anti-reverse ratchet	85	170-4101	Drag washer retainer
41	F00-5801	Pinion gear	86	B36-0204	Drag washer
42	B43-5701	Pinion holder	87	372-3832	Eared washer
43	E19-0106	Body	88	E27-7801	Key washer
44	E19-0202	Bail kick knock			