


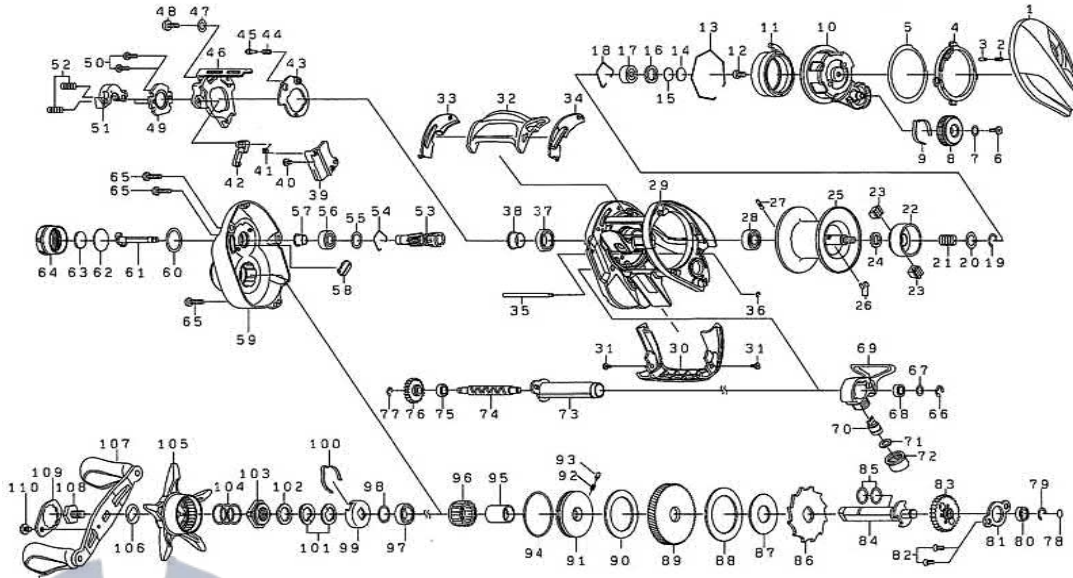

BAITCASTING REEL

STEEZATW1016HL/1016SHL

Please order by parts number, not key number
Veuillez indiquer le numéro de la pièce (Non "Key" No.)



Key No.	Part No.	Part Name	Key No.	Part No.	Part Name
1	J44-4501	RIGHT SIDE PLATE	59	J44-3801	LEFT SIDE PLATE
2	J28-6201	LEVER PLATE SPRING	60	J27-9701	SPOOL ADJ. CAP O'RING
3	J28-6301	LEVER PLATE PIN	61	J19-8801	PINION SHAFT
4	J44-4901	LEVER PLATE (A)	62	H16-1001	SPOOL ADJ. CAP WASHER (A)
5	J28-6101	LEVER PLATE (B)	63	B17-5503	SPOOL ADJ. CAP WASHER (B)
6	G94-0402	SCREW	64	J27-9602	SPOOL ADJ. CAP
7	H15-9201	WASHER Ⓞ	65	G04-0822	L/S PLATE SCREW
8	J28-2602	BRAKE ADJ KNOB	66	320-5901	WORM SHAFT RETAINER
9	H66-3401	BRAKE CLICK SPRING	67	B41-1702	WORM SHAFT WASHER
10	J44-4701	SET PLATE ASSEMBLY	68	G46-9001	WORM SHAFT BEARING
11	J29-6701	MAGNET HOLDER	69	J44-2501	LEVEL WIND
12	H66-6002	SET PLATE SCREW	70	121-4212	OSC PAWL
13	J31-5701	RIGHT SIDE PLATE	71	373-1303	OSC PAWL WASHER
14	H15-9201	R/S BB WASHER (A)	72	F40-2801	OSC PAWL HOLDER NUT
15	375-7411	R/S BB WASHER (B)	73	J33-3801	WORM SHAFT GUARD
16	G18-5101	R/S BB WASHER Ⓞ	74	J24-3601	WORM SHAFT
17	G51-1506	R/S BALL BEARING	75	G46-9001	WORM SHAFT BEARING
18	F03-2201	R/S BEARING RETAINER	76	J28-1401	WORM SHAFT GEAR
19	320-8202	SPOOL SPRING RETAINER	77	B33-9801	WORM SHAFT GER RETAINER
20	G15-0301	SPOOL SPRING WASHER	78	G09-9801	DRIVE SHAFT WASHER
21	H53-7301	SPOOL SPRING	79	320-8002	DRIVE SHAFT RETAINER
22	H16-7801	SPOOL INDUCT ROTOR	80	G46-6201	DRIVE SHAFT BALL BEARING
23	H45-4901	SPOOL COLLAR	81	J28-1101	DRIVE SHAFT PLATE (A)
24	F57-4303	SPOOL SPACER	82	E13-4509	DRIVE SHAFT PLATE SCREW
26	H66-5301	SPOOL PIN HOLDER	83	J28-1001	WORM GEAR
27	J25-2301	SPOOL PIN	84	J44-2402	DRIVE SHAT
28	G49-8511	BALL BEARING	85	F65-7801	DRIVE SHAFT O'RING
19-28	Z02-3246	SPOOL ASSEMBLY	86	H66-0901	RATCHET
29	J44-4001	FRAME	87	H66-1101	RATCHET WASHER
30	J28-1802	FRONT PLATE	88	H66-1001	DRIVE GEAR WASHER
31	H53-1508	FRONT PLATE SCREW	90	H35-9001	DRAG WASHER
32	J44-2301	CLUTCH LEVER	91	J44-3001	DRAG DISK WASHER
33	J44-2101	CLUTCH LEVER PLATE *	92	J41-0801	DRAG DISK WASHER PIN SPRING
34	J44-2201	CLUTCH LEVER PLATE (L)	93	J41-0901	DRAG DISK WASHER PIN
35	J28-1902	STABILIZER BAR	94	J45-8101	DRAG DISK WASHER O'RING
36	H70-4101	STABILIZER BAR RETAINER	95	G01-1401	DRIVE SHAFT COLLAR
37	G43-1002	BALL BEARING	96	G81-9801	ROLLER CLUTCH
38	H26-6601	CLUTCH CAM BEARING COLLAR	97	G43-1002	BALL BEARING
39	J33-3601	KICK LEVER PLATE (A)	98	B55-3801	BALL BEARING WASHER
40	H53-1508	PLATE SCREW	99	F02-8203	CLICK LEAF SPRING HOLDER
41	J40-7801	KICK LEVER PLATE SPRING	100	F03-2401	CLICK LEAF SPRING
42	J33-3701	KICK LEVER	101	150-8901	SPRING WASHER
43	J33-3501	CLUTCH CAM PLATE	102	H92-9501	STAR DRAG WASHER
44	H92-8801	CLUTCH CAM PLATE SPRING	103	J14-1002	DRAG NUT
45	J05-5201	CLUTCH CAM PLATE PIN	104	J01-1901	DRAG NUT SPRING
46	J33-3001	CLUTCH CAM	105	J14-0004	STAR DRAG
47	H15-9201	CLUTCH CAM PLATE WASHER (A)	106	F57-6601	HANDLE WASHER
48	352-2510	CLUTCH CAM PLATE SCREW	107	J45-8201	HANDLE
49	H65-9101	KICK LEVER PLATE (B)	108	J29-5502	HANDLE SCREW
50	B03-2904	KICK LEVER PLATE (B) SCREW	109	H83-4508	HANDLE NUT PLATE
51	H94-4401	PINION YOKE	110	G83-5501	HANDLE NUT PLATE SCREW
52	J31-3901	PINION YOKE SPRING			
53+89	Z02-3302	PINION + DRIVE GEAR UNIT			
54	H44-8401	PINION BB RETAINER			
55	J07-3501	PINION BB RETAINER WASHER			
56	J01-9301	PINION BALL BEARING			
57	H15-9502	PINON BEARING COLLAR			
58	H44-0201	CLUTCH CAM SP COVER PLATE			

Key No.	Part No.	Part Name
53+89	Z02-3410	PINION + DRIVE GEAR UNIT
59	J44-3802	LEFT SIDE PLATE
109	H83-4504	HANDLE NUT PLATE