


DAWA

BAITCASTING REEL

TATUBF70XH

*Please order by parts number, not key number.

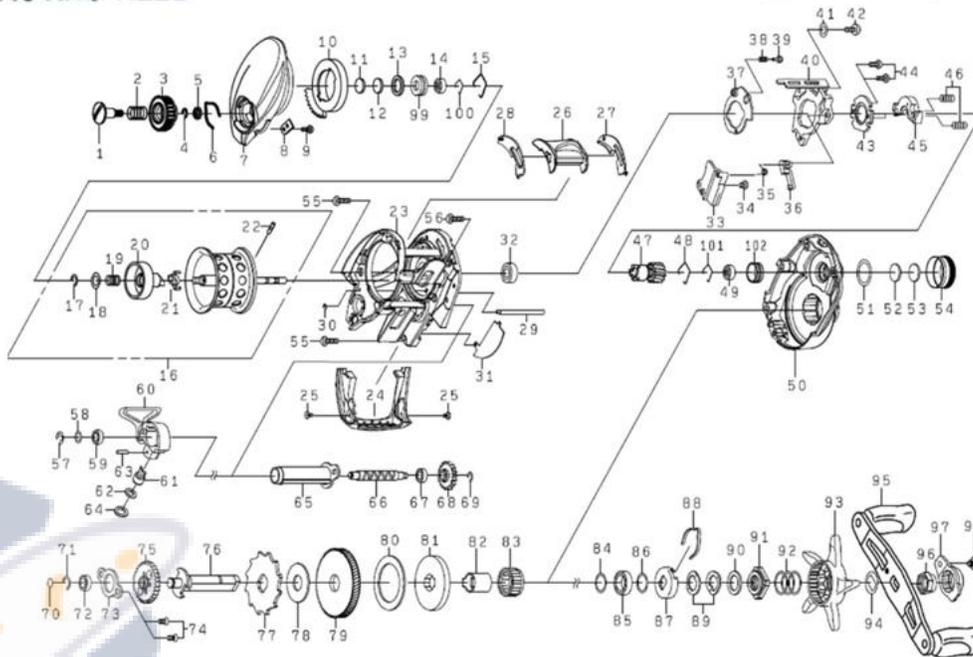

Key No	Part No	Description
1	J71-6301	BRAKE DIAL SCREW
2	E16-7101	BRAKE DIAL SPRING
3	M16-0703	BRAKE DIAL
4	B33-9801	BRAKE DIAL RETAINER
5	F63-7701	BRAKE DIAL COLLAR
6	H66-3401	BRAKE DIAL LEAF SPRING
7	M65-9501	LEFT SIDE PLATE
8	J84-3301	MAGNET HOLDER RETAINER
9	G93-9301	MAGNET HOLDER SCREW
10	M16-2401	MAGNET HOLDER
11	375-7404	LS SPOOL ADJUST WASHER (A)
12	375-7411	LS SPOOL ADJUST WASHER (B)
13	G18-5101	LS SPOOL ADJUST WASHER (C)
14	G28-1602	SPOOL BALL BEARING (A)
15	F03-2201	SPOOL BEARING HOLDER RETAINER (A)
16	Z02-7877	SPOOL ASSEMBLY
23	M21-2308	FRAME
24	J95-6614	FRONT COVER
25	H53-1508	FRONT COVER SCREW
26	J95-6101	CLUTCH LEVER
27	J95-5501	CLUTCH LEVER PLATE (R)
28	J95-5601	CLUTCH LEVER PLATE (L)
29	M13-4001	STABILIZER BAR
30	H70-4101	STABILIZER BAR RETAINER
31	J97-2901	FRAME PLATE
32	B86-1705	PINION BALL BEARING (A)
33	J73-9101	CLUTCH TRIP LEVER PLATE
34	H53-1508	CLUTCH TRIP LEVER PLATE SCREW
35	J91-5201	CLUTCH TRIP LEVER SPRING
36	J62-2901	CLUTCH TRIP LEVER
37	J73-9001	CLUTCH CAM PLATE
38	H92-8801	CLUTCH CAM PLATE SPRING
39	J05-5201	CLUTCH CAM PLATE PIN
40	J97-2601	CLUTCH CAM
41	M07-0001	CLUTCH CAM WASHER
42	B36-0406	CLUTCH CAM SCREW
43	H65-9101	YOKE PLATE
44	B03-2904	YOKE PLATE SCREW
45	H92-9001	YOKE
46	J31-3901	YOKE SPRING
47	Z02-6403	PINION DRIVE GEAR SET
48	H44-8401	SPOOL BEARING HOLDER RETAINER (B)
49	G28-1602	PINION BALL BEARING (B)
50	M65-9401	RIGHT SIDE PLATE
51	J27-9701	ZERO ADJUSTER KNOB O RING
52	J69-2001	ZERO ADJUSTER WASHER (A)
53	B17-5503	ZERO ADJUSTER WASHER (B)
54	J73-8101	ZERO ADJUSTER KNOB
55	G94-5818	RIGHT SIDE PLATE SCREW (A)
56	G04-0814	RIGHT SIDE PLATE SCREW (B)
57	320-5901	WORM SHAFT RETAINER

Key No	Part No	Description
58	B41-1702	WORM SHAFT WASHER
59	G72-0001	WORM SHAFT BUSHING
60	M47-0501	LEVELWIND
61	J74-0101	LINE GUIDE PAWL
62	M16-1301	PAWL WASHER
63	J74-0201	LEVELWIND PIN
64	G25-2202	PAWL O RING
65	J74-0001	WORM SHIELD
66	J91-2601	WORM SHAFT
67	G72-0001	WORM SHAFT BUSHING
68	J69-3901	WORM SHAFT GEAR
69	B33-9801	WORM SHAFT GEAR RETAINER
70	G09-9801	DRIVE SHAFT WASHER
71	320-8002	DRIVE SHAFT RETAINER
72	G46-6202	DRIVE SHAFT BALL BEARING
73	J69-3701	DRIVE SHAFT PLATE
74	G29-7002	DRIVE SHAFT PLATE SCREW
75	J69-3601	WORM GEAR
76	J95-6201	DRIVE SHAFT
77	H66-0901	RATCHET
78	374-6605	DRIVE GEAR WASHER
79	Z02-6403	PINION DRIVE GEAR SET
80	H35-9002	DRAG WASHER
81	J69-4401	KEY WASHER
82	J37-7801	CLUTCH RING
83	J54-0401	ONEWAY CLUTCH
84	B55-3804	DRIVE BEARING WASHER (A)
85	B86-1705	DRIVE BALL BEARING
86	B55-3801	DRIVE BEARING WASHER (B)
87	F02-8203	CLICK SPRING HOLDER
88	F03-2401	CLICK LEAF SPRING
89	150-8901	DRAG SPRING WASHER
90	H92-9501	STAR DRAG WASHER
91	J14-1001	STAR DRAG METAL
92	J01-1901	STAR DRAG SPRING
93	J14-0017	STAR DRAG
94	F57-6601	HANDLE WASHER
95	M65-9701	HANDLE ASSEMBLY
96	G79-3324	HANDLE NUT
97	J62-5401	HANDLE LOCK PLATE
98	G83-5504	HANDLE LOCK PLATE SCREW
99	H81-3601	SPOOL BEARING HOLDER (A)
100	G63-9601	SPOOL BEARING RETAINER (A)
101	G63-9601	SPOOL BEARING RETAINER (B)
102	J38-3801	SPOOL BEARING HOLDER (B)
200	B41-1703	HANDLE KNOB WASHER
201	G72-0001	HANDLE KNOB BUSHING
202	Q34-4801	HANDLE KNOB
203	B67-9308	HANDLE KNOB SCREW
204	Q34-5003	HANDLE KNOB CAP