


DAIWA BAITCASTING REEL

TATUSV100_H_XH

*Please order by parts number, not key number.

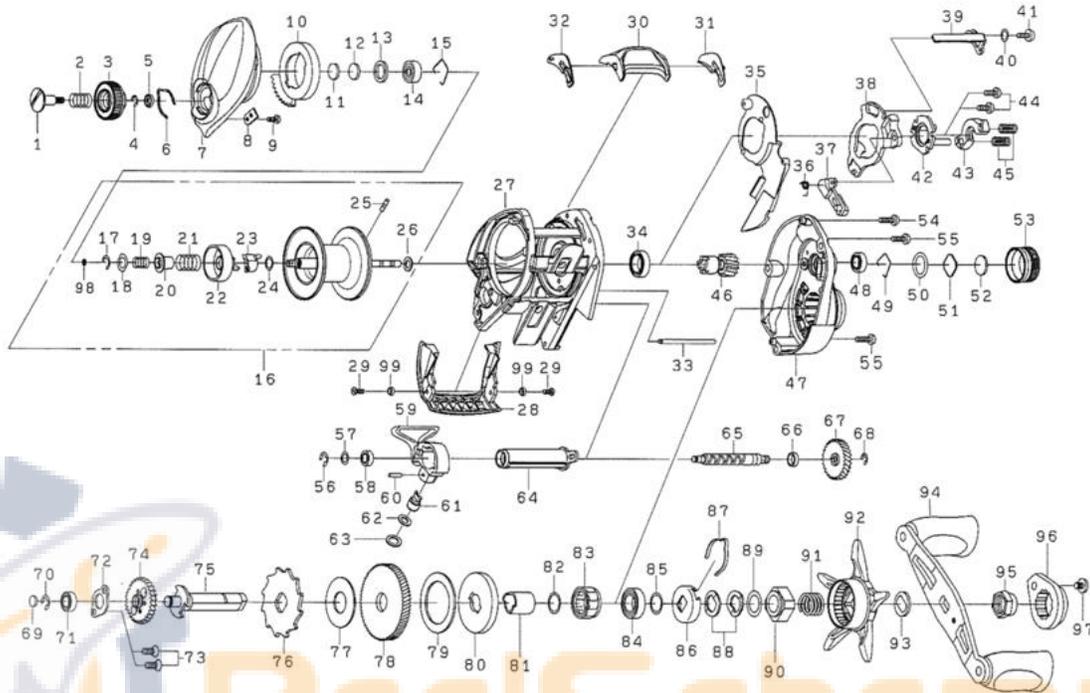

Key No	Part No	Description
1	J71-6301	BRAKE DIAL SCREW
2	E16-7101	BRAKE DIAL SPRING
3	J69-4910	BRAKE DIAL
4	B33-9801	BRAKE DIAL RETAINER (A)
5	F63-7701	BRAKE DIAL COLLAR
6	J88-6201	BRAKE DIAL LEAF SPRING
7	M63-8301	RIGHT SIDE PLATE
8	J84-3301	BRAKE DIAL RETAINER (B)
9	G93-9301	BRAKE DIAL RETAINER SCREW
10	J69-5001	MAGNET HOLDER
11	J75-7404	RS SPOOL ADJUST WASHER (A)
12	J75-7411	RS SPOOL ADJUST WASHER (B)
13	G13-5101	RS SPOOL ADJUST WASHER (C)
14	G51-1503	SPOOL BALL BEARING
15	F03-2201	SPOOL BEARING RETAINER
16	Z02-7784	SPOOL ASSEMBLY (17 26)
17	M46-7302	FRAME
18	M45-4403	FRONT COVER
19	H53-1508	FRONT COVER SCREW
20	M45-3801	CLUTCH LEVER
21	M45-3401	CLUTCH LEVER PLATE (L)
22	M45-3301	CLUTCH LEVER PLATE (R)
23	M04-1101	STABILIZER BAR
24	B86-1705	PINION BALL BEARING (A)
25	M46-7601	CLUTCH CAM PLATE (A)
26	M06-0601	CLUTCH TRIP LEVER SPRING
27	J63-8601	CLUTCH TRIP LEVER
28	M46-7401	CLUTCH CAM
29	M46-7501	CLUTCH BAR
30	M07-0001	CLUTCH BAR SCREW WASHER
31	B36-0406	CLUTCH BAR SCREW
32	H65-9101	CLUTCH CAM PLATE (B)
33	M15-7501	YOKE
34	B03-2904	CLUTCH CAM PLATE SCREW
35	J31-3901	YOKE SPRING
36	Z02-7414	PINION DRIVE GEAR SET
37	M63-8201	LEFT SIDE PLATE
38	G43-1102	PINION BALL BEARING (B)
39	E21-9701	PINION BEARING RETAINER
40	B05-5201	MECHANICAL BRAKE O RING
41	J21-3101	MECHANICAL BRAKE WASHER (A)
42	B17-5503	MECHANICAL BRAKE WASHER (B)
43	J69-2502	ZERO ADJUSTER KNOB
44	G04-0831	LEFT SIDE PLATE SCREW (A)
45	G04-0830	LEFT SIDE PLATE SCREW (B)
46	320-5901	WORM SHAFT RETAINER (A)
47	B41-1702	WORM SHAFT WASHER
48	G72-0001	WORM SHAFT BUSHING (A)
49	M05-4201	LEVELWIND
50	J74-0201	LINE GUIDE PAWL PIN
51	M45-4101	LINE GUIDE PAWL
52	M16-1301	LINE GUIDE PAWL WASHER
53	G25-2202	LINE GUIDE PAWL O RING

Key No	Part No	Description
54	M04-8901	WORM SHIELD
55	J24-3601	WORM SHAFT
56	G72-0001	WORM SHAFT BUSHING (B)
57	M04-8801	WORM SHAFT GEAR
58	B33-9801	WORM SHAFT GEAR RETAINER
59	G09-9801	DRIVE SHAFT WASHER
60	320-8002	DRIVE SHAFT RETAINER
61	G46-6202	DRIVE SHAFT BALL BEARING (A)
62	M45-4001	DRIVE SHAFT PLATE
63	G29-7002	DRIVE SHAFT PLATE SCREW
64	M04-8601	WORM GEAR
65	M45-3902	DRIVE SHAFT
66	H66-0901	RATCHET
67	J08-5101	DRIVE GEAR WASHER
68	Z02-7414	PINION DRIVE GEAR SET
69	H35-9002	DRAG WASHER
70	J69-4401	KEY WASHER
71	J37-7801	CLUTCH RING
72	B55-3805	ONEWAY CLUTCH WASHER
73	J54-0401	ONEWAY CLUTCH
74	B86-1705	DRIVE BALL BEARING (B)
75	B55-3801	DRIVE BEARING WASHER
76	F02-8203	CLICK SPRING HOLDER
77	F03-2401	CLICK LEAF SPRING
78	150-8901	DRAG SPRING WASHER
79	H92-9501	STAR DRAG WASHER
80	H91-2002	STAR DRAG METAL
81	J01-1901	STAR DRAG SPRING
82	H91-1901	STAR DRAG
83	F57-6601	HANDLE WASHER
84	J91-5901	HANDLE ASSEMBLY
85	G79-3310	HANDLE NUT
86	J62-5401	HANDLE LOCK PLATE
87	G83-5505	HANDLE LOCK PLATE SCREW
88	H77-0601	SPOOL HOLDER O RING
89	M04-7801	FRONT COVER COLLAR
90	B41-1703	HANDLE KNOB WASHER
91	G46-9005	HANDLE KNOB BALL BEARING
92	G72-0001	HANDLE KNOB COLLAR
93	M00-9801	HANDLE KNOB
94	B67-9308	HANDLE KNOB SCREW
95	M00-9601	HANDLE KNOB CAP

TATUSV100HL Special Parts

Key No	Part No	Description
46	Z02-7412	PINION DRIVE GEAR SET
47	M63-8501	LEFT SIDE PLATE

TATUSV100XHL Special Parts

Key No	Part No	Description
46	Z02-7256	PINION DRIVE GEAR SET
47	M63-8201	LEFT SIDE PLATE