


TATULA

BAITCASTING REEL

TATUSV150L_HL_XHL

*Please order by parts number, not key number.

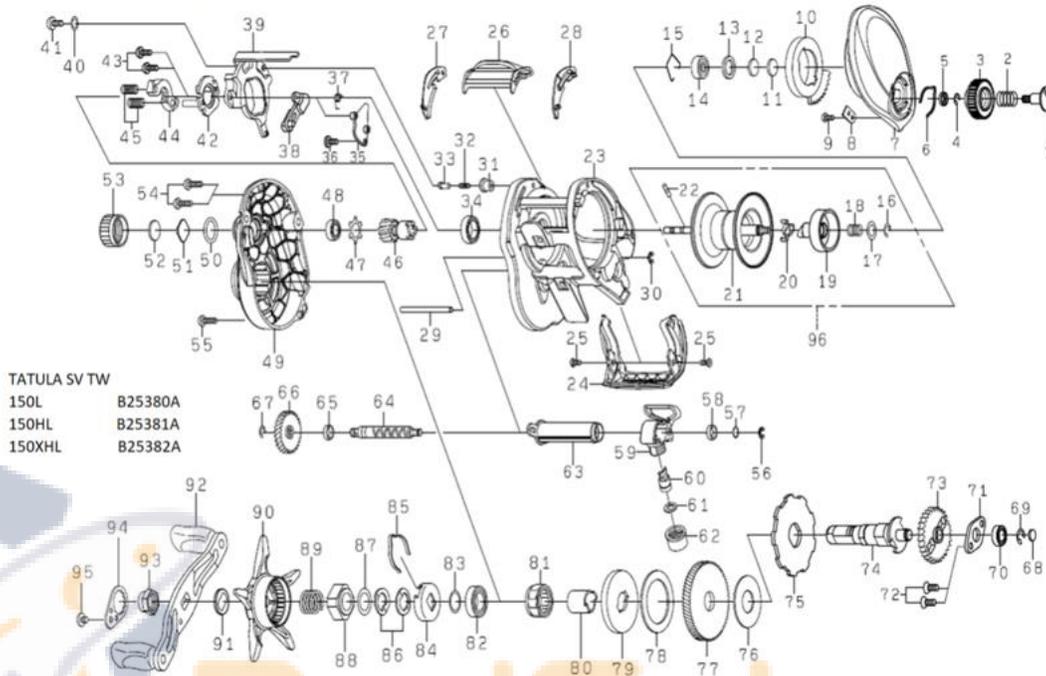

TATULA SV TW
 150L B25380A
 150HL B25381A
 150XHL B25382A

Key No	Part No	Description
1	J71-6301	BRAKE DIAL SCREW
2	E16-7101	DIAL SCREW SPRING
3	J21-3702	BRAKE DIAL
4	B33-9801	DIAL SCREW RETAINER
5	F63-7701	BRAKE DIAL WASHER
6	H66-3401	DIAL CLICK SPRING
7	H94-4926	RIGHT SIDE PLATE
8	H91-5501	BRAKE DIAL RETAINER
9	G93-9301	BRAKE DIAL RETAINER SCREW
10	H93-0502	MAGNET HOLDER
11	375-7404	RS SPOOL ADJUST WASHER (A)
12	375-7411	RS SPOOL ADJUST WASHER (B)
13	G18-5101	RS SPOOL ADJUST WASHER (C)
14	G51-1506	SPOOL BALL BEARING (A)
15	F03-2201	SPOOL BEARING RETAINER (A)
23	J91-8719	FRAME
24	J24-4009	FRONT COVER
25	H84-2803	FRONT COVER SCREW
26	J24-2901	CLUTCH LEVER
27	H91-5701	CLUTCH LEVER PLATE (L)
28	H91-5601	CLUTCH LEVER PLATE (R)
29	J24-4101	STABILIZER BAR
30	H70-4101	STABILIZER BAR RETAINER
31	H91-0601	CLUTCH CAM COLLAR
32	H92-8801	CLUTCH CAM COLLAR SPRING
33	J05-5201	CLUTCH CAM COLLAR PIN
34	B86-1705	PINION BALL BEARING (A)
35	J24-7401	CLUTCH TRIP LEVER PLATE (A)
36	H29-4101	CLUTCH TRIP LEVER PLATE SCREW
37	J24-7501	CLUTCH TRIP LEVER SPRING
38	J22-1501	CLUTCH TRIP LEVER
39	J24-7201	CLUTCH CAM
40	H15-9202	CLUTCH CAM WASHER
41	352-2501	CLUTCH CAM SCREW
42	H65-9101	YOKE PLATE
43	B03-2904	YOKE PLATE SCREW
44	H94-4401	YOKE
45	H58-2001	YOKE SPRING
46	Z02-7705	PINION DRIVE GEAR SET
47	H18-0501	SPOOL BEARING RETAINER (B)
48	G43-1104	SPOOL BALL BEARING (B)
49	M61-9501	LEFT SIDE PLATE
50	B05-5201	ZERO ADJUSTER KNOB O RING
51	J21-3101	ZERO ADJUSTER WASHER (A)
52	B17-5503	ZERO ADJUSTER WASHER (B)
53	J90-9703	ZERO ADJUSTER KNOB
54	G04-0820	LEFT SIDE PLATE SCREW (A)
55	G04-0831	LEFT SIDE PLATE SCREW (B)
56	320-5901	WORM SHAFT RETAINER
57	B41-1703	WORM SHAFT WASHER
58	G72-0001	WORM SHAFT BUSHING (A)

Key No	Part No	Description
59	J24-3303	LEVELWIND
60	121-4212	LINE GUIDE PAWL
61	373-1303	PAWL WASHER
62	F40-2801	PAWL CAP
63	J24-7601	WORM SHIELD
64	J24-3601	WORM SHAFT
65	G72-0001	WORM SHAFT BUSHING (B)
66	H91-0501	WORM SHAFT GEAR
67	B33-9801	WORM SHAFT GEAR RETAINER
68	G09-9801	DRIVE SHAFT WASHER
69	320-8002	DRIVE SHAFT RETAINER
70	B35-8608	DRIVE SHAFT BALL BEARING
71	H92-8901	DRIVE SHAFT PLATE
72	E13-4509	DRIVE SHAFT PLATE SCREW
73	H91-2701	WORM GEAR
74	J34-2202	DRIVE SHAFT
75	H92-9401	CLUTCH WHEEL
76	J08-5101	DRIVE GEAR WASHER
77	Z02-7705	PINION DRIVE GEAR SET
78	H45-2602	DRAG WASHER
79	H91-3201	KEY WASHER
80	J37-7801	CLUTCH RING
81	J54-0401	ONEWAY CLUTCH
82	B86-1705	DRIVE BALL BEARING
83	B55-3801	DRIVE BEARING WASHER
84	F02-8203	CLICK SPRING HOLDER
85	F03-2401	CLICK LEAF SPRING
86	150-8901	DRAG SPRING WASHER
87	H92-9501	STAR DRAG METAL WASHER
88	J14-1002	STAR DRAG METAL
89	J01-1901	STAR DRAG SPRING
90	J14-0001	STAR DRAG
91	F57-6601	HANDLE WASHER
92	J72-8801	HANDLE ASSY
93	G79-3302	HANDLE NUT
94	H83-4507	HANDLE LOCK PLATE
95	353-8301	HANDLE LOCK PLATE SCREW
96	Z02-7699	SPOOL ASSY

TATUSV150HL Special Parts

Key No	Part No	Description
46	Z02-7709	PINION DRIVE GEAR SET
49	M62-0001	LEFT SIDE PLATE
64	M01-6701	WORM SHAFT

TATUSV150XHL Special Parts

Key No	Part No	Description
46	Z02-7711	PINION DRIVE GEAR SET
49	M62-0401	LEFT SIDE PLATE
64	M01-6701	WORM SHAFT