




Please order by parts number, not key number  
Veuillez indiquer le numéro de la pièce (Non "Key" No.)

# BAITCASTING REEL TATULA CT 100H/100HS/100P/100XS

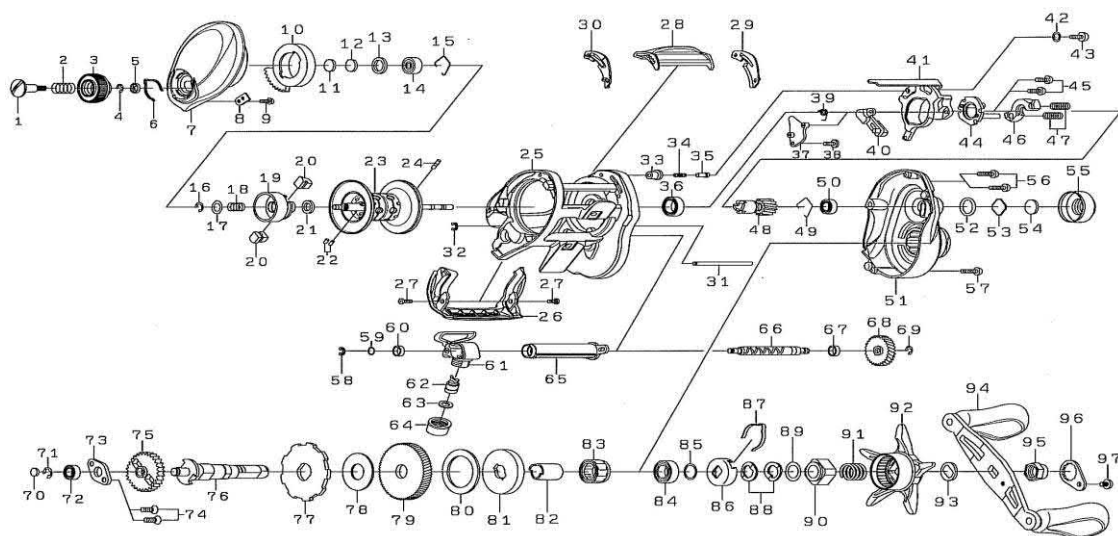

Key No.	Part No.	Part Name	Key No.	Part No.	Part Name
1	H93-0401	SET PLT SCREW	66	J24-3601	WORM SHAFT
2	E16-7101	SPRING	67	G72-0001	WORM SHAFT BEARING
3	H93-0233	BRAKE ADJ KNOB	68	H91-0501	WORM GEAR
4	B33-9801	BRAKE DIAL RET	69	B33-9801	RETAINER
5	F63-7701	BRAKE DIAL WASHER	70	G09-9800	WASHER
6	H66-3401	BRAKE CLICK SPRING	71	320-8002	RETAINER
7	H93-0103	L/S PLATE	72	B35-8607	BALL BEARING
8	H91-5501	BRAKE DIAL RET	73	H92-8901	PLATE
9	G93-9301	FRONT PLT SCREW	74	E13-4509	SCREW
10	H93-0501	MAGNET HOLDER	75	H91-2701	DRIVE SHAFT GEAR
11	375-7400	SPACER A	76	H91-1601	DRIVE SHAFT
12	375-7411	SPACER B	77	H92-9401	A/R RATCHET
13	G18-5101	SPACER C	78	J08-5101	DRIVE SHAFT WASHER
14	G51-1503	BALL BEARING	79	H91-3102	DRIVE GEAR
15	F03-2201	BEARING RET	80	H45-2602	DRAG WASHER
16-24	Z02-2784	SPOOL ASSEMBLY	81	H91-3201	KEY WASHER
25	J33-7901	FRAME	82	J37-7801	GEAR SHAFT COLLAR
26	J24-4002	FRONT PLT	83	G81-9801	ROLLER CLUTCH
27	H84-2803	SCREW	84	B86-1704	BALL BEARING
28	J33-5001	CLUTCH LEVER	85	B55-3801	WASHER
29	H91-5601	CLUTCH LEVER PLT	86	F02-8203	CLICK LEAF SPRING HOLDER
30	H91-5701	CLUTCH LEVER PLT	87	F03-2401	CLICK LEAF SPRING
31	J24-4101	STABILIZER BAR	88	150-8901	SPRING WASHER
32	H70-4101	RETAINER	89	H92-9501	WASHER
33	H91-0601	COLLAR	90	H91-2001	NUT
34	H92-8801	SPRING B	91	J01-1901	SPRING
35	J05-5201	PIN	92	H91-1901	STAR DRAG
36	B86-1704	BALL BEARING	93	F57-6601	HANDLE COLLAR
37	J24-2801	PLATE A	94	J14-2801	HANDLE ASSEMBLY
38	H29-4101	SCREW	95	G79-3301	HANDLE NUT
39	J24-3201	CLUTCH CAM SPRING	96	H83-4512	HANDLE NUT PLT
40	J22-1401	CLUTCH TRIP LEVER	97	353-8301	HANDLE SCREW
41	J24-2601	CLUTCH CAM PLT	<b>TACT100HS SPECIAL PARTS</b>		
42	H15-9201	WASHER	<b>Key No.</b>	<b>Part No.</b>	<b>Part Name</b>
43	352-2501	SCREW	3	H93-0219	BRAKE ADJ KNOB
44	H65-9101	CLUTCH CAM PLT	48	J00-4201	PINION GEAR
45	B03-2904	SCREW	51	J21-2108	R/S PLT
46	H92-9001	YOKE	79	J00-4002	DRIVE GEAR
47	H58-2001	YOKE SPRING	96	H83-4504	HANDLE NUT PLT
48	H91-3901	PINION GEAR	<b>TACT100P SPECIAL PARTS</b>		
49	H18-0501	BEARING RET	<b>Key No.</b>	<b>Part No.</b>	<b>Part Name</b>
50	G43-1102	BALL BEARING	3	H93-0223	BRAKE ADJ KNOB
51	J21-2107	R/S PLATE	48	H99-2201	PINION GEAR
52	B05-5201	O' RING	51	J21-2112	R/S PLT
53	J21-3101	SPACER F	79	H99-2301	DRIVE GEAR
54	B17-5503	SPACER	96	H83-4507	HANDLE NUT PLT
55	J28-8202	CAST CONTROL CAP	<b>TACT100XS SPECIAL PARTS</b>		
56	G04-0814	R&L/S PLT SCREW	<b>Key No.</b>	<b>Part No.</b>	<b>Part Name</b>
57	G04-0801	SCREW	3	H93-0217	BRAKE ADJ KNOB
58	320-5901	RETAINER	48	J00-9801	PINION GEAR
59	B41-1700	WASHER	51	J21-2113	R/S PLT
60	G72-0001	WORM SHAFT BEARING	79	J00-9901	DRIVE GEAR
61	J24-3303	T-LEVEL WIND	96	H83-4506	HANDLE NUT PLT
62	121-4212	LINE GUIDE PAWL			
63	373-1300	WASHER			
64	F40-2801	PAWL CAP			
65	J24-3701	LEVEL WIND GUARD			