




# TIERRA LT 6000D

Feel Alive.

Please quote by part number, not key number when ordering.  
spares@daiwaaustralia.com.au PH: (02) 8644 8644

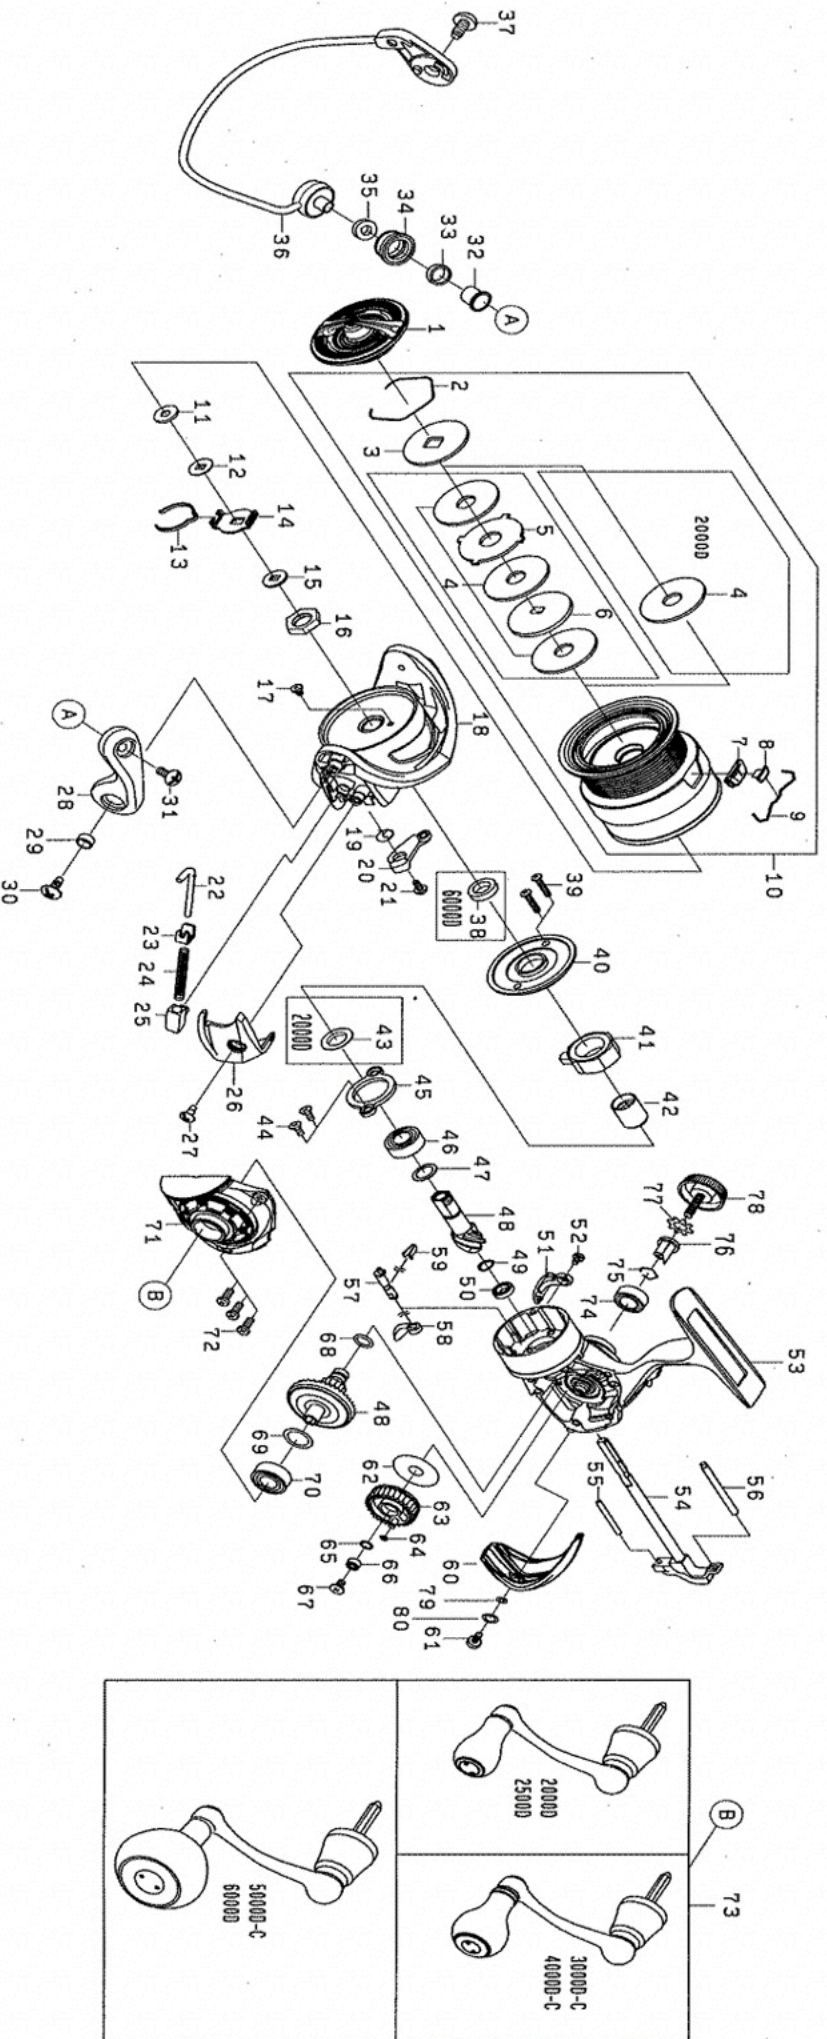



REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
TIERRA LT 6000D	S46917D	1	6J579904	DRAG KNOB
TIERRA LT 6000D	S46917D	2	61704101	DRAG RING
TIERRA LT 6000D	S46917D	3	6J577501	DRAG DISC WASHER(A)
TIERRA LT 6000D	S46917D	4	6J577201	DRAG WASHER
TIERRA LT 6000D	S46917D	5	6J577301	DRAG LIP WASHER
TIERRA LT 6000D	S46917D	6	6J577501	DRAG DISC WASHER(B)
TIERRA LT 6000D	S46917D	7	6J568601	LINE STOPPER PLATE
TIERRA LT 6000D	S46917D	8	6J558001	LINE STOPPER
TIERRA LT 6000D	S46917D	9	6J314801	LINE STOPPER SPRING
TIERRA LT 6000D	S46917D	10	6J940101	SPOOL ASSY
TIERRA LT 6000D	S46917D	11	6F050104	SPOOL WASHER (A)
TIERRA LT 6000D	S46917D	12	6F050002	SPOOL WASHER (B)
TIERRA LT 6000D	S46917D	13	6J953201	CLICK LEAF SPRING
TIERRA LT 6000D	S46917D	14	6J576501	CLICK SPRING HOLDER
TIERRA LT 6000D	S46917D	15	6F049901	SPOOL WASHER (C)
TIERRA LT 6000D	S46917D	16	6J021601	ROTOR NUT
TIERRA LT 6000D	S46917D	17	6H022701	ROTOR NUT SCREW
TIERRA LT 6000D	S46917D	18	6H994339	ROTOR
TIERRA LT 6000D	S46917D	19	6H413601	KICK LEVER SPRING
TIERRA LT 6000D	S46917D	20	6H994401	KICK LEVER ASSY
TIERRA LT 6000D	S46917D	21	6H417701	KICK LEVER SCREW
TIERRA LT 6000D	S46917D	22	6H640601	ARM LEVER SHAFT
TIERRA LT 6000D	S46917D	23	6H576101	ARM LEVER SHAFT PLATE
TIERRA LT 6000D	S46917D	24	6H640701	ARM LEVER SHAFT SPRING
TIERRA LT 6000D	S46917D	25	6J089401	ARM LEVER SHAFT HOLDER
TIERRA LT 6000D	S46917D	26	6H994601	ARM LEVER SP COVER
TIERRA LT 6000D	S46917D	27	6G270801	ARM LEVER SP COVER SCREW
TIERRA LT 6000D	S46917D	28	6H728929	ARM LEVER
TIERRA LT 6000D	S46917D	29	6H962401	ARM LEVER SCREW COLLAR
TIERRA LT 6000D	S46917D	30	6G205001	ARM LEVER SCREW
TIERRA LT 6000D	S46917D	31	6G195602	ROLLER SCREW
TIERRA LT 6000D	S46917D	32	6G195501	ROLLER COLLAR(A)
TIERRA LT 6000D	S46917D	33	6G220701	ROLLER COLLAR(B)
TIERRA LT 6000D	S46917D	34	6J089901	LINE ROLLER
TIERRA LT 6000D	S46917D	35	6G874201	ROLLER COLLAR(C)
TIERRA LT 6000D	S46917D	36	6H985301	BAIL ASSY
TIERRA LT 6000D	S46917D	37	6G205001	BAIL HOLDER SCREW
TIERRA LT 6000D	S46917D	38	6H640301	SEALED WASHER
TIERRA LT 6000D	S46917D	39	6J001601	SEALED CAP SCREW
TIERRA LT 6000D	S46917D	40	6J021401	SEALED CAP
TIERRA LT 6000D	S46917D	41	6J309101	ONEWAY CLUTCH
TIERRA LT 6000D	S46917D	42	6J021304	CLUTCH RING
TIERRA LT 6000D	S46917D	43	-	-
TIERRA LT 6000D	S46917D	44	6J000901	PINION BEARING PLATE SCREW
TIERRA LT 6000D	S46917D	45	6J020801	PINION BEARING PLATE
TIERRA LT 6000D	S46917D	46	6G522802	PINION BALL BEARING (A)
TIERRA LT 6000D	S46917D	47	63712824	PINION BEARING WASHER (B)
TIERRA LT 6000D	S46917D	48	6Z025217	PINION + DRIVE GEAR SET
TIERRA LT 6000D	S46917D	49	6G572501	PINION BEARING SPRING WASHER
TIERRA LT 6000D	S46917D	50	6G467102	PINION BALL BEARING (B)
TIERRA LT 6000D	S46917D	51	6J021001	BAIL KICK COLLAR
TIERRA LT 6000D	S46917D	52	6G940402	BAIL KICK COLLAR SCREW
TIERRA LT 6000D	S46917D	53	6J939701	BODY ASSY
TIERRA LT 6000D	S46917D	54	6J860001	MAIN SHAFT
TIERRA LT 6000D	S46917D	55	6J084803	OSCILLATING POST (A)
TIERRA LT 6000D	S46917D	56	6H614301	OSCILLATING POST (B)
TIERRA LT 6000D	S46917D	57	6J020501	STOPPER CAM
TIERRA LT 6000D	S46917D	58	6H595401	STOPPER LEVER
TIERRA LT 6000D	S46917D	59	6H697801	STOPPER CAM LEAF SPRING
TIERRA LT 6000D	S46917D	60	6J495801	REAR CAP
TIERRA LT 6000D	S46917D	61	6J001801	REAR CAP SCREW
TIERRA LT 6000D	S46917D	62	6G644201	OSCILLATING GEAR WASHER
TIERRA LT 6000D	S46917D	63	6G644302	OSCILLATING GEAR
TIERRA LT 6000D	S46917D	64	6G522103	OSCILLATING GEAR O-RING
TIERRA LT 6000D	S46917D	65	6B853101	OSCILLATING GEAR BEARING WASHER
TIERRA LT 6000D	S46917D	66	6G467105	OSCILLATING GEAR BALL BEARING
TIERRA LT 6000D	S46917D	67	6H272202	OSCILLATING GEAR SCREW
TIERRA LT 6000D	S46917D	68	6G645301	DRIVE GEAR O-RING
TIERRA LT 6000D	S46917D	69	63737808	DRIVE GEAR WASHER
TIERRA LT 6000D	S46917D	70	6G523405	DRIVE BALL BEARING (A)
TIERRA LT 6000D	S46917D	71	6J939901	BODY COVER ASSY
TIERRA LT 6000D	S46917D	72	6G332904	BODY COVER SCREW
TIERRA LT 6000D	S46917D	73	6J940001	HANDLE ASSY
TIERRA LT 6000D	S46917D	74	6B861704	DRIVE BALL BEARING (B)
TIERRA LT 6000D	S46917D	75	6G525101	DRIVE BALL BEARING (B) RING
TIERRA LT 6000D	S46917D	76	6F721202	HANDLE COLLAR
TIERRA LT 6000D	S46917D	77	61608401	HANDLE WASHER
TIERRA LT 6000D	S46917D	78	6H641802	HANDLE CAP
TIERRA LT 6000D	S46917D	79	6F037404	REAR CAP WASHER (A)
TIERRA LT 6000D	S46917D	80	6B411703	REAR CAP WASHER (B)