




BAITCASTING REEL

Please order by parts number, not key number
Veuillez indiquer le numéro de la pièce (Non "Key" No.)

ZILLION-HD100HS

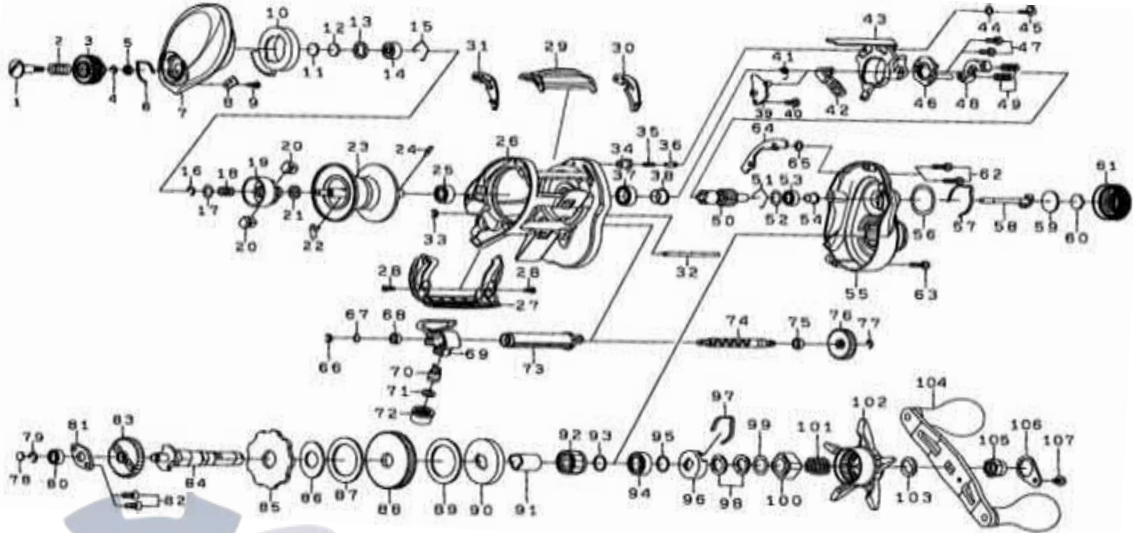

Key No.	Part No.	Part Name	Key No.	Part No.	Part Name
1	H93-0401	SET PLT SCREW	59	H16-1001	SPACER (F)
2	E16-7101	SPRING	60	B17-5503	SPACER (G)
3	H93-0219	BRAKE ADJ KNOB	61	J09-7403	CAST CONTROL CAP
4	B33-9801	BRAKE DIAL RET	62	G04-0822	SCREW
5	F63-7701	BRAKE DIAL WASHER	63	G04-0821	SCREW
6	H66-3401	BRAKE CLICK SPRING	64	J04-4502	PLATE (B)
7	J26-5301	L/S PLATE	65	H77-0601	O-RING (B)
8	H91-5501	BRAKE DIAL RET	66	320-5901	RETAINER (B)
9	G93-9301	SCREW (B)	67	B41-1700	WASHER
10	J04-5701	MAGNET HOLDER	68	G72-0001	WORM SHAFT BEARING
11	375-7400	SPACER (A)	69	J17-6602	T-LEVEL WIND
12	375-7411	SPACER (B)	70	121-4212	LINE GUIDE PAWL
13	G18-5101	SPACER ©	71	373-1300	WASHER (D)
14	G51-1506	BALL BEARING (A)	72	F40-2801	LINE GUIDE NUT
15	F03-2201	BEARING RET	73	H91-0801	LEVEL WIND GUARD
16-25	Z02-2528	SPOOL ASSEMBLY	74	H91-1702	WORM SHAFT
26	J04-4607	FRAME	75	G46-9007	BALL BEARING ©
27	J04-5203	FRONT PLATE	76	H91-0501	WORM GEAR
28	H45-5402	SCREW ©	77	B33-9801	RETAINER ©
29	J10-1601	CLUTCH LEVER	78	G09-9800	WASHER €
30	H91-5601	CLUTCH LEVER PLT	79	320-8002	REPAIRER (D)
31	H91-5701	CLUTCH LEVER PLT	80	G53-8007	BALL BEARING (D)
32	H91-2101	STABILIZER BAR	81	H92-8901	PLATE
33	H70-4101	RETAINER (A)	82	E13-4509	SCREW
34	H91-0601	COLLAR	83	H91-2701	DRIVE SHAFT GEAR
35	H92-8801	SPRING (B)	84	H91-1601	DRIVE SHAFT
36	J05-5201	PIN	85	H92-9401	A/R RATCHET
37	G43-1002	BALL BEARING (B)	86	H66-1101	DRIVE SHAFT WASHER (A)
38	H26-6601	COLLAR (A)	87	H66-1001	DRIVE SHAFT WASHER (B)
39	H91-2301	PLATE (A)	88	J07-5401	DRIVE GEAR
40	H29-4101	SCREW (D)	89	H45-2601	DRAG WASHER
41	H45-0001	CLUTCH CAM SPRING	90	H91-3201	KEY WASHER
42	J22-1401	CLUTCH TRIP LEVER	91	G54-5001	GEAR SHAFT COLLAR
43	H92-8701	CLUTCH CAM PLT	92	G81-9801	ROLLER CLUTCH
44	H15-9201	WASHER (A)	93	B55-3801	WASHER (F)
45	352-2501	SCREW	94	G43-1002	BALL BEARING
46	H65-9101	CLUTCH CAM PLT	95	B55-3802	WASHER (G)
47	B03-2904	SCREW	96	F02-8203	CLICK LEAF SPRING HOLDER
48	H92-9001	YOKE	97	F03-2401	CLICK LEAF SPRING
49	J05-5301	YOKE SPRING	98	150-8901	SPRING WASHER
50	J07-5301	PINION GEAR	99	H92-9501	WASHER (F)
51	H16-0801	BEARING RE (B)	100	J14-1001	NUT
52	J07-3501	WASHER (B)	101	J01-1901	SPRING ©
53	J01-9301	BALL BEARING (MS)	102	J14-0001	STAR DRAG
54	H15-9502	COLLAR (B)	103	F57-6601	HANDLE COLLAR
55	J26-5001	R/S PLATE	104	J26-5201	HANDLE ASSEMBLY
56	H15-7002	O-RING (A)	105	G79-3312	HANDLE NUT
57	H16-0901	CLICK LEAF SPRING (B)	106	H83-4504	HANDLE PLT
58	H15-9601	PINION SHAFT	107	353-8301	HANDLE SCREW