




# BAITCASTING REEL

# ZLNSV1016HL-SHL

Please order by parts number, not key number  
 Veuillez indiquer le numéro de la pièce (Non "Key" No.)

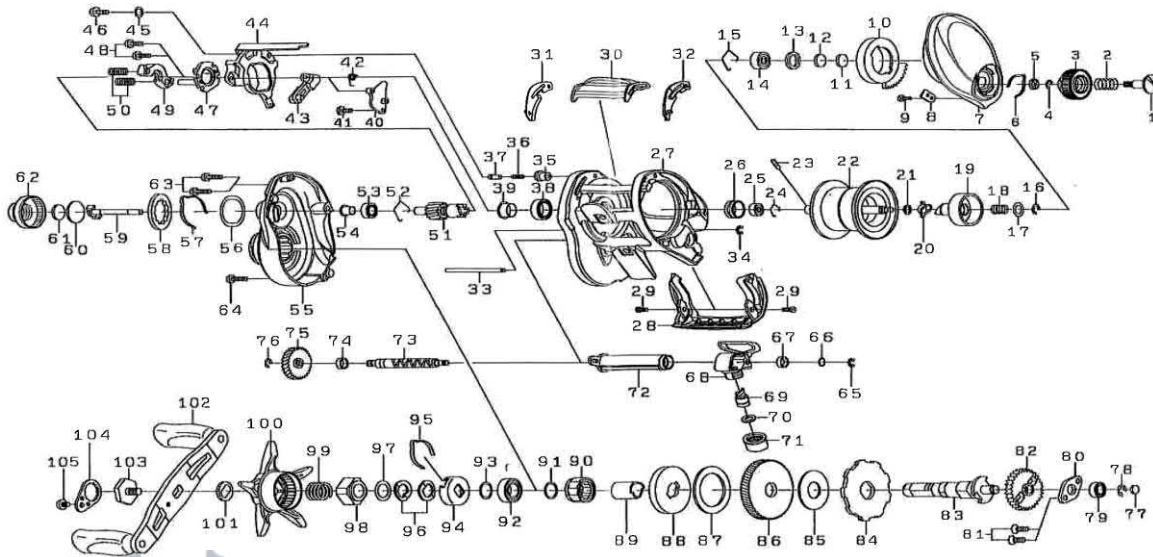

Key No.	Part No.	Part Name	Key No.	Part No.	Part Name
1	H93-0401	SET PLT SCREW	63	G04-0814	SCREW
2	E16-7101	SPRING	64	G04-0801	SCREW
3	H93-0213	BRAKE ADJ KNOB	65	320-5901	RET
4	B33-9801	RET	66	B41-1700	WASHER
5	F63-7701	BRAKE DIAL WASHER	67	G72-0001	WORM SHAFT BEARING
6	H66-3401	BRAKE CLICK SPRING	68	J24-3301	LEVEL WIND
7	J24-7701	R/S PLT	69	121-4212	LINE GUIDE PAWL
8	H91-5501	BRAKE DIAL RET	70	373-1300	WASHER
9	G93-9301	FRONT PLT SCREW	71	F40-2801	PAWL CAP
10	J24-4401	MAGNET HOLDER	72	J24-7601	LEVEL WIND GUARD
11	375-7400	SPACER (A)	73	J24-3601	WORM SHAFT
12	375-7411	SPACER (B)	74	G72-0001	WORM SHAFT BEARING
13	G18-5101	SPACER ©	75	H91-0501	WORM GEAR
14	G51-1506	BALL BEARING	76	B33-9801	RET
15	F03-2201	BEARING RETAINER	77	G09-9800	DRIVE SHAFT WASHER
16-26	Z02-2423	SPOOL ASSEMBLY	78	320-8002	RET
27	J24-7001	FRAME	79	B35-8605	BALL BEARING
28	J24-4001	FRONT PLT	80	H15-6501	PLATE
29	H45-5402	SCREW	81	E13-4509	SCREW
30	J24-2901	CLUTCH LEVER	82	H91-2701	DRIVE SHAFT GEAR
31	H91-5701	CLUTCH LEVER PLT	83	J24-3102	DRIVE SHAFT
32	H91-5601	CLUTCH LEVER PLT	84	H92-9401	A/R RATCHET
33	J24-4101	STABILIZER BAR	85	J08-5101	DRIVE SHAFT WASHER
34	H70-4101	STABILIZER BAR RET	86	J07-7001	DRIVE GEAR
35	H91-0601	COLLAR	87	H45-2602	DRAG WASHER
36	H92-8801	SPRING	88	H91-3201	KEY WAHSER
37	J05-5201	PIN	89	J37-7801	GEAR SHAFT COLLAR
38	G43-1002	BALL BEARING	90	G81-9801	ROLLER CLUTCH
39	H26-6601	COLLAR	91	B55-3802	SPACING SLEEVE
40	J24-7401	PLATE (A)	92	B86-1704	BALL BEARING
41	H29-4101	SCREW	93	B55-3801	WASHER
42	J24-7501	CLUTCH CAM SPRING	94	F02-8203	CLICK LEAF SPRING HOLDER
43	J22-1501	CLUTCH TRIP LEVER	95	F03-2401	BRAKE CLICK SPRING
44	J24-7201	CLUTCH CAM PLT	96	150-8901	SPRING WASHER
45	H15-9201	WASHER	97	H92-9501	WASHER
46	352-2501	A/R LEVER SCREW	98	J14-1002	NUT
47	H65-9101	CLUTCH CAM PLT	99	J01-1901	SPRING C
48	B03-2904	SCREW	100	J14-0001	STAR DRAG
49	H94-4401	YOKE	101	F57-6601	HANDLE COLLAR
50	H58-2001	YOKE SPRING	102	J24-3801	HANDLE ASSEMBLY
51	J07-6901	DRIVE GEAR	103	G77-9101	HANDLE SCREW
52	E21-9701	RET	104	H83-4505	HANDLE NUT PLT
53	G46-6205	BALL BEARING	105	353-8301	HANDLE NUT PLT SCREW
54	H15-9502	COLLAR			
55	J30-6901	L/S PLT			
56	J24-2201	"O" RING			
57	F26-2701	BRAKE CLICK SPRING			
58	F62-5503	LINE ROLLER			
59	J19-8801	PINON SHAFT			
60	B17-5401	WASHER			
61	B17-5503	WASHER			
62	J24-2303	CAST CONTROL CAP			

ZLNSV1016SHL SPECIAL PARTS		
Key No.	Part No.	Part Name
3	H93-0210	BRAKE ADJ KNOB
51	J07-6501	PINION GEAR
55	J24-6901	L/S PLT
62	J24-2301	CAST CONTROL CAP
86	J07-6601	DRIVE GEAR
104	H83-4504	HANDLE NUT PLT