

ASSEMBLY INSTRUCTIONS SOLAR SHADE:

Component List:

- 1 Shelter Body,
- 1 Pole Bag,
- 4 Guy Out Cord
- 2 Short Poles, 1 Long Pole,1 Carry Bag, 1 Stake Bag w/Stakes,4 Anchor Bags


ASSEMBLY:

- Unroll and unfold the shelter and lay it on the ground with the windows facing up.
- Assemble the shockcorded poles. Try to prevent pole sections from snapping together, as this can damage the pole ends. Make certain each insert has seated firmly into each plain end.

See fig. 1.



• Slide the long pole through the sleeve, across the top of the tent. Push the pole, don't pull it. Continue until you reach the grommet on other side of the tent. Insert the post at the end of the pole into this grommet. See fig.2.

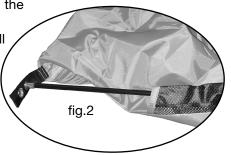

• Move back to where you started at the opposite side of the shelter. With the pole in one hand and web/grommet in the other, feed the pole up. Take care that the ferrules do not get caught on the sleeves. Push the pole evenly along its length to create an arc. Place the post end of the pole into the grommet to maintain tension across the top of the shelter. See fig.3.



• Lift the top of the shelter. Push one of the short poles through a sleeve and down to a web/grommet at the base. At the top of the shelter, insert the post into the grommet. Repeat with the second pole into the last sleeve.

• Move to the base of the shelter. With a pole in one hand and web/grommet in the other, push the pole evenly along its length to create an arc. Place the post end into the grommet to maintain tension across the fabric. Repeat with the second pole. See fig.4.



• Your shelter is now freestanding. Move it to the desired location and secure. Since soil conditions vary greatly, we have included two methods to secure the shelter:

1. On sand. Fill the four bags with sand and tie them to the four corner webs. Pull the bags out and away from the shelter until the floor is taut. Bury the bags in the sand.

2. On turf. Drive a stake through the grommet on a corner web. Work your way around the shelter, squaring and staking the base as you go. See fig.5.



Your Shelter is ready!

• Where soil conditions permit and when winds prevail, we recommend that you attach the guy out cords to the four loops on the sleeves and stake them out. Use the sliders on the cords to adjust tension. See fig.6.

• Take down: Open door, untie sand bags or pull up stakes. Pull posts out of the grommets and push poles out of the sleeves. Collapse the poles and stow. Fold the shelter onto itself in thirds. Roll up towards the door and stow.

REV C 4-09

WARNING:

• KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS SHELTER FABRIC. This shelter meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.

• THIS PRODUCT IS NOT A TOY. It contains small parts which are a choking hazard for children. Never leave a child in the shelter unsupervised.



CAUTION:

- Good judgment and common sense must be used for each installation and take down. Johnson Outdoors Gear LLC shelter products are manufactured for use as temporary protection from sun and light rain. Evacuate the shelter in threatening or severe weather.
- These shelters offer good protection from the sun. However, they do not offer complete protectionwear sunscreen.
- Never leave infants or toddlers in a zipped-up shelter.



ULTRAVIOLET LIGHT:

Ultraviolet light damage to the shelter fabric is caused by excessive exposure to sunlight. While our fabrics are UV resistant, any synthetic fabric is susceptible to UV degradation. UV damage will cause nylon and polyester to become brittle and tear easily. UV damage can be minimized by erecting shelters on sites with low exposure to direct sunlight.



COLOR TRANSFER:

Color may transfer from a dark fabric to a lighter fabric whenever the colors are in direct contact, over time while subjected to moisture and/or heat. This does not effect performance- only appearance. To help prevent color transfer, always make sure your shelter is completely dry before storage.

CLEANING:



- Clean the shelter by setting it up and wiping it down with a mild soap (liquid hand soap) and lukewarm water solution. Rinse thoroughly and dry completely. Never use detergent, washing machines or dryers because they can damage the tent's protective coating and seams. After cleaning, be sure the shelter is completely dry, especially the heavier, double-stitched areas such as the seams, before storing or mold and mildew are likely to grow.
- Clean the poles with a cloth and lubricate them with silicone spray. This is especially necessary after ocean side day trips to remove salt spray so the poles don't corrode or stay gritty.
- Clean the zippers with a rinse in fresh water and then dry them off. This is especially important if you've set up in a location with sand/dirt/salt. If you don't clean the zippers, the sliders will wear out and eventually the teeth will become inoperable.



REPAIRS:

For repairs due to normal wear and tear, animal attack, accident or some other reason that is not covered under the warranty, we recommend that you purchase a tent repair kit such as Kenyon® Campers' Repair Kit



ALTERATIONS OR MODIFICATIONS:

DO NOT misuse, modify or alter this product in any way from its condition at the time of sale. Alteration, modification or any use of this product contrary to the accompanying written instructions shall void the warranty. Moreover, any misuse, alteration or modification of the product shall absolve Johnson Outdoors Gear LLC of any liability for property damages or injuries sustained as a result of such misuse, modification or alteration.



LIMITED WARRANTY

What Is Covered:

Johnson Outdoors Gear LLC warrants to the original purchaser that the Solar Shade is free from defects in material and workmanship, for two (2) years from the date of purchase, except as qualified below.

What Is Not Covered:

Johnson Outdoors Gear LLC shall not be responsible for the natural breakdown of materials that occurs inevitably with extended use (e.g. Ultraviolet (UV) light damage, exhausted zippers), or defects caused by accident, abuse, alteration, animal attack, storm damage, misuse or improper care.

What Johnson Outdoors Gear LLC Will Do:

If after inspection we find that a product failed due to a manufacturing or material defect, we will repair or replace the product, at our option, without charge.

How to Obtain Warranty Service:

Return the product, freight prepaid, to the Dealer from whom it was purchased; or, contact our Customer Satisfaction Department for return authorization: toll free 1-800-572-8822. Collect shipments or shipments without return authorization cannot be accepted. The product registration card packaged with our product need not be returned for the warranty to be effective and for you to receive warranty service.

THERE ARE NO OTHER EXPRESS WARRANTIES BEYOND THE TERMS OF THIS LIMITED WARRANTY. IN NO EVENT SHALL JOHNSON OUTDOORS GEAR LLC BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

How State Law Relates To This Warranty:

This warranty gives you specific legal rights, and you may have other rights that vary from state to state.



JOHNSON OUTDOORS GEAR LLC



LEAVE NO TRACE: 1. PLAN AHEAD AND PREPARE 2. TRAVEL & CAMP ON DURABLE SURFACES 3. DISPOSE OF WASTE PROPERLY LEAVE WHAT YOU FIND
MINIMIZE CAMPFIRE IMPACTS
RESPECT WILDLIFE
BE COURTEOUS OF OTHER VISITORS