



HOUSE OF HARDY

# Ultralite


# Disc Reel Series

This reel has been made by craftsmen using the best materials available to ensure its reliability, its high quality components are precision machined with the absolute minimum susceptibility to wear on the reel for frame readjustment. Careful and periodic cleaning, your reel will be a faithful servant and give you years of superb performance.

House of Hardy, Limited, 250, Park Road, Alderley Edge, Cheshire, England, L12 2JF. Tel: 0625 350300. Telex: 950000. Fax: 0625 350301. Email: info@houseofhardy.com

### Care and maintenance

- The same method of cleaning is valid for all Hardy freshwater reels
- 1 Remove line and backing.
- 2 Remove the spool.
- 3 Flush away dirt by placing the spool and frame under a stream of warm water.
- 4 Dry carefully with a lint free cloth.
- 5 Lubricate with Hardy reel oil at points illustrated on diagrams
- 6 Always ensure that the spindle head is adequately greased
- 7 Always turn drag to the minimum setting to avoid compression of drag washer or springs.
- 8 Always ensure the reel and line are dry before storing in case or pouch.

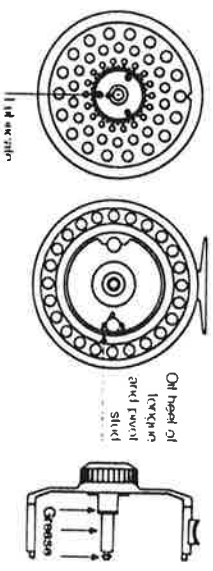

### Changing your reel from right to left hand wind

All Ultralite Disc reels are manufactured for either right or left hand wind. When you receive your reel, it will be set for right hand wind.

To convert it to left hand wind:

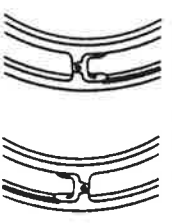



fig 1a      fig 1b

- 1 Remove the lineguard from position (fig 1a) and refit in the opposite position (fig 1b). (not applicable on LA series)
- 2 Remove the spool from the frame.
- 3 Remove the 3 fixing screws from the clutch housing plate which is attached to the rear of the spool.
- 4 Remove the plate from the spool.
- 5 Turn over the plate. The clutch will be visible in the centre of the clutch housing plate. Remove the clutch from the plate using a pair of forceps or fine nosed pliers. No force is required.
- 6 Turn over the clutch and refit to the clutch housing plate. Take care to ensure that the location key on the clutch is located in the keyway recessed into the plate.
- 7 Refit the plate to the rear of the spool and tighten the three screws.

Rear of spool

Clutch housing plate with clutch (in centre) Right hand wind

Clutch housing plate with clutch (in centre) Left hand wind

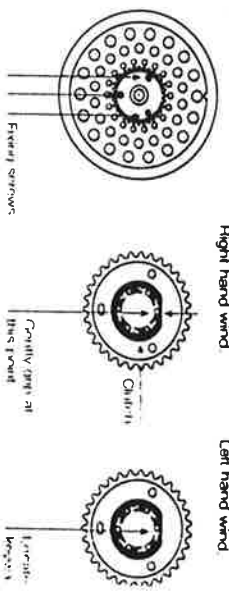


### Audible Click

If the reel is to be used in 'silent' mode, it is recommended that the triangular tongue and grey circular click spring are removed completely.

The audible click check can be adjusted as follows:

- 1 Remove triangular shaped tongue from grey circular click spring located inside the frame of the reel. Remove click spring and adjust by squeezing between thumb and forefinger
- 2 Refit tongue then test

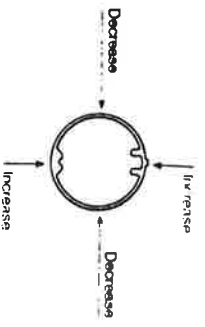

### Ultralite Disc drag

The disc drag mechanism can be adjusted by simply turning the regulator button on the face of the frame clockwise to increase the drag, anti-clockwise to decrease the drag. When it is not in use the drag should be set to a minimum.

### Lifetime original user warranty

All House of Hardy rods and reels carry an original user lifetime warranty against any defect in workmanship or materials. Should there be any defect, House of Hardy will, at its option, repair or replace the item. This warranty does not cover damage caused by misuse, lack of maintenance, negligence or normal wear and tear. Warranty claims with the proof of original purchase should be sent to: Customer services, House of Hardy Ltd, Alnwick, Northumberland, NE66 2PF, England.