

JETBOIL



USER GUIDE

8" SUMMIT SKILLET

READ ME FIRST...

THIS WILL ONLY TAKE A SECOND

JETBOIL ACCESSORY COOKWARE

THESE GUIDELINES APPLY TO
THE JETBOIL 8" SKILLET ONLY.

Use of the 8" Skillet outside these guidelines may void the Jetboil product warranty.




1

⚠ CAUTION: During use, handle may become hot.

REMOVE THE TURNER FROM THE HANDLE (BY TWISTING) BEFORE OPENING HANDLE

Opening handle with turner in place can damage the handle and mounting bracket.

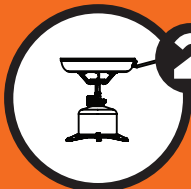

2

USE WITH CAMPING STOVES ONLY. LOW TO MEDIUM HEAT RECOMMENDED



3

NEVER LEAVE AN EMPTY PAN ON A HOT BURNER:

Do not heat an empty skillet. Damage can occur.



4

DO NOT USE METAL UTENSILS. DO NOT USE DISHWASHER OR ABRASIVE COMPOUNDS TO CLEAN:

Metals and abrasive cleaners can scratch and damage the surface coating. Skillet is NOT dishwasher safe. Wash only by hand with soapy water.

TO STORE, CLOSE HANDLE AND SNAP TURNER IN PLACE.
Place into back pack.