

CU1H

Key #	Description	Order ID #		Key #	Description	Order ID #
1	FRAME	DY-104937010		63	LOCKING PIN	DY-103673012
2	CLUTCH BAR PLATE-R	DY-104636010		64	E-RING	DY-100621010
3	CLUTCH BAR PLATE-L	DY-104637010		65	LOCKING PIN SPRING	DY-101308010
4	CLUTCH BAR ASSEMBLY	DY-102883060		66	GEAR SIDE COVER SCREW-A	DY-100035030
5	CLUTCH LINK	DY-104638010		67	GEAR SIDE COVER SCREW-B	DY-100035020
6	CLUTCH BAR SCREW	DY-101507030		68	GEAR SIDE COVER SCREW-C	DY-100035010
7	LEVEL WIND ASSEMBLY	DY-104640020		69	LUBE PORT CAP	DY-101698420
8	PIPE	DY-103286010		70	LUBE PORT CAP SCREW	DY-100202030
9	WORM SHAFT	DY-103474010		71	DRAG SPRING WASHER	DY-100088010
10	BALL BEARING	DY-104544010		72	CLICK HOLDER	DY-101765010
12	IDLER-S	DY-100019010		73X	STAR DRAG COMPLETE	DY-U02715270
13	WORM SHAFT PIN	DY-100020010		74	CLICKER	DY-101763010
15	WORM SHAFT BUSHING-B	DY-104642010		75	CLICK PLATE	DY-101764010
16	WORM SHAFT WASHER	DY-100539020		76	CLICK PLATE RETAINER	DY-101766011
17	E-RING	DY-100047010		77	HANDLE WASHER	DY-100933010
18	PILLAR	DY-102711010		78X	HANDLE COMPLETE	DY-101806560
19	LEVEL WIND PIN	DY-100464011		79	BALL BEARING	DY-104543010
20	SPACER(OPTIONAL)	DY-100025020		80	HANDLE KNOB COMPLETE	DY-103069140
21	LEVEL WIND NUT	DY-100288021		81	BALL BEARING	DY-104543010
22	FRONT COVER	DY-104643030		82	HANDLE KNOB SCREW	DY-100180010
23	FRONT COVER SCREW	DY-100152010		83	HANDLE KNOB CAP	DY-103957010
24	BALL BEARING	DY-104542010		85	HANDLE NUT	DY-104094100
25	CRANK SHAFT	DY-105264010		86	HANDLE NUT RETAINER	DY-103642020
27	IDLER-L	DY-101938020		87	SCREW	DY-101202020
28	IDLER-L WASHER-B	DY-100647050		88X	SPOOL COMPLETE	DY-105016010
29	BEARING PLATE	DY-104411010		89	BALL BEARING	DY-104540010
30	E-RING	DY-100047010		90	PIN	DY-104399010
31	BEARING PLATE SCREW	DY-100028070		91	BRAKE HOLDER	DY-103532010
34	CLUTCH SPRING	DY-102688010		92	BRAKE SHOE	DY-100522010
35	KICK LEVER	DY-102307011		93	BRAKE SHOE SPRING	DY-100525010
36	KICK LEVER SPRING	DY-104137010		94	MAGNET PLATE	DY-103533063
37	CAM PLATE	DY-104639010		95	MAGNET PLATE SCREW	DY-100526010
38	CAM PLATE SCREW	DY-100035050		96X	PALM SIDE PLATE ASSEMBLY	DY-104646050
39	PINION YOKE	DY-102073010		98	CONTROL DIAL	DY-102917310
40	PINION GEAR	DY-104367010		99	SPOOL COVER ASSEMBLY	DY-U04747010
41	PINION YOKE SPRING	DY-102465010		100	MAGNET HOLDER ASSEMBLY	DY-U04750010
42	RATCHET	DY-100818010		105	SPOOL COVER SCREW	DY-103423010
43	RATCHET WASHER	DY-103772010		106	SPOOL SPACER-A	DY-101850010
44	DRIVE GEAR	DY-102870020		107	BALL BEARING	DY-104541010
45	DRAG WASHER-L	DY-102377011		108	BEARING RETAINER	DY-102976010
46	DRAG WASHER-D1	DY-100057020		117	CLUTCH WASHER	DY-100539030
47	DRAG WASHER-A	DY-100985010		118	CLUTCH SCREW	DY-103013020
48	DRAG WASHER-D2	DY-100986010		121	SLIDE CAM SPRING	DY-102665010
49	SLEEVE WASHER(OPTIONAL)	DY-100086060		122	SLIDE CAM-H	DY-103342010
50	SLEEVE	DY-104537010		123	SLIDE CAM SCREW	DY-100526020
51X	GEAR SIDE PLATE ASSEMBLY	DY-U04644050		124	SLIDE CAM-D	DY-102394010
53	ONE WAY CLUTCH	DY-102090010		125	CLICK SPRING	DY-102002010
54	O-RING	DY-100209020		126	SPOOL COVER SPACER(OPTIONAL)	DY-103567010
55	BALL BEARING	DY-102381010		133	HOOK HOLDER	DY-102898020
56	BEARING RETAINER	DY-104461010		134	HOOK HOLDER WASHER	DY-101168020
57X	CAST CONTROL CAP ASSEMBLY	DY-U03164080		135	HOOK HOLDER SCREW	DY-100246030
58	CLICKER	DY-101674011		136	HOOK HOLDER SPRING	DY-102968011
59	CLICK PLATE	DY-101675011		155	BUSH	DY-104365010
60	CLICK PLATE RETAINER	DY-101543012		166	WASHER (G/METAL E-RING-BALL BEA	DY-100646010
61	TENSION WASHER	DY-100073011		167	GEAR SIDE COVER SCREW-D	DY-100202020
62	SPOOL SPACER-B	DY-100074021				

CU1SH

Key #	Description	Order ID #		Key #	Description	Order ID #
1	FRAME	DY-104937010		63	LOCKING PIN	DY-103673012
2	CLUTCH BAR PLATE-R	DY-104636010		64	E-RING	DY-100621010
3	CLUTCH BAR PLATE-L	DY-104637010		65	LOCKING PIN SPRING	DY-101308010
4	CLUTCH BAR ASSEMBLY	DY-102883060		66	GEAR SIDE COVER SCREW-A	DY-100035030
5	CLUTCH LINK	DY-104638010		67	GEAR SIDE COVER SCREW-B	DY-100035020
6	CLUTCH BAR SCREW	DY-101507030		68	GEAR SIDE COVER SCREW-C	DY-100035010
7	LEVEL WIND ASSEMBLY	DY-104640020		69	LUBE PORT CAP	DY-101698420
8	PIPE	DY-103286010		70	LUBE PORT CAP SCREW	DY-100202030
9	WORM SHAFT	DY-103474010		71	DRAG SPRING WASHER	DY-100088010
10	BALL BEARING	DY-104544010		72	CLICK HOLDER	DY-101765010
12	IDLER-S	DY-100019010		73X	STAR DRAG COMPLETE	DY-U02715260
13	WORM SHAFT PIN	DY-100020010		74	CLICKER	DY-101763010
15	WORM SHAFT BUSHING-B	DY-104642010		75	CLICK PLATE	DY-101764010
16	WORM SHAFT WASHER	DY-100539020		76	CLICK PLATE RETAINER	DY-101766011
17	E-RING	DY-100047010		77	HANDLE WASHER	DY-100933010
18	PILLAR	DY-102711010		78X	HANDLE COMPLETE	DY-101806560
19	LEVEL WIND PIN	DY-100464011		79	BALL BEARING	DY-104543010
20	SPACER(OPTIONAL)	DY-100025020		80	HANDLE KNOB COMPLETE	DY-103069140
21	LEVEL WIND NUT	DY-100288021		81	BALL BEARING	DY-104543010
22	FRONT COVER	DY-104643030		82	HANDLE KNOB SCREW	DY-100180010
23	FRONT COVER SCREW	DY-100152010		83	HANDLE KNOB CAP	DY-103957010
24	BALL BEARING	DY-104542010		85	HANDLE NUT	DY-104094100
25	CRANK SHAFT	DY-105264010		86	HANDLE NUT RETAINER	DY-103642020
27	IDLER-L	DY-101938020		87	SCREW	DY-101202020
28	IDLER-L WASHER-B	DY-100647050		88X	SPOOL COMPLETE	DY-105016010
29	BEARING PLATE	DY-104411010		89	BALL BEARING	DY-104540010
30	E-RING	DY-100047010		90	PIN	DY-104399010
31	BEARING PLATE SCREW	DY-100028070		91	BRAKE HOLDER	DY-103532010
34	CLUTCH SPRING	DY-102688010		92	BRAKE SHOE	DY-100522010
35	KICK LEVER	DY-102307011		93	BRAKE SHOE SPRING	DY-100525010
36	KICK LEVER SPRING	DY-104137010		94	MAGNET PLATE	DY-103533063
37	CAM PLATE	DY-104639010		95	MAGNET PLATE SCREW	DY-100526010
38	CAM PLATE SCREW	DY-100035050		96X	PALM SIDE PLATE ASSEMBLY	DY-104646050
39	PINION YOKE	DY-102073010		98	CONTROL DIAL	DY-102917310
40	PINION GEAR	DY-104368010		99	SPOOL COVER ASSEMBLY	DY-U04747010
41	PINION YOKE SPRING	DY-102465010		100	MAGNET HOLDER ASSEMBLY	DY-U04750010
42	RATCHET	DY-100818010		105	SPOOL COVER SCREW	DY-103423010
43	RATCHET WASHER	DY-103772010		106	SPOOL SPACER-A	DY-101850010
44	DRIVE GEAR	DY-102871020		107	BALL BEARING	DY-104541010
45	DRAG WASHER-L	DY-102377011		108	BEARING RETAINER	DY-102976010
46	DRAG WASHER-D1	DY-100057020		117	CLUTCH WASHER	DY-100539030
47	DRAG WASHER-A	DY-100985010		118	CLUTCH SCREW	DY-103013020
48	DRAG WASHER-D2	DY-100986010		121	SLIDE CAM SPRING	DY-102665010
49	SLEEVE WASHER(OPTIONAL)	DY-100086060		122	SLIDE CAM-H	DY-103342010
50	SLEEVE	DY-104537010		123	SLIDE CAM SCREW	DY-100526020
51X	GEAR SIDE PLATE ASSEMBLY	DY-U04644060		124	SLIDE CAM-D	DY-102394010
53	ONE WAY CLUTCH	DY-102090010		125	CLICK SPRING	DY-102002010
54	O-RING	DY-100209020		126	SPOOL COVER SPACER(OPTIONAL)	DY-103567010
55	BALL BEARING	DY-102381010		133	HOOK HOLDER	DY-102898020
56	BEARING RETAINER	DY-104461010		134	HOOK HOLDER WASHER	DY-101168020
57X	CAST CONTROL CAP ASSEMBLY	DY-U03164080		135	HOOK HOLDER SCREW	DY-100246030
58	CLICKER	DY-101674011		136	HOOK HOLDER SPRING	DY-102968011
59	CLICK PLATE	DY-101675011		155	BUSH	DY-104365010
60	CLICK PLATE RETAINER	DY-101543012		166	WASHER (G/METAL E-RING-BALL BEA	DY-100646010
61	TENSION WASHER	DY-100073011		167	GEAR SIDE COVER SCREW-D	DY-100202020
62	SPOOL SPACER-B	DY-100074021				

CU1XH

Key #	Description	Order ID #		Key #	Description	Order ID #
1	FRAME	DY-104937010		63	LOCKING PIN	DY-103673012
2	CLUTCH BAR PLATE-R	DY-104636010		64	E-RING	DY-100621010
3	CLUTCH BAR PLATE-L	DY-104637010		65	LOCKING PIN SPRING	DY-101308010
4	CLUTCH BAR ASSEMBLY	DY-102883060		66	GEAR SIDE COVER SCREW-A	DY-100035030
5	CLUTCH LINK	DY-104638010		67	GEAR SIDE COVER SCREW-B	DY-100035020
6	CLUTCH BAR SCREW	DY-101507030		68	GEAR SIDE COVER SCREW-C	DY-100035010
7	LEVEL WIND ASSEMBLY	DY-104640020		69	LUBE PORT CAP	DY-101698420
8	PIPE	DY-103286010		70	LUBE PORT CAP SCREW	DY-100202030
9	WORM SHAFT	DY-103474010		71	DRAG SPRING WASHER	DY-100088010
10	BALL BEARING	DY-104544010		72	CLICK HOLDER	DY-101765010
12	IDLER-S	DY-100019010		73X	STAR DRAG COMPLETE	DY-U02715280
13	WORM SHAFT PIN	DY-100020010		74	CLICKER	DY-101763010
15	WORM SHAFT BUSHING-B	DY-104642010		75	CLICK PLATE	DY-101764010
16	WORM SHAFT WASHER	DY-100539020		76	CLICK PLATE RETAINER	DY-101766011
17	E-RING	DY-100047010		77	HANDLE WASHER	DY-100933010
18	PILLAR	DY-102711010		78X	HANDLE COMPLETE	DY-101806560
19	LEVEL WIND PIN	DY-100464011		79	BALL BEARING	DY-104543010
20	SPACER(OPTIONAL)	DY-100025020		80	HANDLE KNOB COMPLETE	DY-103069140
21	LEVEL WIND NUT	DY-100288021		81	BALL BEARING	DY-104543010
22	FRONT COVER	DY-104643030		82	HANDLE KNOB SCREW	DY-100180010
23	FRONT COVER SCREW	DY-100152010		83	HANDLE KNOB CAP	DY-103957010
24	BALL BEARING	DY-104542010		85	HANDLE NUT	DY-104094100
25	CRANK SHAFT	DY-105264010		86	HANDLE NUT RETAINER	DY-103642020
27	IDLER-L	DY-101938020		87	SCREW	DY-101202020
28	IDLER-L WASHER-B	DY-100647050		88X	SPOOL COMPLETE	DY-105016010
29	BEARING PLATE	DY-104411010		89	BALL BEARING	DY-104540010
30	E-RING	DY-100047010		90	PIN	DY-104399010
31	BEARING PLATE SCREW	DY-100028070		91	BRAKE HOLDER	DY-103532010
34	CLUTCH SPRING	DY-102688010		92	BRAKE SHOE	DY-100522010
35	KICK LEVER	DY-102307011		93	BRAKE SHOE SPRING	DY-100525010
36	KICK LEVER SPRING	DY-104137010		94	MAGNET PLATE	DY-103533063
37	CAM PLATE	DY-104639010		95	MAGNET PLATE SCREW	DY-100526010
38	CAM PLATE SCREW	DY-100035050		96X	PALM SIDE PLATE ASSEMBLY	DY-104646050
39	PINION YOKE	DY-102073010		98	CONTROL DIAL	DY-102917310
40	PINION GEAR	DY-104369010		99	SPOOL COVER ASSEMBLY	DY-U04747010
41	PINION YOKE SPRING	DY-102465010		100	MAGNET HOLDER ASSEMBLY	DY-U04750010
42	RATCHET	DY-100818010		105	SPOOL COVER SCREW	DY-103423010
43	RATCHET WASHER	DY-103772010		106	SPOOL SPACER-A	DY-101850010
44	DRIVE GEAR	DY-102872020		107	BALL BEARING	DY-104541010
45	DRAG WASHER-L	DY-102377011		108	BEARING RETAINER	DY-102976010
46	DRAG WASHER-D1	DY-100057020		117	CLUTCH WASHER	DY-100539030
47	DRAG WASHER-A	DY-100985010		118	CLUTCH SCREW	DY-103013020
48	DRAG WASHER-D2	DY-100986010		121	SLIDE CAM SPRING	DY-102665010
49	SLEEVE WASHER(OPTIONAL)	DY-100086060		122	SLIDE CAM-H	DY-103342010
50	SLEEVE	DY-104537010		123	SLIDE CAM SCREW	DY-100526020
51X	GEAR SIDE PLATE ASSEMBLY	DY-U04644070		124	SLIDE CAM-D	DY-102394010
53	ONE WAY CLUTCH	DY-102090010		125	CLICK SPRING	DY-102002010
54	O-RING	DY-100209020		126	SPOOL COVER SPACER(OPTIONAL)	DY-103567010
55	BALL BEARING	DY-102381010		133	HOOK HOLDER	DY-102898020
56	BEARING RETAINER	DY-104461010		134	HOOK HOLDER WASHER	DY-101168020
57X	CAST CONTROL CAP ASSEMBLY	DY-U03164080		135	HOOK HOLDER SCREW	DY-100246030
58	CLICKER	DY-101674011		136	HOOK HOLDER SPRING	DY-102968011
59	CLICK PLATE	DY-101675011		155	BUSH	DY-104365010
60	CLICK PLATE RETAINER	DY-101543012		166	WASHER (G/METAL E-RING-BALL BEA	DY-100646010
61	TENSION WASHER	DY-100073011		167	GEAR SIDE COVER SCREW-D	DY-100202020
62	SPOOL SPACER-B	DY-100074021				