



E10T and E20T Parts List			
Item	Description	E10T	E20T
1	Drag Knob	1082569	1071514
2	Spool Assy (Includes Items 80-85)	1084809	1084810
5	Main Shaft		1071116
7	Bail Wire Assy	1085160	1085161
9	Trigger		1084782
10	Roller Bearing		1084783
11	Roller		1071161
12	Roller Washer (Metal)		1071127
12A	Roller Washer (Teflon*2)		1084784
13	Bail Arm		1084785
14	Roller Screw		1071126
15	Bail Arm Spring Shaft		1071121
16	Bail Arm Spring		1071122
17	Bail Trip Lever	1082573	1071165
18	Bail Arm Cover Screw		1071124
18A	TRIGGER SCREW		1085090
20	Bail Arm Cover	1071529	1084786
21	A/R Plate Washer		1084787
22	Rotor	1084788	1084789
22A	Rotor Guide		1071166
23	A/R Plate		1084790
23A	A/R Plate Spring Bushing		1084791
24	A/R Plate Spring		1084792
25	Main Body	1084793	1084794
26	Main Body Ball Bearing		1071202
26A	Side Cover Ball Bearing		1071202
27	Handle Retrieve Washer		1071192
28	Handle Nut		1071534
29	A/R Shaft		1071194
30	A/R Switch Spring		1071195
31	A/R Switch		1071535
32	A/R Switch Screw		1079182
42	Oscillation Gear		1071197
44	Slide		1071199
45	Side Cover Screw		1071204
47	Pinion Gear Washer		1084795
48	A/R Control Guide		1084796
49	Handle Assy		1071517
50	Main Shaft Washer		1071115
51	Main Shaft Gear		1071114
52	Side Cover	1084797	1084798
53	Main Gear Washer		1071201
54	Main Gear		1071198
55	Pinion Gear		1071167
56	Pinion Ball Bearing		1071168
58	A/R Control Spring		1084801
59	Ball Bearing Screw		1084803
60	Bail Arm / Weight Screw		1071162
61	Bail Wire Weight Cover	1071531	1084808
63	Hex Nut		1071119
63A	Retained Plate Screw		1071117
63B	Retained Plate		1071118
66	Slide Screw		1071200
67	A/R Plate Screw		1084806
69	Rear Cover		1071532
70	Rear Cover Screw		1079183
80	Spool Retaining Ring		1071108
81	Drag Washer (metal)		1071109
82	Drag Washer (ear)		1071110
83	Front Drag Washer		1071111
84	Drag Washer (2)		1071112
85	Back Drag Washer		1071113