PART No.

PART NAME

PART NAME

PART NAME

PART NAME

3-B 5-L 6-E 7-J 8-D 10-D 12-H

Drag Dog Drag Dog Spring Eccentric

Drag Eared Washer Drag Star Click Spring and Rivets Click Pawl Click Button Bridge Screw Nut Bridge Screw

.30 .02 .04 .14 .08 .08 .12 .03 .05 .05 .05 .05 .05

Free Spool Lever Screw Drag Fiber Washer Free Spool Lever Eccentric Spring

OCEAN CITY "TOPSAIL" (Model A) REEL **Z**0 925

(00 21 89 10 89 21 89 -D 89 -D 89 -D 89 (18-A) 33-F

HOW TO ORDER PARTS FOR YOUR REEL—locate the part desired in the illustration above and note part number. When ordering, state quantity, part number, part name and model letter which you will find on underside of reel stand. Enclose money order, stamps or check. Our minimum charge for one order is \$.25; please add \$.15 on each order for return postage and insurance.

PART No. 33.F 34.F 37.6 38.E 31-20 24-D 25 Left Side Plate Complete With Handle Complete with Part Nos. Drag Lock Washer Gear Sleeve and Lock Pin Part Nos. 5-L, 6-E and 7-J Left Side Plate Ring Handle Knob Rivet Handle Knob Handle Screw 24-D and 25 Main Gear Left Side Oil Cap Spring Left Side Oil Cap Right Side Plate Ring .60 .05 1.25 .40 .40 .12 .04 .75 .16 .16 44-ZW Spool 45 Star To 53.B 57.F 63.J 71.H 72.D 74.C 75.C 40 Left Side Bearing 42-ZE Right Side Plate Stand, For Fresh Water Rod Reel Seat Stand, For Salt Water Rod Reel Seat Worm Right and Left Side Stand Screw Right and Left Side Plate Screw Worm Pawl Cover Screw Worm Pawl Worm Gear Line Guide Star Top Washer Bushing .60 .20 1.25 1.00 .04 .02 .02 .40 .40 .24 .10 .60 PART No. 79.A 80.A 89.9 92 94.D 100.F 102 105 106 107 108 109 111 111 Eccentric Arm Screw Worm Bearing Insert Eccentric Screw Lock Washer Worm Guard Slotted Frame Post Worm Bearing Tension Washer Worm Adjusting Screw Bearing Not Shown) Spool Pinion (Includes Lock Ring Anti-Backlash Control Knob Intermediate Gear Retaining Ring Star Bottom Washer Friction Washer Intermediate Gear Spacer Intermediate Gear PRICE .25 .02 .02 .05 .20 .20 .20 .40 .50 .03 .25 .02

WORM ADJUSTMENT BEARING

LEVEL WIND

ASSEMBLY

QUICK CHANGE LEVEL WIND FEATURE

It's easy to replace the level wind ports on your TopSall reel, or remove the level wind lecture if you wish to do so. With a coin remove the WORM ADJUSTMENT BEARING "A." The LEVEL WIND ASSEMBLY consisting of the Worm, Guide, Pawl, Pawl Cover and Pawl Cover Screw can then be lifted out of position as shown.

When replacing, install LEVEL WIND ASSEMBLY first. Turn handle to make sure worm has engaged slots in gear in left pilate. Install WORM ADJUSTNEM BEARING "A" and screw in with coin to remove end play in worm. BEARING TOO TIGHTLY OR WORM WILL BIND AND MICE THE WITH THE OPPRATION OF REEL. Always be sure to keep LEVEL WIND MSSEMBLY CLEAN AND WELL LUBRICATED WITH OIL When puris show signs of wear replace with new ponts.