



## CLR-266Va PARTS LIST

Key no	Part name	PART NUMBER CLR-266Va	Key no	Part name	PART NUMBER CLR-266Va	Key no	Part name	PART NUMBER CLR-266Va
1	Palm Side Cover Assembly	5K134737	27	Thumb Bar Assembly	6K977206	53	Washer	5K027101
2	Lock Pin	5K134801	28	Kick Lever Spring	5K119001	54	Drive Gear	5K131301
3	Coil Spring	6K974401	29	Kick Lever	5K130601	55	Washer-L	5K039901
4	Magnet Holder Assembly	5K102301	30	Clutch Cam Spring	5K093401	56	Washer-D	5K040001
5	Tap Screw	5K047001	31	Clutch Cam	5K130701	57	Sleeve	6K859205
6	Washer	5K027001	32	Screw	6K787601	59	Ball Bearing	6K582202
7	Ball Bearing	6K474501	33	Screw	6K787601	60	Washer	6K177302
8	Ring	6K468301	34	Clutch	5K093701	61	Leaf Spring Assembly	6K259201
9	Spool Assembly(1Ball Bearing)	5K134479	35	Coil Spring	6K942501	62	Spring Washer	5K027201
10	Screw	6K311311	36	Pinion	5K131001	63	Washer	6K193601
11	Screw	6K311306	37	Ring	6K170701	64	Star Drag	5K1339E5
12	Screw	6K314101	38	Ball Bearing	6K304002	65	Leaf spring	6K161404
13	Retainer	6B339801	39	Gear Side Cover Assembly	5K131569	66	Handle Assembly	5K135325
14	Bush	6K456801	40	O-Ring	6K176501	67	Handle Nut	5K047102
15	Level Wind Assembly	5K238002	41	Washer	5K027001	68	Handle Nut Retainer	5K155106
16	Level Wind Pin	6K256501	42	Collar	6K176905	69	Screw	63508914
17	Washer	6K148801	43	Washer	6K177001	70	Control Dial	5K0446A1
18	Level Wind Nut	6K704403	44	Tension Nut	5K154309	71	Leaf Spring	6K974701
19	Pipe	6K456403	45	Screw	6K311307	72	O-Ring	6K180201
20	Worm Shaft	6K095604	46	Ball Bearing	6K170602	73	Silde Cam-B	5K137901
21	Washer	6E096503	47	Retainer	63201402	74	Coil Spring	5K100501
22	Worm Pinion	6K469301	48	Bearing Plate	5K134901	75	Silde Cam-A	5K284701
23	Retainer	6B339801	49	Screw	63535902	76	SPOOL Cover Assembly	5K124901
24	Hood	5K130810	50	Gear Metal	5K093603	77	washer	6E096501
25	Pillar	6K930403	51	Gear	6K258101			
26	Frame Assembly	5K132804	52	Ratchet	6K893602			