



## CR-266V PARTS LIST

Key no	Part name	PART NUMBER CR-266V	Key no	Part name	PART NUMBER CR-266V	Key no	Part name	PART NUMBER CR-266V
1	Palm Side Cover Assembly	5K283903	27	Thumb Bar Assembly	6K977206	53	Washer	5K027101
2	Lock Pin	5K134801	28	Kick Lever Spring	5K119001	54	Drive Gear	5K131301
3	Coil Spring	6K974401	29	Kick Lever	5K130601	55	Washer-L	5K338401
4	Spool Cover	5K275901	30	Clutch Cam Spring	5K093401	56	Washer-D	5K040001
5	Screw	6K509702	31	Clutch Cam	5K130701	57	Bush	6K859205
6	Washer	6K164605	32	Screw	6K723502	58	Ball Bearing	6K582201
7	Ball Bearing	6K474505	33	Screw	6K723502	59	Washer	6K177302
8	Ring	6K468301	34	Clutch	5K093701	60	Leaf Spring Assembly	6K259201
9	Spool Assembly (1 Ball bearing)	5K279810	35	Coil Spring	6K942501	61	Spring Washer	5K027201
10	Screw	6K311315	36	Pinion	5K131001	62	DU Washer	5K174201
11	Screw	6K311314	37	Ring	6K170701	63	Star Drag	5K1339F1
12	Screw	6K314102	38	Ball Bearing	6K304001	64	Washer	5K199101
13	Retainer	6B339801	39	Gear Side Cover Assembly	5K131565	65	Handle Assembly (4 Ball bearing)	5K284507
14	Bush	6K456801	40	O-Ring	6K176501	66	Handle Nut	5K047102
15	Level Wind Assembly	5K238002	41	Washer	6K164605	67	Handle Nut Retainer	5K005002
16	Level Wind Pin	6K256501	42	Collar	6K176905	68	Screw	63520407
17	Washer	6K148801	43	Washer	6K177001	69	Coil Spring	5K100501
18	Level Wind Nut	6K704403	44	Tension Nut	5K154309	70	Slide Cam-A	5K284701
19	Pipe	6K456403	45	Screw	6K311315	71	Control Dial	5K0446A1
20	Worm Shaft	6K095604	46	Ball Bearing	6K170601	72	Leaf Spring	6K974701
21	Washer	6E096503	47	Retainer	63201402	73	O-Ring	6K180201
22	Worm Pinion	6K469301	48	Bearing Plate	5K134901	74	Slide Cam-B	5K137901
23	Retainer	6B339801	49	Screw	6K398604	75	Washer	6E096501
24	Hood	5K130817	50	Gear Metal	5K093603	76	Magnet Holder Assembly	5K102301
25	Pillar	6K930403	51	Gear	6K258101	77	Tap Screw	5K047001
26	Frame Assembly	5K130334	52	Ratchet	6K893602			