



CW-454DLX PARTS LIST

Key no	Part name	PART NUMBER CW-454DLX	Key no	Part name	PART NUMBER CW-454DLX	Key no	Part name	PART NUMBER CW-454DLX
1	TENSION KNOB	5K326304	39	LEVEL WIND ASSEMBLY	5K212201	76	RETAINER	63201402
2	WASHER	6K709201	40	LEVEL WIND PIN	6K256506	77	BALL BEARING	6K256901
3	WASHER	6K164601	41	WASHER	6K148802	78	BEARING PLATE	5K324501
4	WASHER	6K164605	42	NUT	6K704403	79	SCREW	6K398603
5	CONTROL PLATE	5K201201	44	PIPE	5K323501	80	GEAR METAL	5K324402
6	RING	5K201301	45	BUSH	5K005901	81	RATCHET	5K325001
7	RETAINER	6K394501	46	WASHER	6E096503	82	WASHER	5K325101
8	CLICK PLATE	5K201401	47	RETAINER	6K772101	83	DRIVE GEAR	5K386002
9	CLICK PIN	5K201501	48	WORM SHAFT ASSEMBLY	5K386301	84	WASHER-L1	5K325301
10	COIL SPRING	5K201601	49	PILLAR	5K324601	85	WASHER-D1	5K325401
11	O-RING	6K904901	50	SCREW	63511112	86	WASHER-L2	5K325501
12	SCREW	6K129505	51	FRAME ASSEMBLY	5K329710	87	WASHER-A	5K325601
13	THUMB SCREW	5K326401	52	TAP SCREW	6K395603	88	WASHER-D2	5K325701
14	WASHER	6K204604	53	THUMB BAR	5K323602	89	SLEEVE	6K896725
15	GEAR SIDE COVER ASSEMBLY (ONE WAY CLUTCH)	5K330316	54	CLUTCH LINK	5K324101	90	PIN	5K328501
16	COIL SPRING	5K255501	55	SCREW	6K723504	91	BALL BEARING	6K582205
17	BALL BEARING	6K170604	56	SPOOL ASSEMBLY (1 BALL BEARING)	5K387201	93	WASHER	6K177301
18	RING	6K170701	57	RETAINER	63201402	94	LEAF SPRING ASSEMBLY	6K259201
19	PINION	5K385902	58	BALL BEARING	5K126105	95	SPRING WASHER	5K027201
20	COIL SPRING	5K337001	59	SPOOL PINION	5K385801	96	WASHER	6K193601
21	CLUTCH	5K330201	60	RETAINER	6B339801	97	STAR DRAG ASSEMBLY	5K326518
22	CAM PLATE	5K324201	61	WASHER	6K164605	98	WASHER	5K199101
23	CLUTCH CAM	5K330001	62	SCREW	63535902	99	HANDLE ASSEMBLY	5K390401
24	SCREW	6K723501	63	SPOOL COVER ASSEMBLY	5K331001	105	NUT	5K181805
25	PLATE	5K307101	64	RETAINER	63205901	106	RETAINER	5K005004
26	KICK LEVER	5K329901	65	WASHER	6K164404	107	SCREW	63520413
27	SPRING	5K217002	66	CLICK CLAW	5K215601	108	TENSION KNOB ASSEMBLY	5K403804
28	SPRING	5K218102	67	WASHER	6K148904	109	WASHER	63732702
29	PIN	6K979701	68	CLICK LEVER	5K386801	110	JOINT GEAR-B	5K385001
30	COIL SPRING	6K979802	69	CLICK LEAF SPRING	5K216102	111	WASHER	5K129202
31	STOPPER ASSEMBLY	5K386101	70	SCREW	6K494001	112	RETAINER	63205901
34	SCREW	6K314101	71	COLLAR	5K386901	113	TACOMETER ASSEMBLY	5K126707
35	FRONT SUPPORT	5K330106	72	IDLE GEAR	5K327801	114	COUNTER HOLDER ASSEMBLY	5K279403
36	RETAINER	63205901	73	WASHER	6B924906	115	TAP SCREW	6K053404
37	WASHER	6K161802	74	TAP SCREW	6K787603	116	SCREW	6K053403
38	BUSH	5K028501	75	PALM SIDE COVER	5K386701	117	WORM GEAR	5K386401