



## HS-30B PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
1	92120169	DRAG KNOB ASSY.	26	92120188	LINE ROLLER WASHER	51	92010027	BUSHING
2	92120170	SPOOL ASSY.	27	92120189	LINE ROTOR	52	92120205	SIDE PLATE
3	92120171	DRAG WASHER	28	92010023	BUSHING	53	92030066	SCREW
4	92120172	KEY WASHER	29	92120190	LINE ROLLER WASHER	54	92030067	SCREW
5	92120173	EARED WASHER	30	92120191	BAIL NUT	55	92030068	SCREW
6	92120174	DARG WASHER RETAINER	31	92120192	BAIL WIRE	56	92120206	SIDE PLATE DECORATION
7	92120175	CLICK GEAR WASHER	32	92120193	KEY WASHER	57	92120207	HANDLE ASSY.
8	92120176	CLICK GEAR	33	92030063	SCREW	58	92120208	TRANSMISSION GEAR
9	92120177	MAIN SHAFT	34	92120194	PINION BEARING FIXED PLATE	59	92120209	TRANSMISSION GEAR BUSHING
10	92120178	ROTOR NUT	35	92010024	BALL BEARING	60	92030069	SCREW
11	92120179	KEY WASHER	36	92120195	PINION BEARING FIXED BUSHING	61	92120210	OSCILLATING SLIDER
12	92120180	ROTOR BALANCE WEIGHT	37	92010025	ONE WAY	62	92030070	SCREW
13	92030057	SCREW	38	92120196	SPRING	63	92120211	OSCILLATION SLIDER PLATE
14	92030058	SCREW	39	92120197	PINION GEAR	64	92030071	SCREW
15	92120181	BAIL HOLDER	40	92030064	SCREW	65	92120212	MAIN BODY
16	92030059	SCREW	41	92120198	MAIN BODY DECORATION	66	92120213	CAP
17	92120182	ROTOR	42	92120199	HANDLE SCREW CAP WASHER	67	92030072	SCREW
18	92120183	COMPRESSION SPRING	43	92120200	HANDLE CAP			
19	92120184	BAIL ARM SUPPORT PIN	44	92120201	ANTI-RE LEVER SPRING			
20	92120185	KICK LEVER	45	92120202	ANTI-REVERSE/ANTI-RE LEVER			
21	92120186	BAIL ARM COVER	46	92030065	SCREW			
22	92030060	SCREW	47	92120203	ANTI-REVERSE/ANTI-RE LEVER			
23	92030061	SCREW	48	92010026	BUSHING			
24	92120187	BAIL ARM	49	92120204	DRIVE GEAR			
25	92030062	SCREW	50	92020005	WASHER			