



HS-40B PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
1	92120214	DRAG KNOB ASSY.	26	92120233	LINE ROLLER WASHER	51	92030082	SCREW
2	92120215	SPOOL ASSY.	27	92120234	BAIL NUT	52	92120249	SIDE PLATE DECORATION
3	92120216	DRAG WASHER	28	92120235	BAIL WIRE	53	92120250	HANDLE ASSY.
4	92120217	KEY WASHER	29	92120236	KEY WASHER	54	92120251	TRANSMISSION GEAR
5	92120218	EARED WASHER	30	92030078	SCREW	55	92120252	TRANSMISSION GEAR BUSHING
6	92120219	DARG WASHER RETAINER	31	92120237	PINION BEARING FIXED PLATE	56	92030083	SCREW
7	92120220	CLICK GEAR WASHER	32	92010029	BALL BEARING	57	92120253	OSCILLATING SLIDER
8	92120221	CLICK GEAR	33	92120238	PINION BEARING FIXED BUSHING	58	92030084	SCREW
9	92120222	MAIN SHAFT	34	92010030	ONE WAY	59	92120254	OSCILLATION SLIDER PLATE
10	92120223	ROTOR NUT	35	92120239	SPRING	60	92030085	SCREW
11	92030073	SCREW	36	92120240	PINION GEAR	61	92120255	MAIN BODY
12	92120224	BAIL HOLDER	37	92030079	SCREW	62	92120256	CAP
13	92030074	SCREW	38	92120241	MAIN BODY DECORATION	63	92030086	SCREW
14	92120225	ROTOR	39	92120242	HANDLE SCREW CAP WASHER			
15	92120226	COMPRESSION SPRING	40	92120243	HANDLE CAP			
16	92120227	BAIL ARM SUPPORT PIN	41	92120244	ANTI-RE LEVER SPRING			
17	92120228	KICK LEVER	42	92120245	ANTI-REVERSE/ANTI-RE LEVER			
18	92120229	BAIL ARM COVER	43	92030080	SCREW			
19	92030075	SCREW	44	92120246	ANTI-REVERSE/ANTI-RE LEVER			
20	92030076	SCREW	45	92010031	BUSHING			
21	92120230	BAIL ARM	46	92120247	DRIVE GEAR			
22	92030077	SCREW	47	92020005	WASHER			
23	92120231	LINE ROLLER WASHER	48	92010032	BUSHING			
24	92120232	LINE ROTOR	49	92120248	SIDE PLATE			
25	92010028	BUSHING	50	92030081	SCREW			