



ID - 150 Spare Parts

key no	new part no	old part no	parts name	lot no	key no	new part no	old part no	parts name	lot no
100	4100088	1410000104912	BODY ASSY.		705	47050003	14705001-06	TRANSMISSION GEAR	
105	41050002	14105001-0114	WORM SHAFT BUSHING		706	47060002	14706001-0114	TRANSMISSION GEAR	
117	41170001	14117001-03	NUT		707	47070002	14707001-0114	TRANSMISSION GEAR	3107
200	42000035	1420000104912	HANDLE SIDE PLATE		707	47070003		TRANSMISSION GEAR	
202	42020001	14202001-06	RATCH	3045	709	47090002	14709001-03	TRANSMISSION GEAR BUSHING	
202	42020006	1420200401	RATCH		711	47110012	1471100111003	GUIDE SLIDE BASE ASSY	
206	42060003	14206002-01002	CONTROL PIN CAP		712	47120001	14712001-03001	WORM SHAFT	
220	42200001	14220001-03907	SIDE PLATE HOLDED SCREW		713	47130003	14713001-0170	LINE GUIDE PAWL CAP	
221	42210001	14221001-07	O RING		715	17150008	11715003-06001C	LINE GUIDE PAWL	
222	42220002	14222001-01001	MAIN SIDE PLATE HOLDER	3104	720	47200002	14720001-06001	DRIVE GEAR SHAFT BUSHING	
222	42220005	14222001-01001	MAIN SIDE PLATE HOLDER		800	48000002	14800001-06	CLUTCH SHAFT	
226	42260001	14226001-03001	CONTROL PIN		801	48010001	14801001-06	CLUTCH SHAFT SPRING	
300	43000007	14300001-04912	SIDE PLATE		802	48020004	14802001-0170	CLUTCH BAR	
302	43020002	14302001-03	WASHER		803	48030002	14803001-06	CLUTCH BAR SUPPORT	
304	13040012		CLICK PAWL		804	48040001	14804001-06	CLUTCH SLIDER	
400	44000028	1440000104907	SPOOL ASSY.		805	48050002	14805001-0114	PINION GEAR YOKE	
500	45000016	1450000204003	HANDLE ARM ASSY		806	48060001	14806001-06	YOKE SPRING	
516	45160006	14516001-0A913	HANDLE NUT RETAINER		807	48070001	14807001-0114	YOKE BRAKED PLATE	
600	46000006	14600001-04907	CAST CONTROL CAP		808	48080002	14808001-06001	YOKE BRAKED PLATE SPRING	
601	46010002	14601001-16	COMPRESSION SPRING		809	48090003	14809001-0170	CLUTCH BAR WASHER	
603	46030002	14603001-01	O RING		810	48100002	14810001-01001	CLUTCH SHAFT BUSHING	
604	46040005	14604003-01001	CONTROL CLICK		812	48120001	14812001-06	BRAKED PLATE HOLDER	
604-1	16040002	11604002-01001	LEVER DRAG CLICK PAWL		9103	0910163	01101612-62	BALL BEARING	3047
608	46080001	14608001-06	RETAINER		9103	0910170	01101612-63	BALL BEARING	
609	16090009	11609003-06002	DRAG SPRING WASHER		9104	0910015	01050825-61	BALL BEARING	
609	46090009	14609003-05907	WASHER	3022	9106	0910005	01031004-601	BALL BEARING	
609-1	46090011	14609004-05907	WASHER	3030	9107	0910244	01051104-611	BALL BEARING	
610	16100018	11610004-006A	DRAG WASHER		9201	0920105	025.1x10.5x.2-6	WASHER	
610-1	16100007	11610003-006	DRAG WASHER		9202	0920118	025x6.5x0.2-3	WASHER	
611	16110006	11611005-061	EARED WASHER		9203	0920081	023x5x0.2-1	WASHER	
612	16120028	11612007-06002	KEY WASHER		9204	0920292	025.9x12x0.2-6	WASHER	
612-1	46120002	14612001-06001	KEY WASHER		9205	0920014	0210x23.8.6-6	WASHER	
615	16150084	11615010-04002C	STAR DARG KNOB		9207	0920066	022x4.9x0.2-3	WASHER	
618	46180001	14618001-07	WASHER		9302	0930684	03412.3x10.5-617	SCREW	
619	46190002	14619001-1	WASHER		9303	0930131	03212.6x6-61	SCREW	
700	47000005	14700002-032	DRIVE GEAR		9306	0930429	03122x5-61	SCREW	
701	47010005	14701002-03002	DRIVE GEAR SHAFT		9402	29000002	12900002-06	E RETAINER	
702	47020003	1470200103002	PINION GEAR		9403	49000001	14900001-06	E RETAINER	
703	47030007	14703001-03001	WORM SHAFT GUARD		9504	19010001	11901001-06	C RETAINER	
704	47040007	14704001-16	LINE GUIDE SUPPORT BAR						