



Integrity 10/11b PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
100	31000063	Body assy. (with main shaft)	409	34090001	Spool retainer spring
102	31020046	Reel foot	410	34100018	Spool cover assy.
111	31110006	Click pawl	413	34130009	Counter balance
117	31170002	Holder plate	416	34160009	Bearing bushing
209	32090001	Waveform washer	420	34200001	Handle knob bushing
300	33000118	Drag knob	910	0910170	One way bearing
304	33040028	Click pawl	920	0920033	Washer
310	33100042	Cord drag washer	920	0920063	Washer
310-1	33100043	Cord drag washer	920	0920149	Washer
315	33150006	Disk break	930	0930009	Screw
321	33210006	Main shaft bushing	930	0930011	Screw
340	33400001	Drag washer retainer	930	0930077	Screw
400	34000404	Spool assy.	930	0930083	Screw
400-1	34000390	Spool	930	0930084	Screw
404	34040031	Handle knob	930	0930117	Screw
405	34050008	Handle knob screw	930	09301143	Screw
408	34080014	Spool retainer			

309OKM01702101