



MK3000LS PARTS LIST

INDEX	KEY NO	PARTS NO	PARTS NAME	INDEX	KEY NO	PARTS NO	PARTS NAME	INDEX	KEY NO	PARTS NO	PARTS NAME
1	100	21004480	Main body	34	600	26004314	Drag knob assy.	67	0910	0910605	Bearing
2	101	21010009	Logo	35	610	26100131	Drag washer	68	0910	0910638	Bearing
3	105	21050055	Pinion B.B fixed plate	36	810	26100148	Drag washer	69	0920	0920207	Washer
4	116	21160010	Oneway bearing hold plate assy.	37	811	26110051	Eared washer	70	0920	0920208	Washer
5	117	21170007	B.B inner ring	38	812	26120153	Key washer	71	0920	0920209	Washer
6	118	21180032	Main body ramp	39	812	26120140	Key washer	72	0920	0920415	Washer
7	200	22004553	Side plate	40	700	27000427	Drive gear assy.	73	0920	0920566	Washer
8	201	12010061	Anti-re pawl	41	702	27020658	Pinion gear	74	0920	0920580	Washer
9	201	22010685	Side plate	42	703	27030032	Pinion gear bushing	75	0920	0920596	Washer
10	202	12020041	Ratchet	43	705	27050202	Transmission gear	76	0920	0920603	Washer
11	300	23005118	Rotor	44	708	27080165	Oscillatory slider	77	0920	09201014	Washer
12	301	23012235	Bail arm	45	711	27110010	Transmission plate pin bushing	78	0920	09201016	Washer
13	304	23042755	Bail arm cover	46	718	27180799	Main shaft assy.	79	0920	09201019	Washer
14	305	23050213	Kick lever	47	719	27190038	Click gear	80	0920	09201026	Washer
15	307	23073037	Ball holder	48	721	27210022	Main shaft bushing	81	0930	0930089	Screw
16	309	23090052	Bail arm support bar	49	721	27210023	Main shaft bushing	82	0930	0930511	Screw
17	309	23090053	Bail arm slider	50	725	27250029	Transmission gear bushing	83	0930	09301065	Screw
18	310	23100084	Compression spring	51	733	27330011	Line guide support bar	84	0930	09301395	Screw
19	310	23100086	Compression spring	52	733	27330012	Line guide support bar	85	0930	09301408	Screw
20	313	23131709	Ball	53	736	27360001	Line guide support bar bushing	86	0930	09301412	Screw
21	314	23140239	Ball nut	54	806	28060007	Anti-re pawl bushing	87	0930	09301416	Screw
22	315	23150083	Line roller assy.	55	813	28130002	Click pawl spring	88	0930	09301422	Screw
23	318	23180034	Rotor nut	56	901	18010028	"C" retainer	89	0930	09301424	Screw
24	329	23290010	Rotor nut cap	57	901	18010029	"C" retainer	90	0930	09301461	Screw
25	332	23320001	Shaft bushing	58	901	18010030	"C" retainer	91	0940	0940004	O-ring
26	332	23320002	Support bar bushing	59	906	29060002	Waterproof pad	92	0940	0940008	O-ring
27	400	240015298	Spool	60	906	29060004	Waterproof pad	93	0940	0940014	O-ring
28	400	240015459	Spool Assy.	61	906	29060005	Waterproof pad	94	0940	0940021	O-ring
29	412	24120058	Spool bushing	62	906	29060006	Waterproof pad	95	0940	0940032	O-ring
30	416	24160006	Waterproof retainer holder	63	906	29060007	Waterproof pad	96	0940	0940037	O-ring
31	419	24190056	Spool retainer	64	906	29060008	Waterproof pad	97	0940	0940059	O-ring
32	500	25006108	Handle arm assy.	65	0910	0910603	Bearing	98	0940	0940074	O-ring
33	513	25130855	Handle arm cap	66	0910	0910604	Bearing				

2090KM10511101