



### NMS-4000 PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
100	21004670	Main body	702	27020516	Pinion gear
105	21050027	Pinion bearing fixed plate	705	27050198	Transmission gear
105-1	21056613	Pinion bearing fixed bushing	708	27080057	Oscillating slider
105-2	21056578	Pinion bearing fixed bushing	716	27160016	Oscillation slider plate
108	21087141	Cap	718	27180795	Main shaft
200	22004752	Side plate	719	27190025	Click gear
300	23005319	Rotor	722	27220009	Click gear washer
301	23012423	Bail arm	800	28000437	Anti-reverse/anti-re lever
304	23043575	Bail arm cover	800-1	28000438	Anti-reverse/anti-re lever
305	23050230	Kick lever	801	28010024	Anti-re lever spring
307	23071987	Bail holder	0910633	0910633	Ball bearing
309	23090002	Bail arm slider	0910039	0910039	Ball bearing
310	23100005	Compression spring	0910013	0910013	Ball bearing
313	23131831	Bail wire assy.	0910049	0910049	Ball bearing
315	23150086	Line roller	0910091	0910091	Ball bearing
316	23160014	Line roller bushing	0910335	0910335	Ball bearing
317	23170024	Line roller washer	0920590	0920590	Washer
318	23180006	Rotor nut	0920149	0920149	Washer
400	240016927	Spool assy.	0920151	0920151	Washer
405	24050042	Drag washer retainer	0920235	0920235	Washer
407	24070009	Extension spring	0920540	0920540	Washer
412	24120054	Spool bushing	09301262	09301262	Screw
500	25007026	Handle assy.	0930058	0930058	Screw
513	25130904	Handle cap	0930541	0930541	Screw
515	25150002	Handle screw cap washer	09301580	09301580	Screw
600	26004718	Drag knob assy.	09301538	09301538	Screw
610	26100011	Drag washer	0930471	0930471	Screw
611	26110005	Eared washer	0930209	0930209	Screw
612	26120006	Key washer	0930643	0930643	Screw
612-1	26120054	Key washer	0930431	0930431	Screw
700	27000240	Drive gear	0930838	0930838	Screw