



NS-20-CL PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
100	21003953	MAIN BODY	700	27000318	DRIVE GEAR
105	21050012	PINION BEARING FIXED BUSHING	702	27020907	PINION GEAR
105-1	21056571	PINION BEARING FIXED PLATE	705	27050099	TRANSMISSION GEAR
108	21081336	CAP	708	27080096	OSCILLATING SLIDER
200	22003342	SIDE PLATE	716	27160008	OSCILLATION SLIDER PLATE
201	22010399	SIDE PLATE DECORATION	718	27180702	MAIN SHAFT
201-1	22010400	MAIN BODY DECORATION	719	27190025	CLICK GEAR
201-2	22010013	SIDE PLATE DECORATION	722	27220009	CLICK GEAR WASHER
201-3	22010015	MAIN BODY DECORATION	800-1	28000324	ANTI-REVERSE/ANTI-RE LEVER
300	23005094	ROTOR	800	28000332	ANTI-REVERSE/ANTI-RE LEVER
301	23011819	BAIL ARM	801	28010024	ANTI-RE LEVER SPRING
304	23042508	BAIL ARM COVER	0910039	0910039	BALL BEARING
305	23050141	KICK LEVER	0910091	0910091	BALL BEARING
306	23060955	BAIL HOLDER COVER	0910049	0910049	BALL BEARING
307	23071461	BAIL HOLDER	0910648	0910648	BALL BEARING
309	23090002	BAIL ARM SLIDER	0920154	0920154	WASHER
310	23100005	COMPRESSION SPRING	0920310	0920310	WASHER
313	23131451	BAIL WIRE ASSY.	0920376	0920376	WASHER
315	23150010	LINE ROLLER	0930043	0930043	SCREW
316	23160002	LINE ROLLER BUSHING	09301253	09301253	SCREW
318	23180005	ROTOR NUT	09301463	09301463	SCREW
400	240014321	SPOOL ASSY.	09301264	09301264	SCREW
405	24050042	DRAG WASHER RETAINER	0930306	0930306	SCREW
407	24070009	EXTENSION SPRING	0930428	0930428	SCREW
500	25005887	HANDLE ASSY.	0930432	0930432	SCREW
504	25040004	HANDLE SCREW CAP WASHER	0930470	0930470	SCREW
513	25130788	HANDLE CAP	0930539	0930539	SCREW
600	26002816	DRAG KNOB ASSY.	0930543	0930543	SCREW
610	26100015	DRAG WASHER	0930624	0930624	SCREW
611	26110004	EARED WASHER	0930662	0930662	SCREW
612	26120004	KEY WASHER	0930836	0930836	SCREW
612-3	26120032	KEY WASHER			