



### RTX-40s PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
100	21003989	Main body	700	27002036	Drive gear
105	21050027	Pinion bearing fixed plate	702	27020757	Pinion gear
105-1	21056578	Pin. bearing fixed plate	705	27050150	Transmission gear
108	21081457	Cap	708	27080168	Oscillating slider
200	22004319	Side plate	716	27160007	Oscillation slider plate
201	22010296	Main body decoration	718	27180735	Main shaft
201-1	22010297	Side plate decoration	719	27190025	Click gear
201-2	22010479	Main body decoration	722	27220009	Click gear washer
201-3	22010480	Side plate decoration	725	27250020	Transmission gear bushing
300	23004851	Rotor	800	28000241	Anti-reverse/anti-re lever
301	23011939	Bail arm	800-1	28000322	Anti-reverse/anti-re lever
304	23042608	Bail arm cover	801	28010024	Anti-re lever spring
305	23050146	Kick lever	0910041	0910041	Ball bearing
307	23071542	Bail holder	0910051	0910051	Ball bearing
309	23090002	Bail arm slider	0910093	0910093	Ball bearing
310	23100005	Compression spring	0910335	0910335	Ball bearing
313	23131574	Bail wire assy.	0910221	0910221	Ball bearing
315	23150086	Line roller	0910526	0910526	Ball bearing
316	23160014	Line roller bushing	0920154	0920154	Washer
317	23170014	Line rollerwasher	0920590	0920590	Washer
318	23180005	Rotor nut	0920376	0920376	Washer
400	240014357	Spool assy.	0920540	0920540	Washer
405	24050042	Drag washer retainer	0920237	0920237	Washer
407	24070009	Extension spring	09301377	09301377	Screw
412	24120038	Spool bushing	09301379	09301379	Screw
413	24130009	Waterproof retainer	09301380	09301380	Screw
500	25005663	Handle assy.	0930171	0930171	Screw
504	25040004	Handle screw cap washer	0930209	0930209	Screw
513	25130830	Handle cap	0930438	0930438	Screw
600	26003199	Drag knob assy.	0930471	0930471	Screw
610	26100011	Drag washer	0930575	0930575	Screw
611	26110005	Eared washer	0930639	0930639	Screw
612	26120006	Key washer	0930643	0930643	Screw
612-1	26120054	Key washer	09301374	09301374	Screw
612-2	26120007	Key washer			