



T - 50L Spare Parts

key no	new part no	old part no	parts name	lot no	key no	new part no	old part no	parts name	lot no
100	11000107	11100008101831A	MAIN BODY ASSY.		701	17010007	11701002-26	DRIVE GEAR SHAFT	
102	11020002	11102002-06907	BODY FOOT		702	17020011	11702003-06002	PINION GEAR	
105	11050004	11105002-01	WORM SHAFT BUSHING		703	17030002	11703003-061	LEVEL WORM GUARD	
105-1	11050005	11105002-011	WORM SHAFT BUSHING		704	17040006	11704003-03907	WORM GUIDE SUPPORT BAR	
108	11080003	11108002-067	HANGER		707	17070003	11707002-01	MEDIUM TRANSMISSION GEAR	
200	12000157	1120001101831	HANDLE SIDE PLATE ASSY.		708	17080001	11708002-01	TRANSMISSION GEAR	
201	12010002	11201002-05	ANTI-RE PAWL		709	17090001	11709001-03	TRANSMISSION GEAR BUSH	
202	12020002	11202002-06	ANTI-RE RATCH		709	17090002	11709001-03001	BUSHING	
205	12050006	11205002-0611	DECORATION PLATE		710	17100008	11710004106	LINE GUIDE ASSY.	
206	12060002	11206001-03001	LEVER DRAG STOPPER CAP		712	17120013	11712004103907	WORM SHAFT ASSY.	
207	12070001	11207001-06907	HOLD PLATE		713	17130002	11713001-03907	PAWL CAP	
208	12080002	11208001-06002	SIDE PLATE COVER		715	17150001	11715002-06	LINE GUIDE PAWL	
216	12160001	11216001-06	ANTI-RE PAWL SPRING		716	17160002	11716002-07	OIL SEAL	
300	13000033	11300003101832	SIDE PLATE ASSY.		717	17170004	11717003-06	MAIN SHAFT PIN	
303	13030004	11303003-03907	CLICK BUTTON		718	17180010	11718003-06	MAIN SHAFT	3017
304	13040001	11304003-06	CLICK PAWL		718	17180012	11718003-16001	MAIN SHAFT	
305	13050002	11305001-01001	CLICK PAWL SPRING		9101	0910097	01081605-6	BALL BEARING	
400	14000067	11400006-049091	SPOOL		9104	0910174	01102005-6	BALL BEARING	
401	14010009		SPOOL CLICK GEAR	2930	9105	0910030	01061505-6	BALL BEARING	
401	14010008	11401002-02003	SPOOL CLICK GEAR		913	19130001	11913001-05907	SPRING WASHER	
403	14030001	11403001-06	LOCATING PIN		9201	0920169	029.1x13x0.3-6	WASHER	
404	14040003	11404002-03001	PRESSURE LOAD BLOCK		9202	0920168	029.1x13x0.2-6	WASHER	
405	14050006	11405005-01	SPOOL COVER		9203	0920009	0210x15x0.5-6	WASHER	
500	15000058		HANDLE ARM	2941	9204	0920133	026x13x0.4-8	WASHER	
500	15000061	11500009165	HANDLE ASSY		9206	0920085	024.05x10x0.2-8	WASHER	
501	15010005	11501005-06	HANDLE NUT		9207	0920067	022x4.9x0.3-3	WASHER	
513	15130008	11513006-063	HANDLE COVER	2941	9208	0920005	0210.1x23.8x1-9	WASHER	
513	15130009	11513006-0631	HANDLE COVER		9208-1	0920002	0210.1x23.8x1-9	WASHER	
515	15150001	11515001-03907	HANDLE NUT SCREW		9210	0920361	026.5x9x0.25-7	WASHER	
516	15160020	11516006-06	HANDLE NUT RETAINER		9217	0920171	029.1x18x0.3-1	WASHER	
600	16000027	11600013-03907	CAST CONTROL CAP		9213	0920069	023.0x7x0.4-6	WASHER	
601	16010001	11601001-06	COMPRESSION SPRING		9301	0930184	03224x21-61	SCREW	
602	16020002	11602001-05001	ADJUST BLOCK	3017	9302	0930317	03423x6-61	SCREW	
602	16020006	11602001-15001	ADJUST BLOCK		9305	0930058	03122.6x8-61	SCREW	
603	16030001	11603001-07	O RING		9306	0930176	03222.6x9.5-61	SCREW	
605	16050012	11605002-01831	LEVEL DRAG		9309	0930186	03224x24-61	SCREW	
606	16060001	11606001-06	CLICK PAWL		9310	0930167	03214x26-617	SCREW	
607	16070012		PINION GUARD	2914	9312	0930220	03327.5x2.6x7.5-61	SCREW	
607	16070010	11607004-02003	PINION GUARD		9313	0930219	03327.52.6x6-61	SCREW	
608	16080002	11608002-06	DRAG WASHER RETAINER		9314	0930129	03212.6x5.5-617	SCREW	
611	16110004	11611004-00	DRAG WASHER		9318	0930307	03422x5.5-61	SCREW	
612	16120007	11612004-061	KEY WASHER		9319	0930196	03312x5-61	SCREW	
613	16130003	11613002-06	COMPRESSION SPRING		9321	0930223	034111.5x4x8-61	SCREW	
700	17000011	1170000203002	DRIVE GEAR ASSY		9404	19000001	11900001-06	E RETAINER	