



TT-266W PARTS LIST

Key no	Part name	PART NUMBER TT-266W	Key no	Part name	PART NUMBER TT-266W	Key no	Part name	PART NUMBER TT-266W
1	Palm Side Cover Assembly	5K134707	27	Thumb Bar Assembly	6K977206	53	Washer-L	5K039901
2	Lock Pin	5K134801	28	Kick Lever Spring	5K119001	54	Washer-D	5K040001
3	Coil Spring	6K974401	29	Kick Lever	5K130601	55	Sleeve	6K859201
4	Magnet Holder Assembly	5K102301	30	Clutch Cam Spring	5K093401	56	Washer	6K177302
5	Tap Screw	5K047001	31	Clutch Cam	5K130701	57	Ball Bearing	6K582201
6	Washer	5K027001	32	Screw	6K723502	58	Washer	6K177302
7	Ball Bearing	6K758901	33	Screw	6K723502	59	Leaf Spring Assembly	6K259201
8	Ring	6K468301	34	Clutch	5K093701	60	Spring Washer	5K027201
9	Spool Assembly	5K134407	35	Coil Spring	6K942501	61	Washer	6k193601
10	Screw	6K311311	36	Pinion	5K153801	62	Star Drag	5K133804
11	Screw	6K311306	37	Gear Side Cover Assembly	5K131511	63	Leaf Spring	6K161404
12	Screw	6K314101	38	O-Ring	6K176501	64	Handle Assembly	5K135305
13	Retainer	6B339801	39	Bearing	5K155801	65	Handle Nut	6K178309
14	Bush	6K456801	40	Washer	5K027001	66	Handle Nut Cap	6K311004
15	Level Wind Assembly	5K238002	41	Washer	6K181101	67	Screw	63511805
16	Level Wind Pin	6K256501	42	Tension Nut	6K181202	68	Control Dial	5K132406
17	Washer	6K148801	43	Screw	6K311306	69	Leaf Spring	6K974701
18	Level Wind Nut	6K704403	44	Ball Bearing	6K256901	70	O-Ring	6K180201
19	Pipe	6K456403	45	Retainer	63201402	71	Slide Cam-B	5K132701
20	Worm Shaft	5K095605	46	Bearing Plate	5K134901	72	Coil Spring	5K100501
21	Washer	6E096503	47	Screw	6K398604	73	Slide Cam-A	5K096201
22	Worm Pinion	6K469301	48	Gear Metal	5K093603	74	Spool Cover	5K124901
23	Retainer	6B339801	49	Gear	6K258101	75	Screw	5K047001
24	Hood	5K130801	50	Ratchet	6K893602	76	Washer	6E096503
25	Pillar	6K930401	51	Washer	5K027101			
26	Frame Assembly	5K132803	52	Drive Gear	5K131301			