



TU-50 PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
100	21003376	Main body	702	27020026	Pinion gear
102	21020002	Bushing	705	27050031	Transmission gear
200	22003238	Side plate	708	27080033	Oscillating slider
300	23006973	Rotor	718	27180124	Main shaft
301	23012189	Bail arm	719	27190001	Click gear
304	23043239	Bail arm cover	722	27220012	Click gear washer
305	23050045	Kick lever	725	27250020	Transmission gear bushing
307	23070152	Bail holder	725-1	27250002	Transmission gear bushing
309	23090029	Bail arm slider	800	28000120	Anti-reverse/anti-re lever
309-1	23090018	Bail arm support pin	801	28010006	Anti-re lever spring
310	23100017	Compression spring	804	28040033	Anti-re lever pin
313	23131714	Bail wire assy.	808	28080047	Ratchet
315	23150075	Line roller	809	28090018	Silent spring
316	23160011	Bushing	0910096	0910096	Ball bearing
317	23170010	Line rollerwasher	0920431	0920431	Washer
318	23180001	Rotor nut	0920376	0920376	Washer
400	24007908	Spool assy.	0920589	0920589	Washer
405	24050001	Drag washer retainer	09301014	09301014	Screw
500	25009498	Handle assy	0920150	0920150	Washer
513	25130503	Handle cap	0920246	0920246	Washer
514	25140003	Handle screw	0930043	0930043	Screw
515	25150002	Handle screw cap washer	0930470	0930470	Screw
600	26009892	Drag knob assy.	09301273	09301273	Screw
610	26100011	Drag washer	0930638	0930638	Screw
611	26110037	Eared washer	0930300	0930300	Screw
612	26120003	Key washer	0930649	0930649	Screw
700	27000078	Drive gear	0930808	0930808	Screw

209OKA02076503