



TU-80-CL PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
100	21003377	Main body	702	27020862	Pinion gear
102	21020001	Bushing	705	27050035	Transmission gear
200	22003239	Side plate	708	27080026	Oscillating slider
300	23002060	Rotor	718	27180183	Main shaft
301	23010737	Bail arm	719	27190005	Click gear
304	23043240	Bail arm cover	722	27220014	Click gear washer
305	23050056	Kick lever	722-1	27220036	Click gear washer
307	23070637	Bail holder	725	27250019	Transmission gear bushing
309	23090029	Bail arm slider	800	28000010	Anti-reverse/anti-re lever
309-1	23090018	Bail arm support pin	801	28010050	Anti-re lever spring
310	23100038	Compression spring	804	28040007	Anti-re lever pin
313	23131430	Bail wire assy.	805	28050005	Anti-re pawl spring
315	23150010	Line roller	808	28080008	Ratchet
316	23160002	Line roller bushing	809	28090037	Silent spring
318	23180003	Rotor nut	0910182	0910182	Ball bearing
400	240010076	Spool assy.	0920009	0920009	Washer
405	24050042	Drag washer retainer	0920170	0920170	Washer
412-1	24120048	Spool bushing	0920169	0920169	Washer
500	25009497	Handle assy	0930451	0930451	Screw
513	25130504	Handle cap	0930565	0930565	Screw
514	25140007	Handle screw	0930496	0930496	Screw
515	25150005	Handle screw cap washer	09301273	09301273	Screw
600	26003486	Drag knob assy.	0930654	0930654	Screw
610	26100011	Drag washer	0930300	0930300	Screw
611	26110043	Eared washer	0930215	0930215	Screw
612	26120023	Key washer	0930808	0930808	Screw
700	27000104	Drive gear	0930677	0930677	Screw