



FS-10-CL PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
100	21000459	MAIN BODY	702	27020050	PINION GEAR
102	21020004	DRIVE GEAR BUSHING	710	27100002	TRANSMISSION PLATE
200	22000615	SIDE PLATE	711	27110008	TRANSMISSION PLATE PIN
300	23000977	ROTOR	718	27180087	MAIN SHAFT
301	23010141	BAIL ARM	719	27190007	CLICK GEAR
302	23020015	BAIL ARM SPRING	722	27220016	CLICK GEAR WASHER
304	23040184	BAIL ARM COVER	800	28000020	ANTI-REVERSE/ANTI-RE LEVER
305	23050008	KICK LEVER	801	28010006	ANTI-RE LEVER SPRING
306	23060099	BAIL HOLDER COVER	804	28040009	ANTI-RE LEVER PIN
307	23073888	BAIL HOLDER	805	28050008	ANTI-RE PAWL SPRING
313	23130104	BAIL WIRE ASSY.	806	28060002	ANTI-RE PAWL BUSHING
315	23150003	LINE ROLLER	808	28080004	RATCHET
317	23170002	LINE ROLLERWASHER	809	28090005	SILENT SPRING
318	23180005	ROTOR NUT	0910049	0910049	BALL BEARING
400	24001930	SPOOL ASSY.	0920237	0920237	WASHER
405	24050004	DARG WASHER RETAINER	0920310	0920310	WASHER
500	25002699	HANDLE ASSY.	0920376	0920376	WASHER
513	25130116	HANDLE CAP	09301261	09301261	SCREW
515	25150002	HANDLE SCREW CAP WASHER	0930437	0930437	SCREW
600	26004012	DRAG KNOB ASSY.	0930417	0930417	SCREW
610	26100036	DRAG WASHER	0930654	0930654	SCREW
611	26110013	EARED WASHER	0930306	0930306	SCREW
612	26120010	KEY WASHER	0930829	0930829	SCREW
700	27000015	DRIVE GEAR			